 


**W** Walker  
Edison  
furniture company

Item #: W60C73-MT  
Assembly Instructions

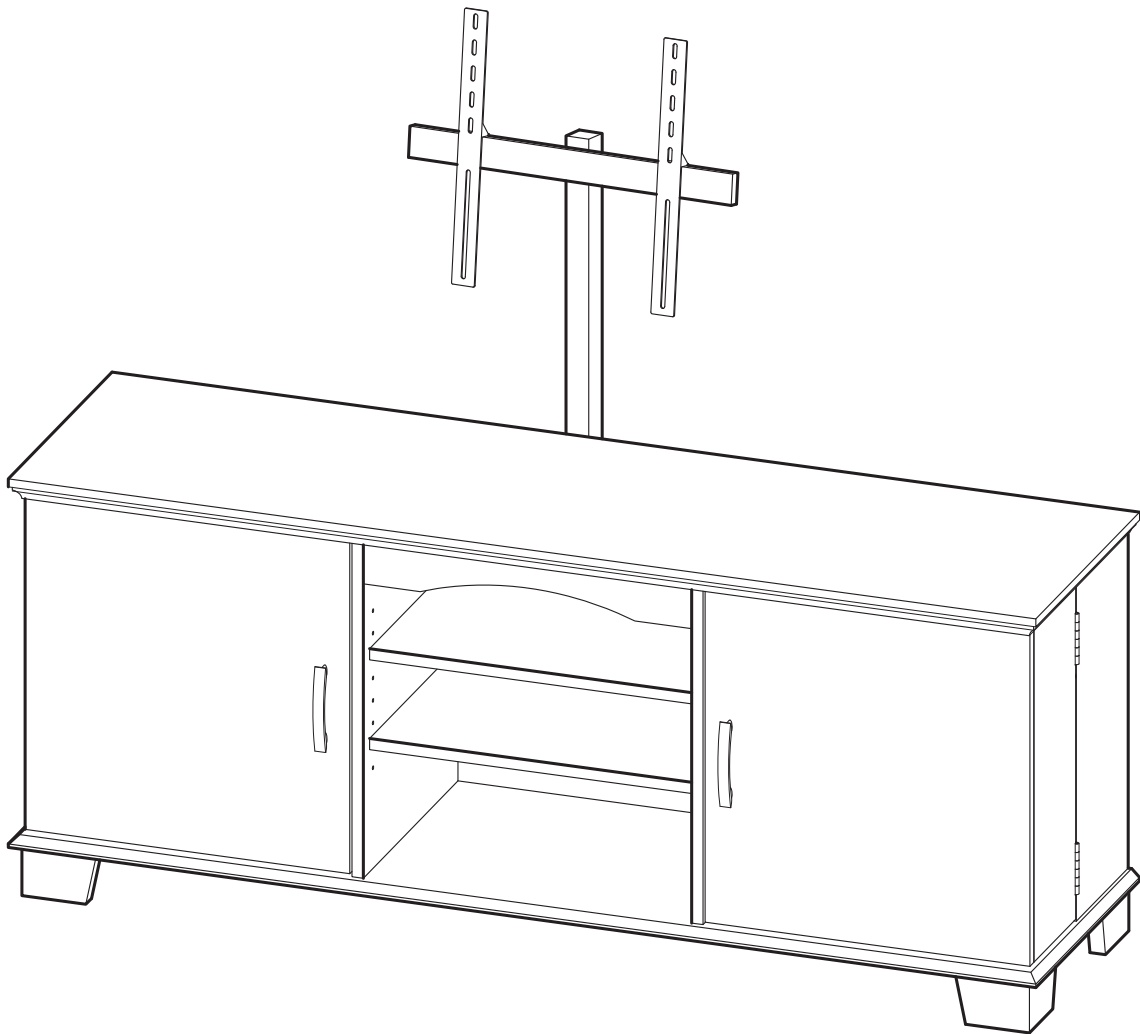


*For our most current instructions, to request missing, lost or broken parts, or for any other Customer Service issues, please visit our website at [www.walkeredison.com](http://www.walkeredison.com) or call us at 877-207-5906.*


Revised 02/2012

# General Assembly Guidelines

 - I. Insure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to insure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main types of hardware used to assemble this product are wood dowels, cam bolts and locks, bolts and screws.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

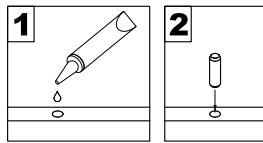

 
In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

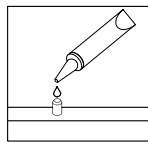

  
- VI. A Phillips head screwdriver is required for the assembly of this product.





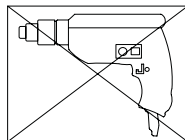

 


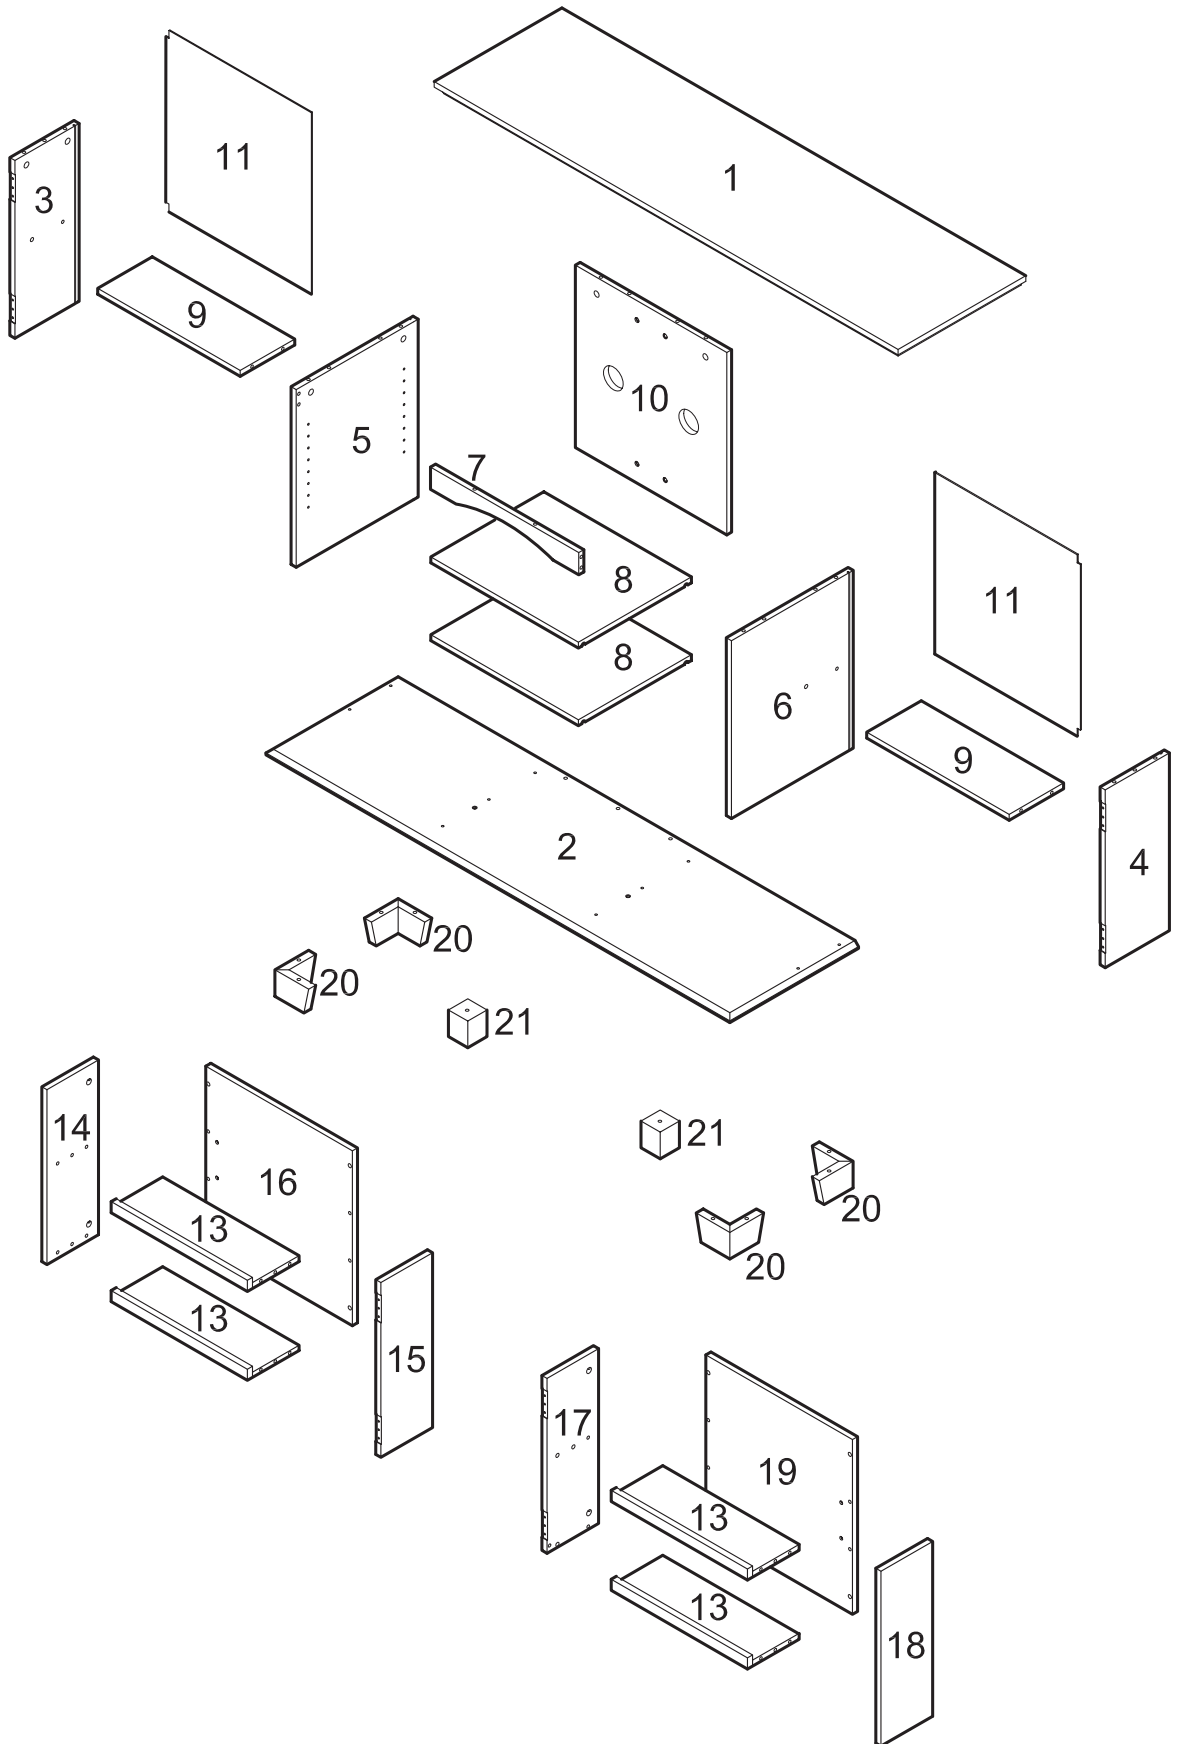











- VII. Power tools should not be used to assemble this product.



# Parts List




 

 
# Hardware List

 


A			Cam lock	32 pcs
B			Cam bolt	32 pcs
C		Ø8x30mm	Wood dowel	48 pcs
D			Glue tube	3 pcs
E		Ø6x50mm	Bolt	15 pcs
F			Wrench	1 pc
G			Door stopper	2 pcs
H		Ø3x12mm	Screw	4 pcs
I			Shelf support pin	8 pcs
J			Door stopper plate	2 pcs
K		Ø3x12mm	Screw	2 pcs
L			Door hinge	4 pcs
M		Ø4x20mm	Screw	24 pcs
N		Ø4x15mm	Screw	8 pcs
P			Handle	2 pcs
Q		Ø4x22mm	Bolt	4 pcs
R		Ø3x17mm	Screw	8 pcs
S			Plastic wedge	8 pcs
T		Ø25mm	Sticker	32 pcs

    *The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*
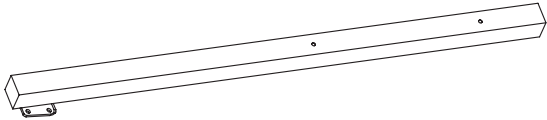
## TV Mounting Parts List


a		1 pc
b		1 pc
c		2 pcs
d		2 pcs
 
## TV Mounting Hardware List

e		1/4"*3/4"	Bolt	10 pcs
f		Ø16mm	Washer	10 pcs
g		Ø4x25mm	Adjustment knob	2 pcs
h		M4	Wrench	1 pc


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

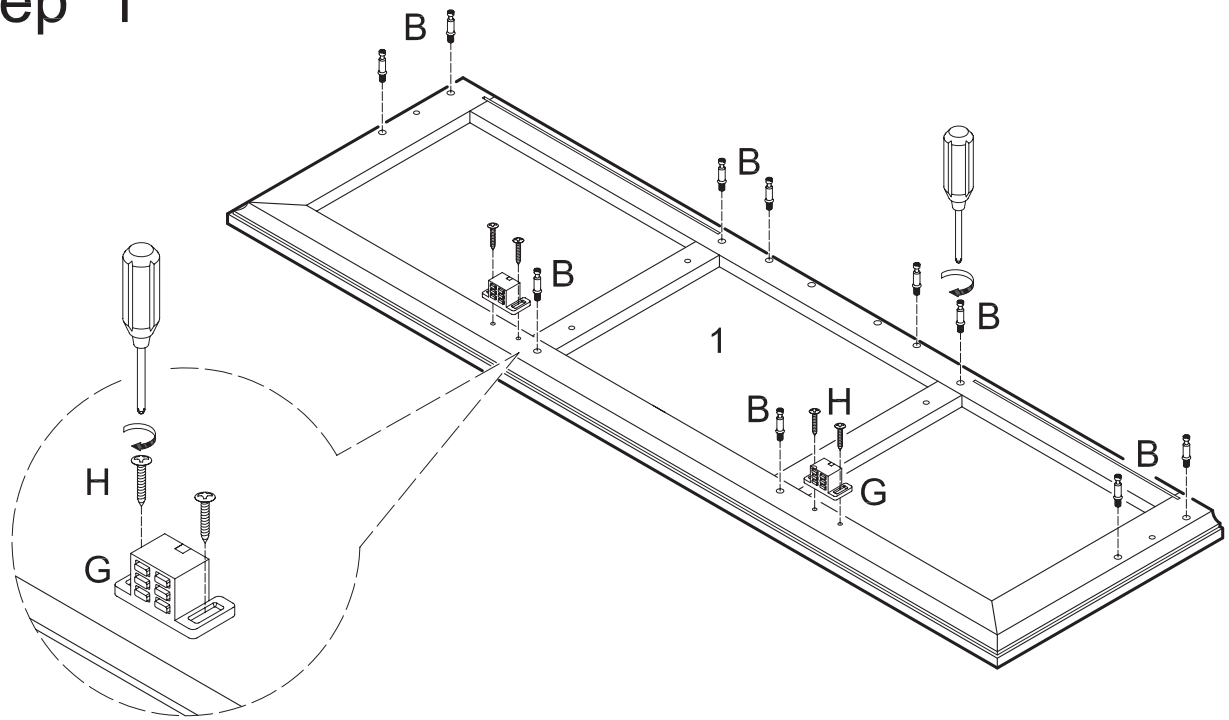 


Screw cam bolts (B) into stand top (1). Attach door stoppers (G) to stand top (1) using screws (H).

# Step 2

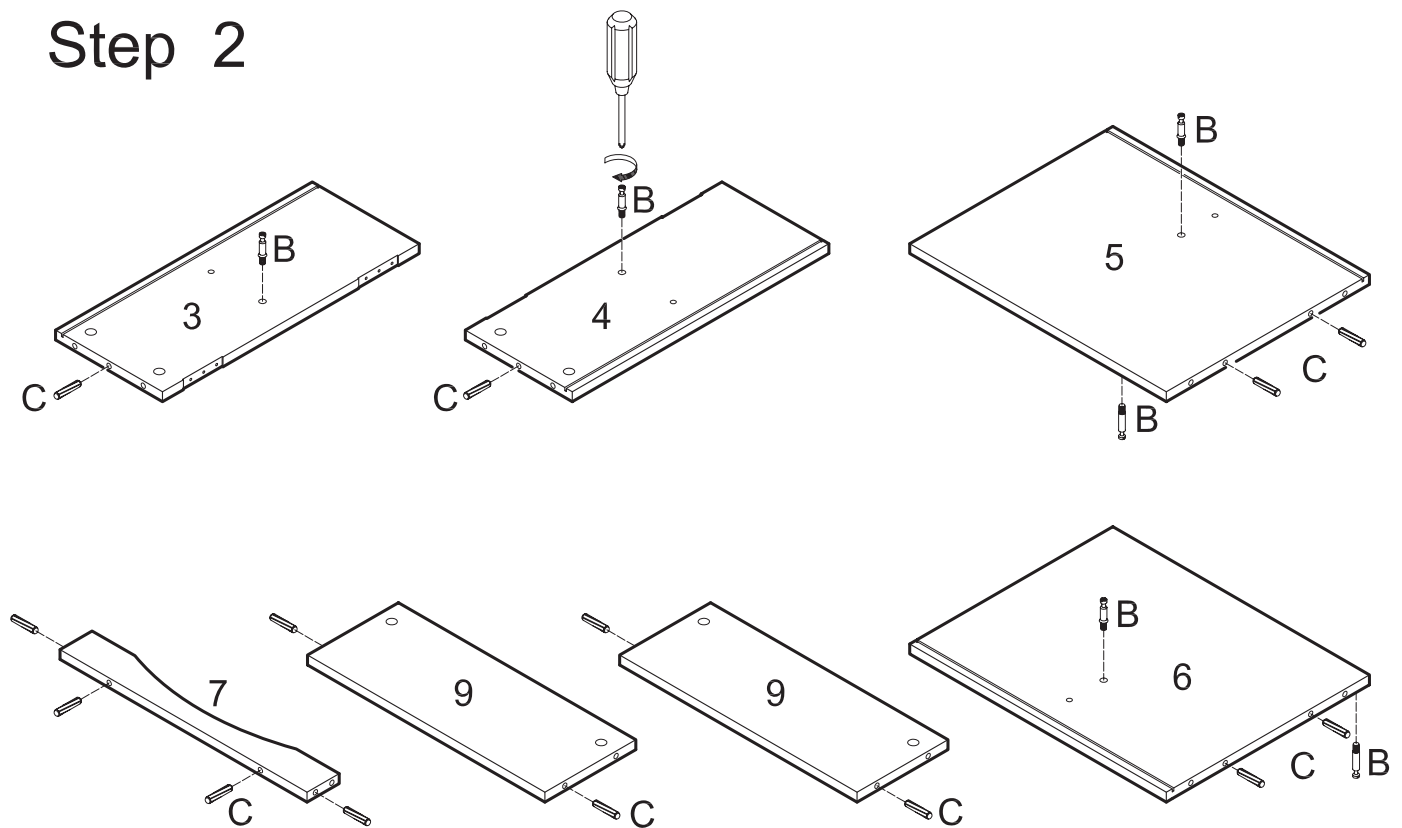 


Screw cam bolts (B) into panels (3,4,5,6). Note that one cam bolt (A) will be screwed into each side of panels (5,6). Insert dowels (C) into panels (3,4,5,6), slat (7) and shelves (9).

## Step 3

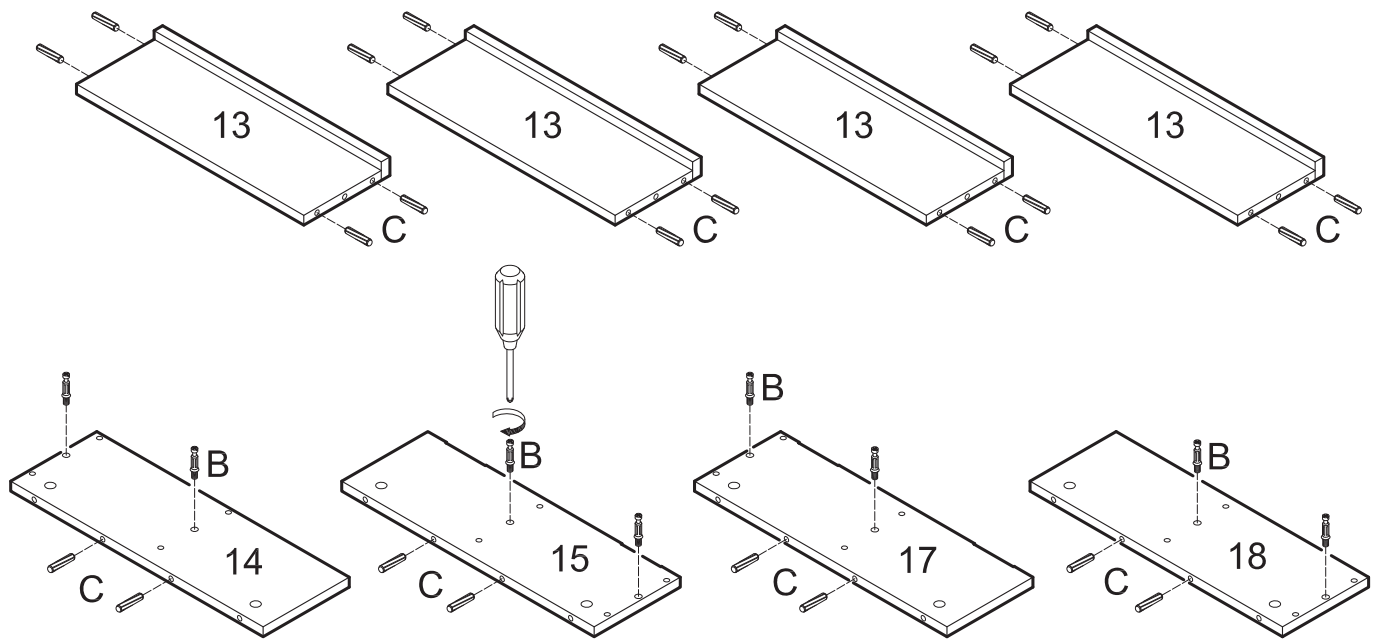 


Insert dowels (C) into shelves (13) and panels (14,15,17,18). Screw cam bolts (B) into panels (14,15,17,18).

## Step 4

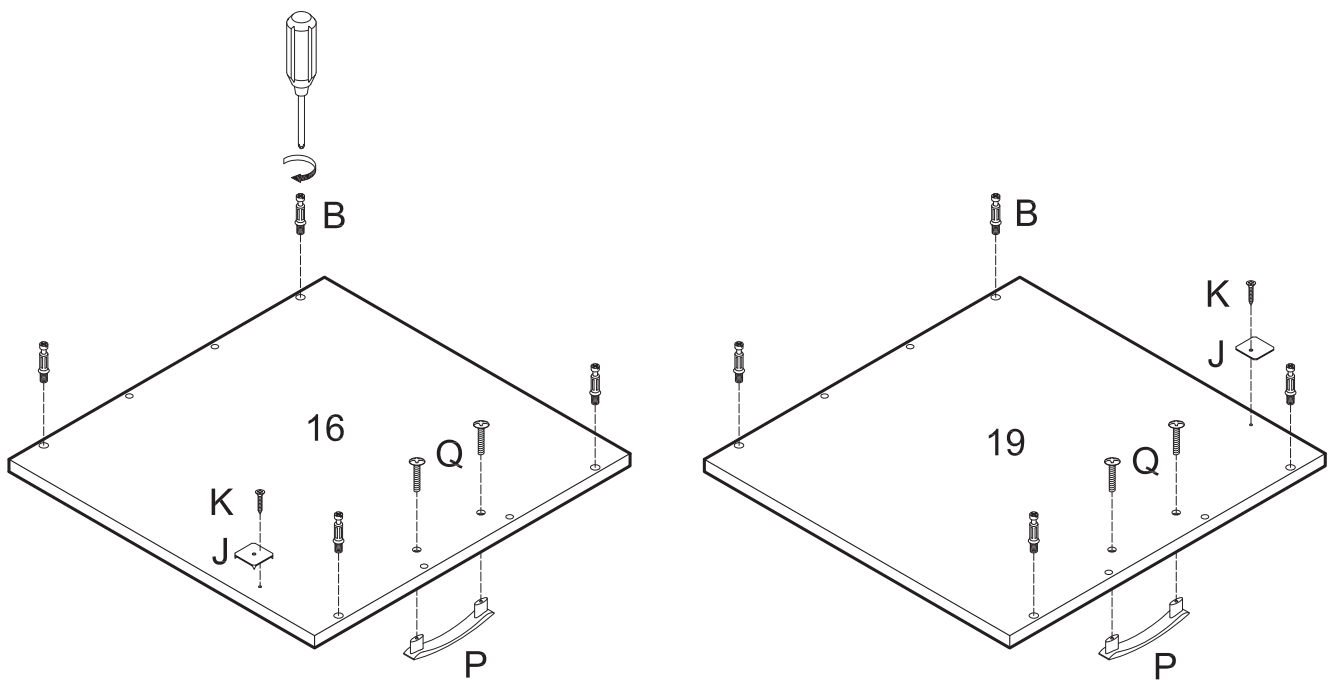 



Screw cam bolts (B) into doors (16,19). Attach door stopper plates (J) to doors (16,19) using screws (K). Attach handles (P) to doors (16,19) using bolts (Q).

## Step 5

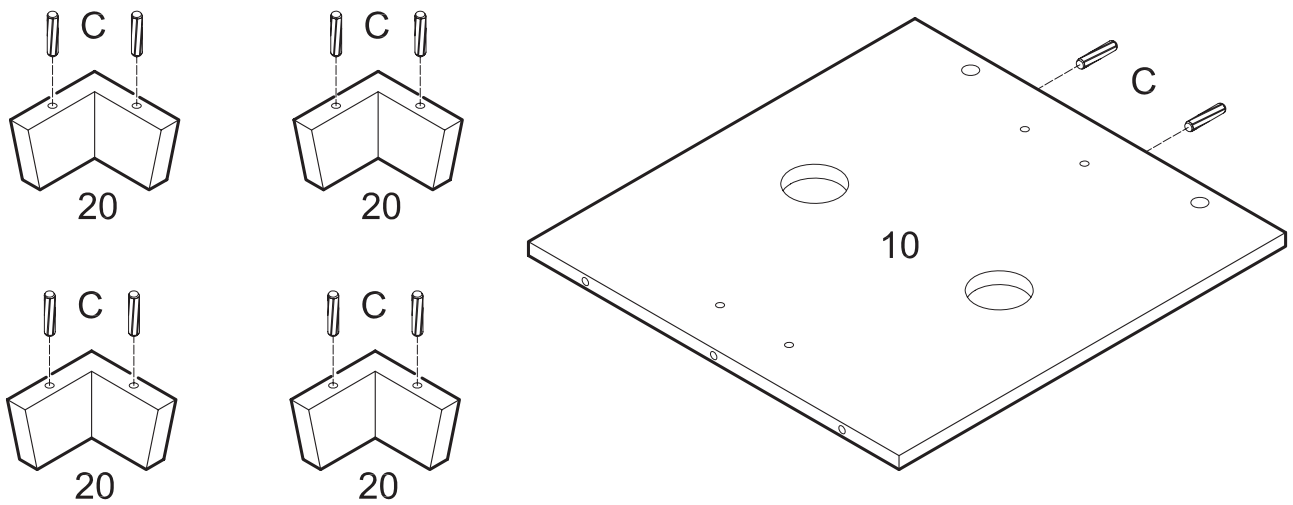 

Insert dowels (C) into feet (20) and back panel (10).



## Step 6

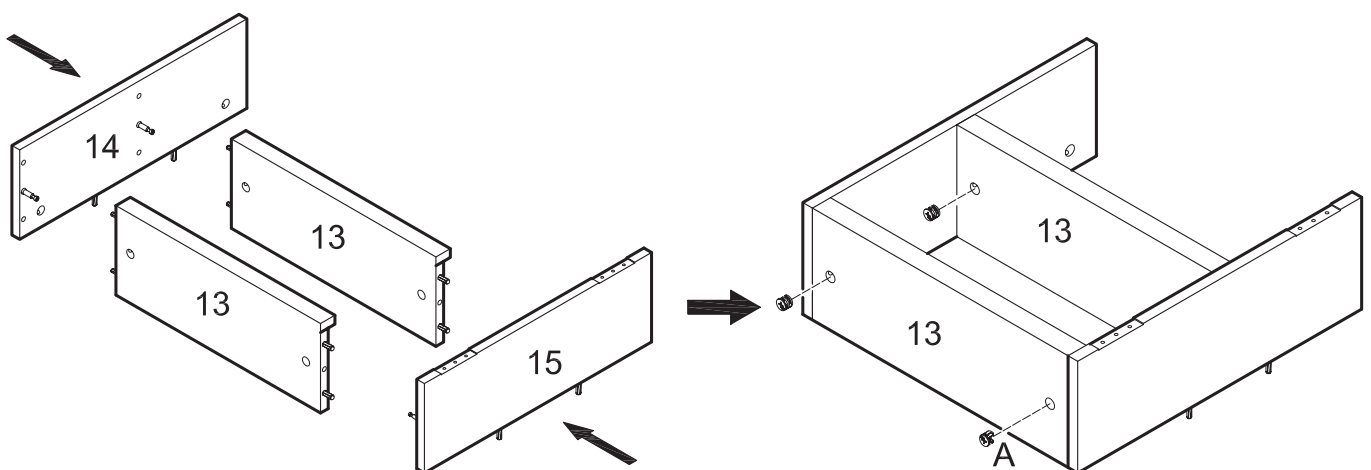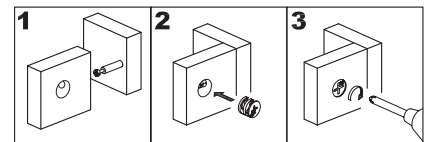  

Attach panels (14,15) to shelves (13) using cam bolts and dowels as guides. Insert cam locks (A) into shelves (13) and tighten with a screwdriver. *Note that two cam locks (A) will be inserted into each shelf (13).*





# Step 7

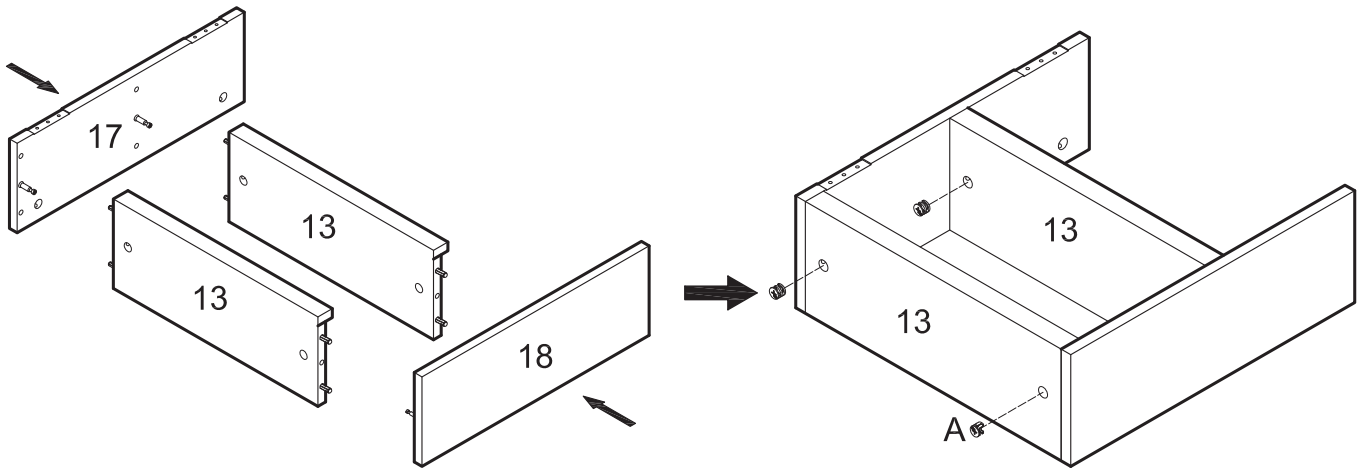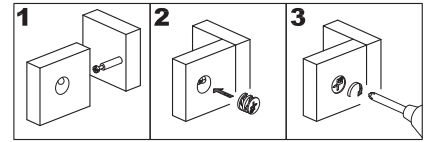  



Attach panels (17,18) to the second set of shelves (13) using cam bolts and dowels as guides. Insert cam locks (A) into shelves (13) and tighten with a screwdriver. *Note that two cam locks (A) will be inserted into each shelf (13).*

# Step 8

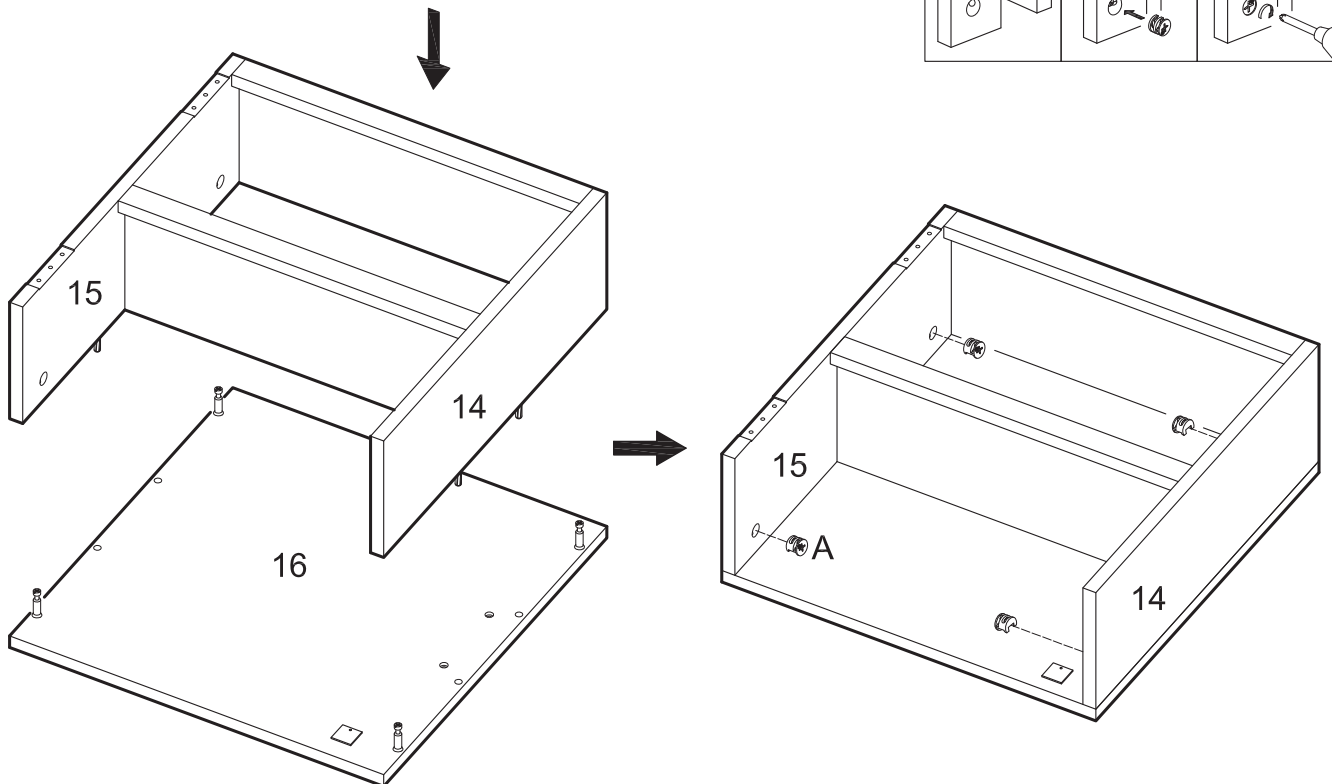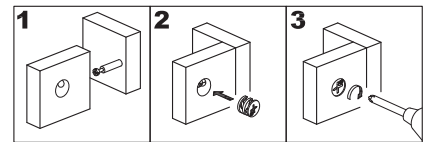  


Attach the panel assembly (14,15) to door (16) using cam bolts and dowels as guides. Insert cam locks (A) into panels (14,15) and tighten with a screwdriver.

## Step 9

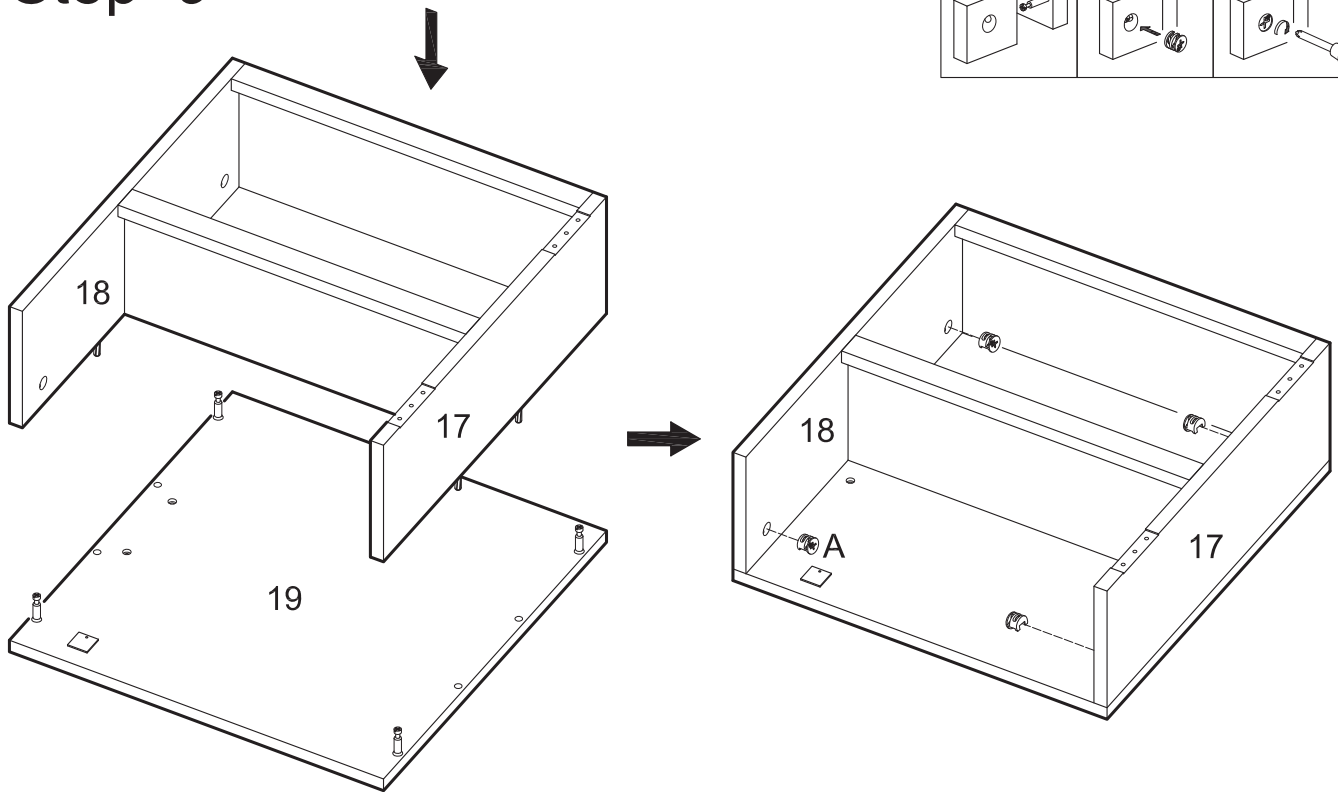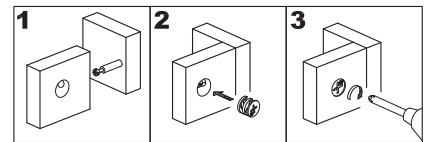  


Attach the panel assembly (17,18) to door (19) using cam bolts and dowels as guides. Insert cam locks (A) into panels (17,18) and tighten with a screwdriver.

## Step 10

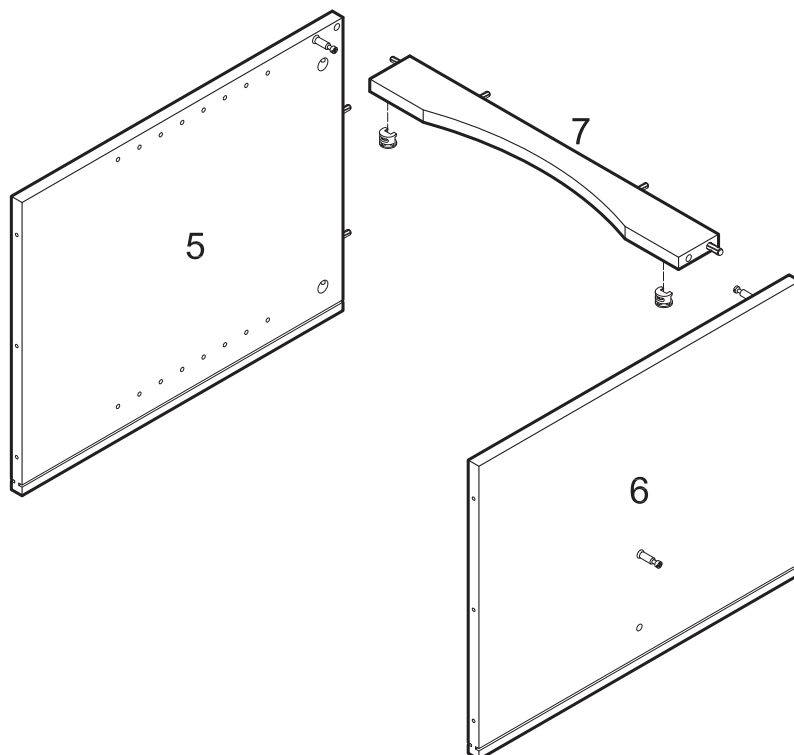 


Insert cam locks (A) into slat (7). Attach panels (5,6) to slat (7) using cam bolts and dowels as guides. Tighten cam locks (A) with a screwdriver.

# Step 11

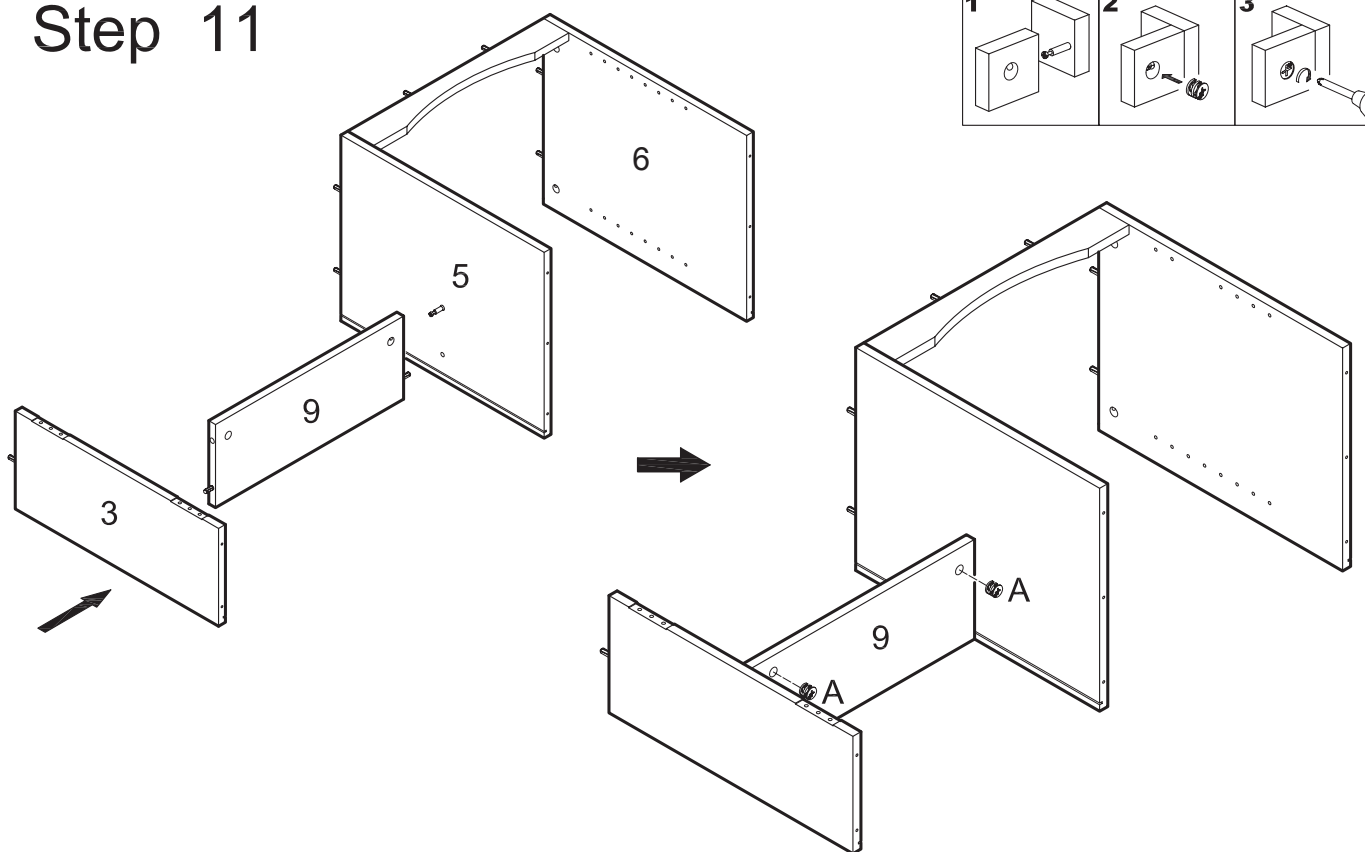 



Attach shelf (9) to panel (5), then panel (3) to shelf (9) using cam bolts and dowels as guides. Insert cam locks (A) into shelf (9) and tighten with a screwdriver.

# Step 12

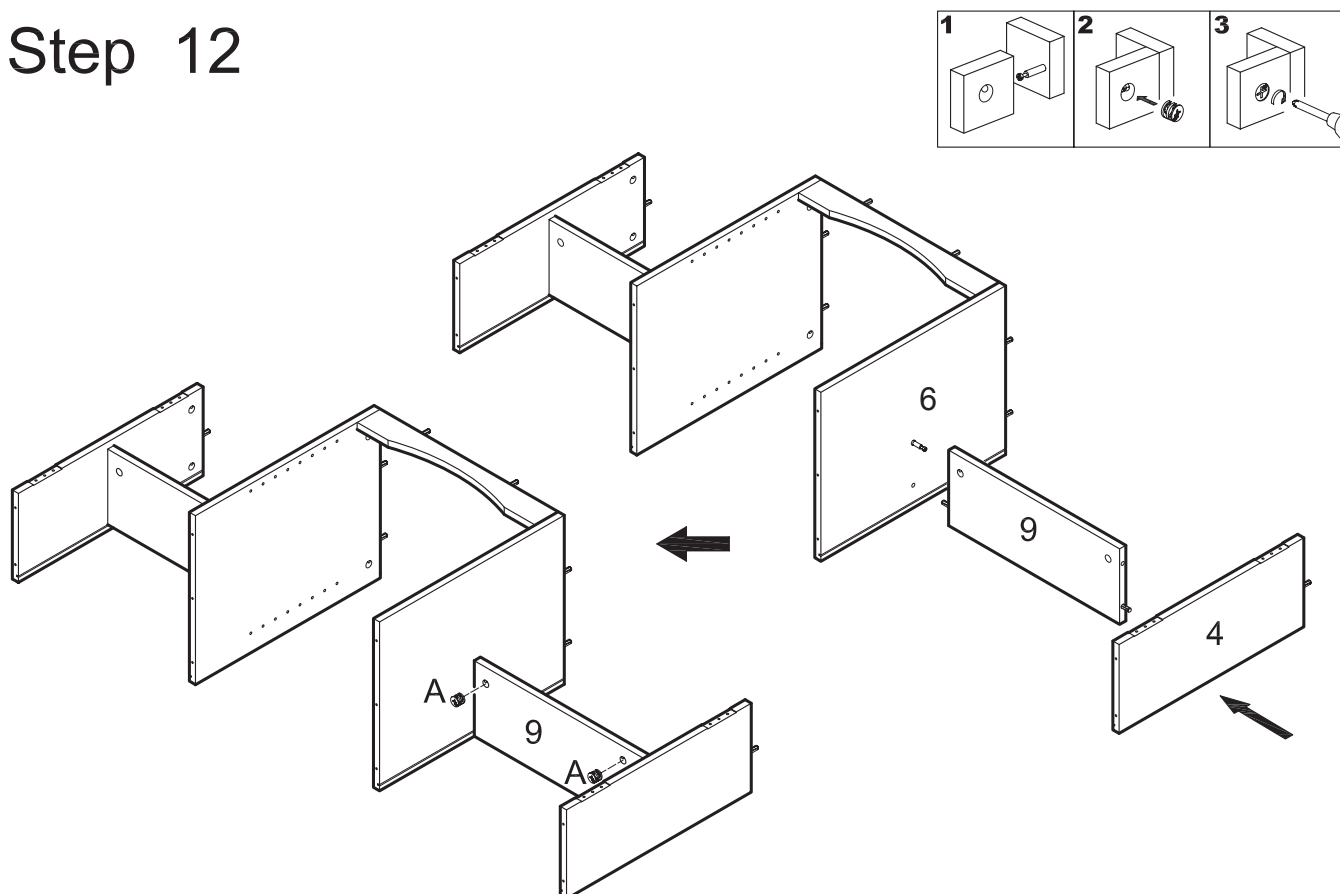 


Attach shelf (9) to panel (6), then panel (4) to shelf (9) using cam bolts and dowels as guides. Insert cam locks (A) into shelf (9) and tighten with a screwdriver.

## Step 13

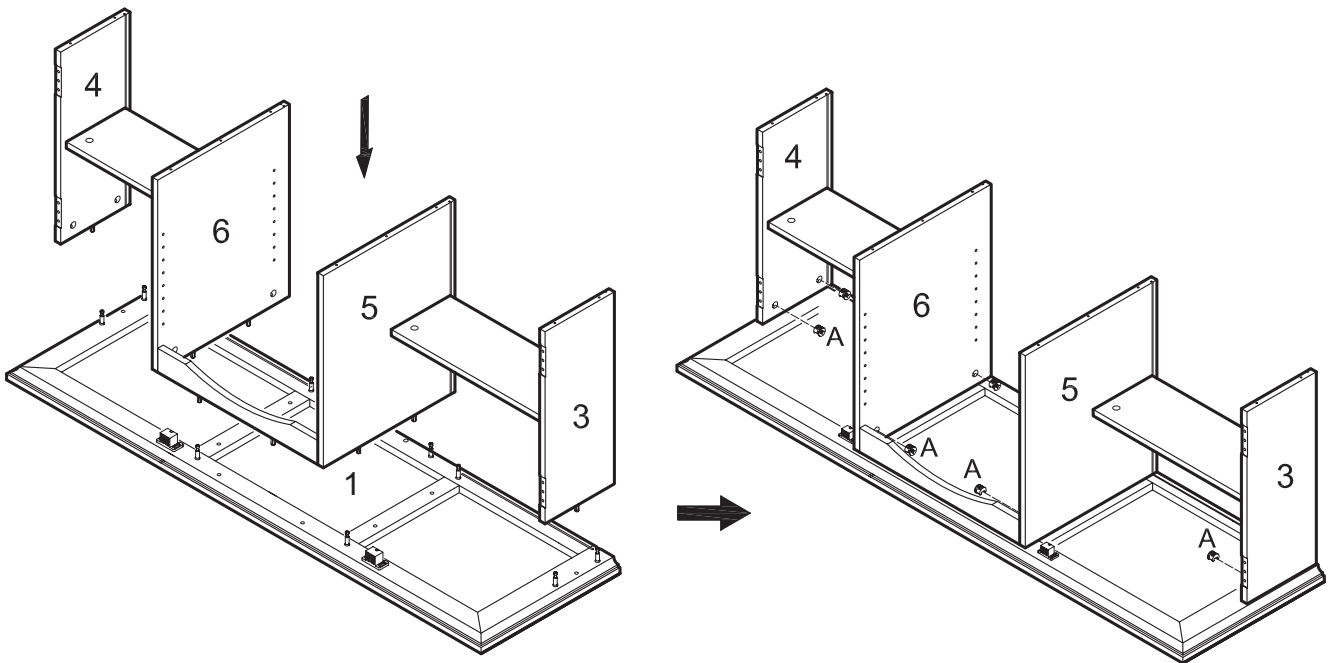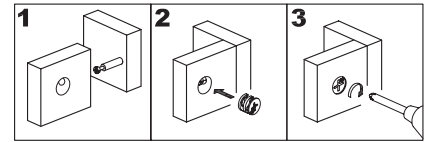  


Attach the panel assembly from the previous step to stand top (1) using cam bolts and dowels as guides. Insert cam locks (A) into panels (3,4,5,6) and tighten with a screwdriver. *Note that two cam locks (A) will be inserted into each panel (3,4,5,6).*

## Step 14

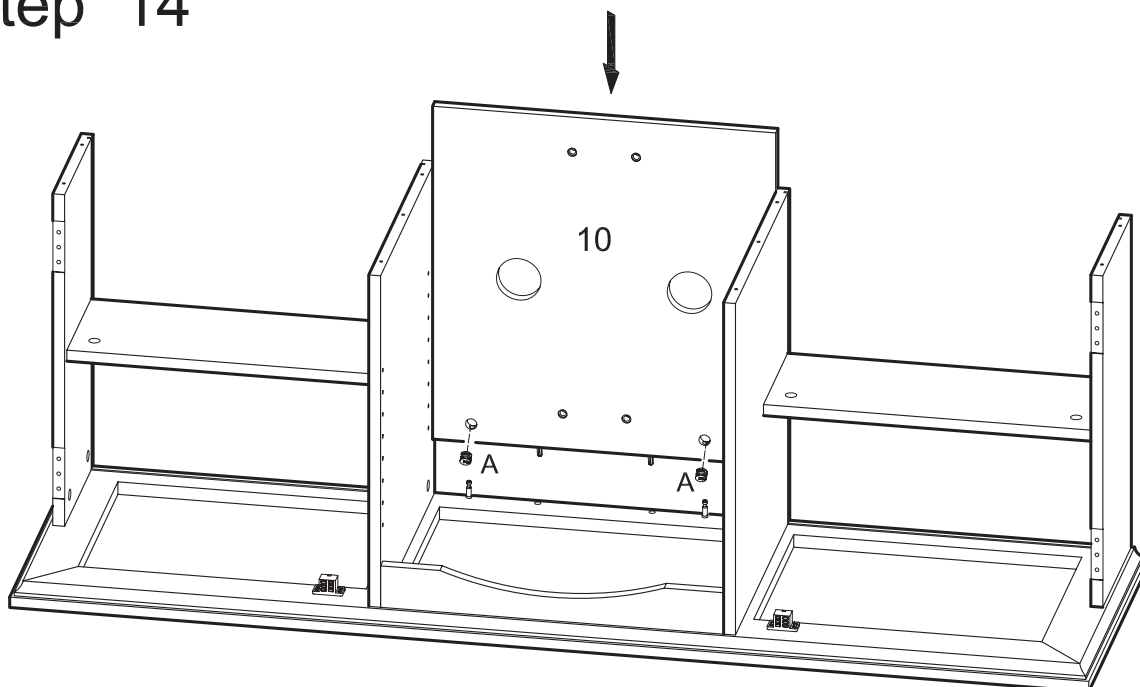 


Carefully slide back panel (10) into place along the back of the stand assembly. Use cam bolts and dowels as guides. Insert cam locks (A) into back panel (10) and tighten with a screwdriver.

## Step 15

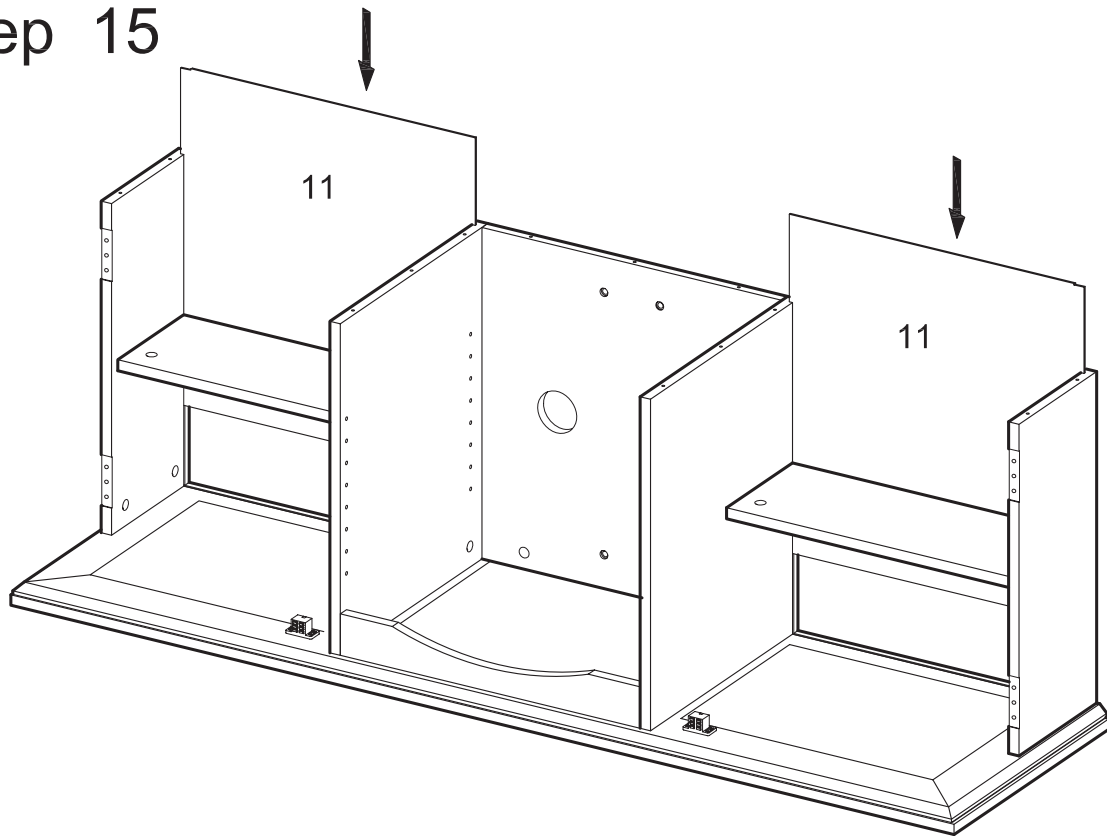 


Carefully slide back panels (11) into place along the grooves at the back of the stand assembly.

## Step 16

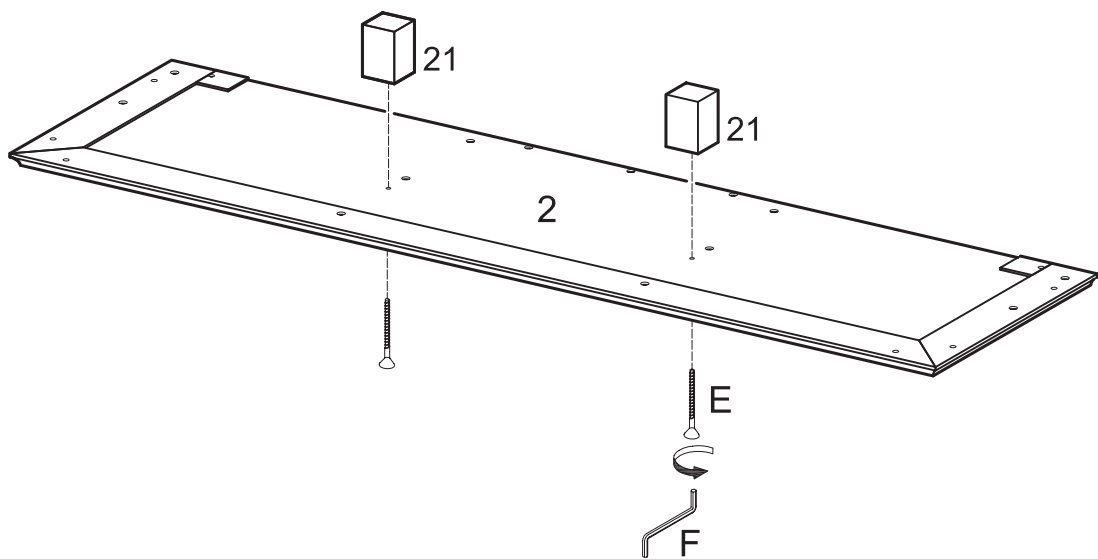 


Attach stand supports (21) to stand base (2) using bolts (E). Tighten bolts (E) with wrench (F).

## Step 17

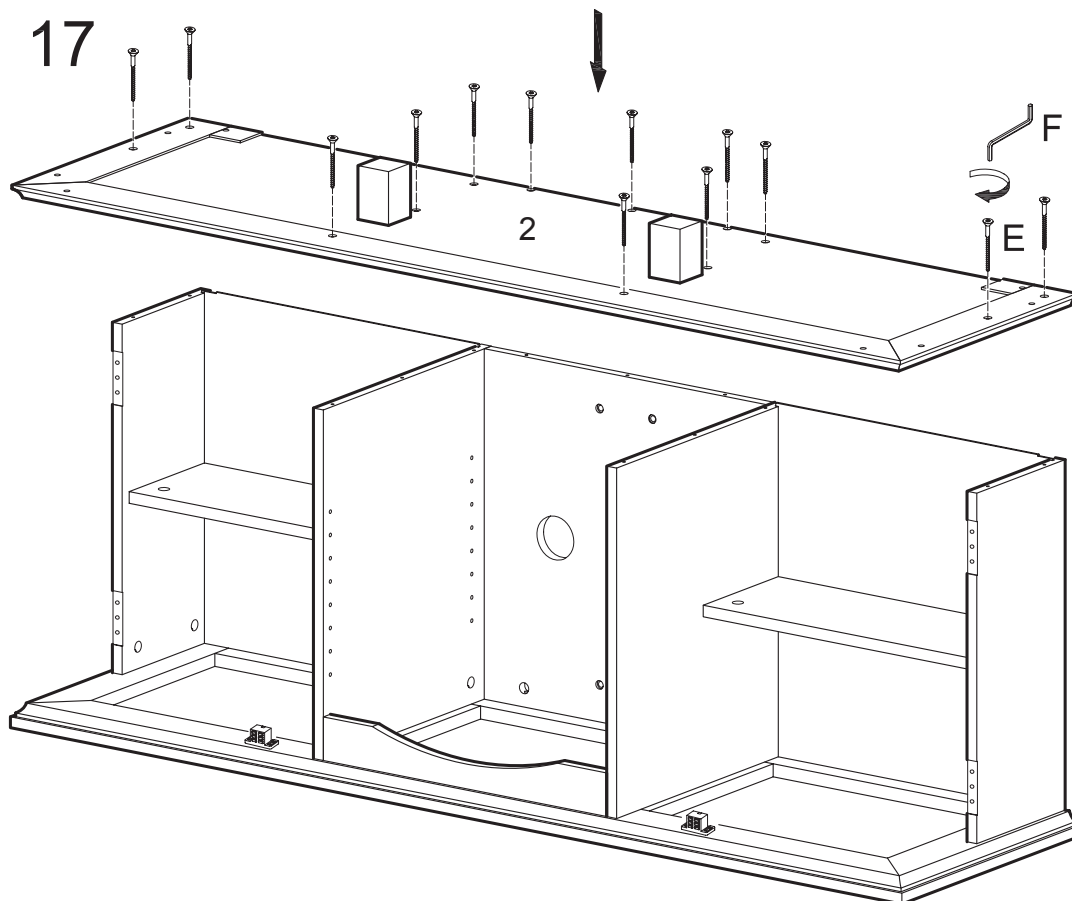 


Attach stand base (2) to the stand assembly using bolts (E). Tighten bolts (E) with wrench (F).

## Step 18

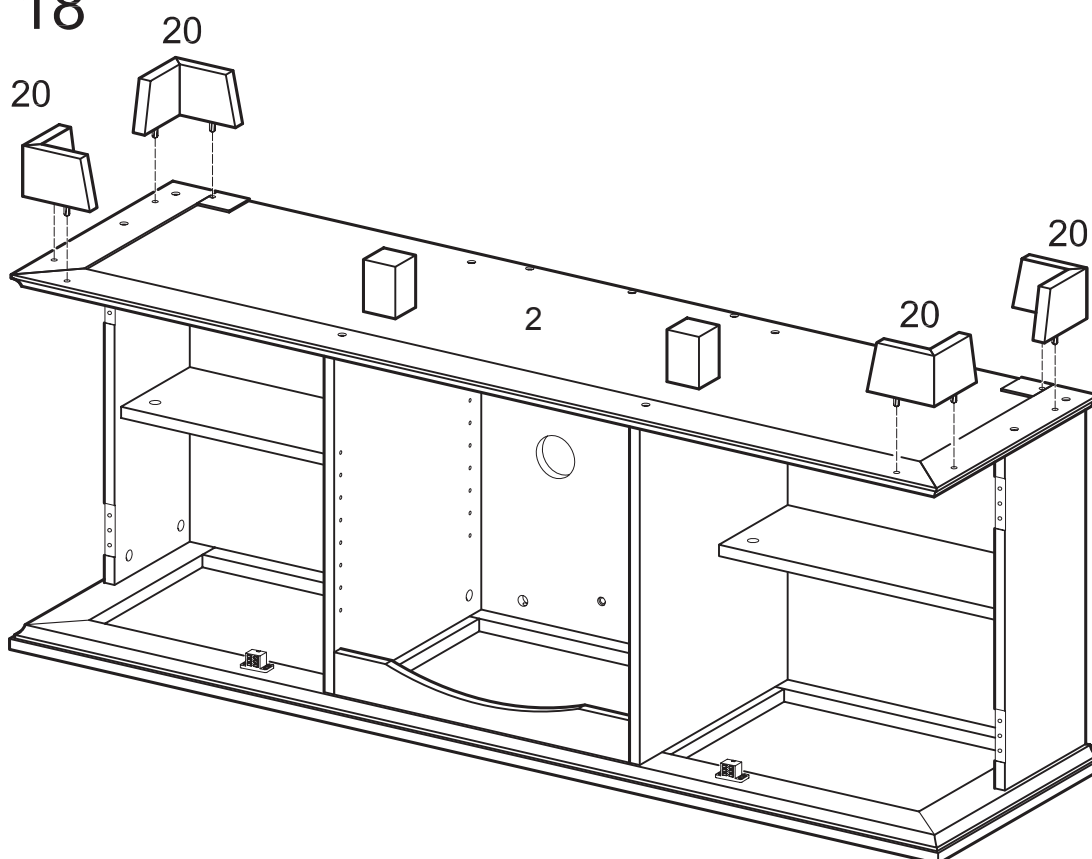 


Attach feet (20) to stand base (2) using dowels as guides.

## Step 19

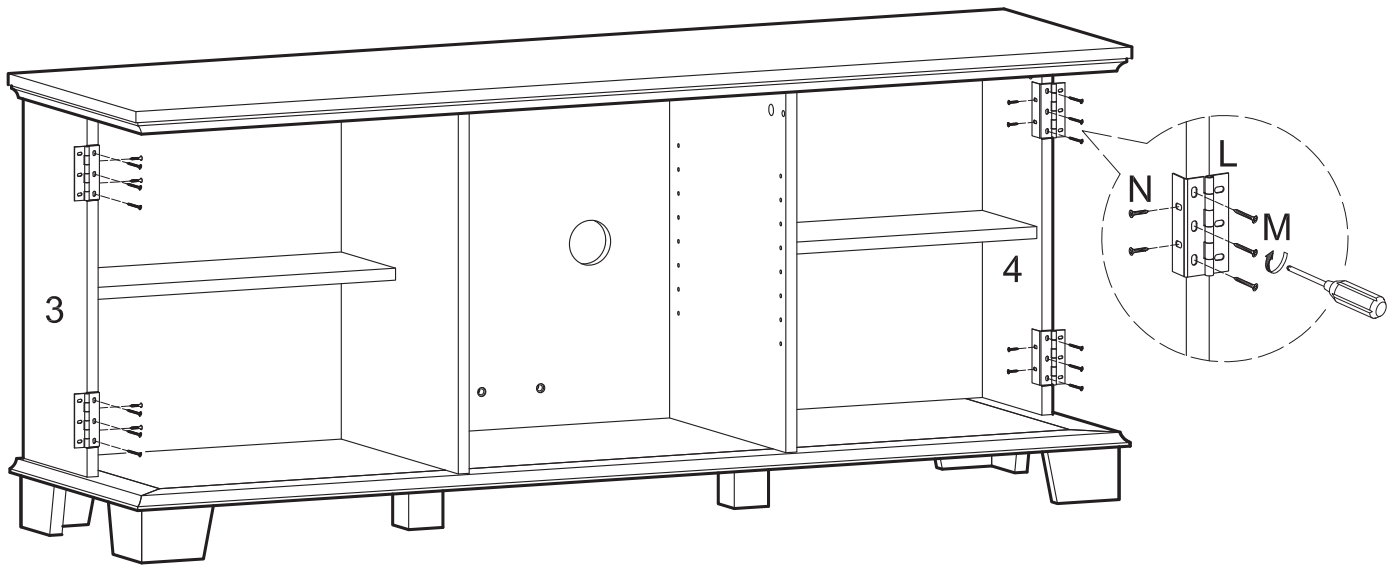 


Attach door hinges (L) to panels (3,4) using screws (M,N).

## Step 20

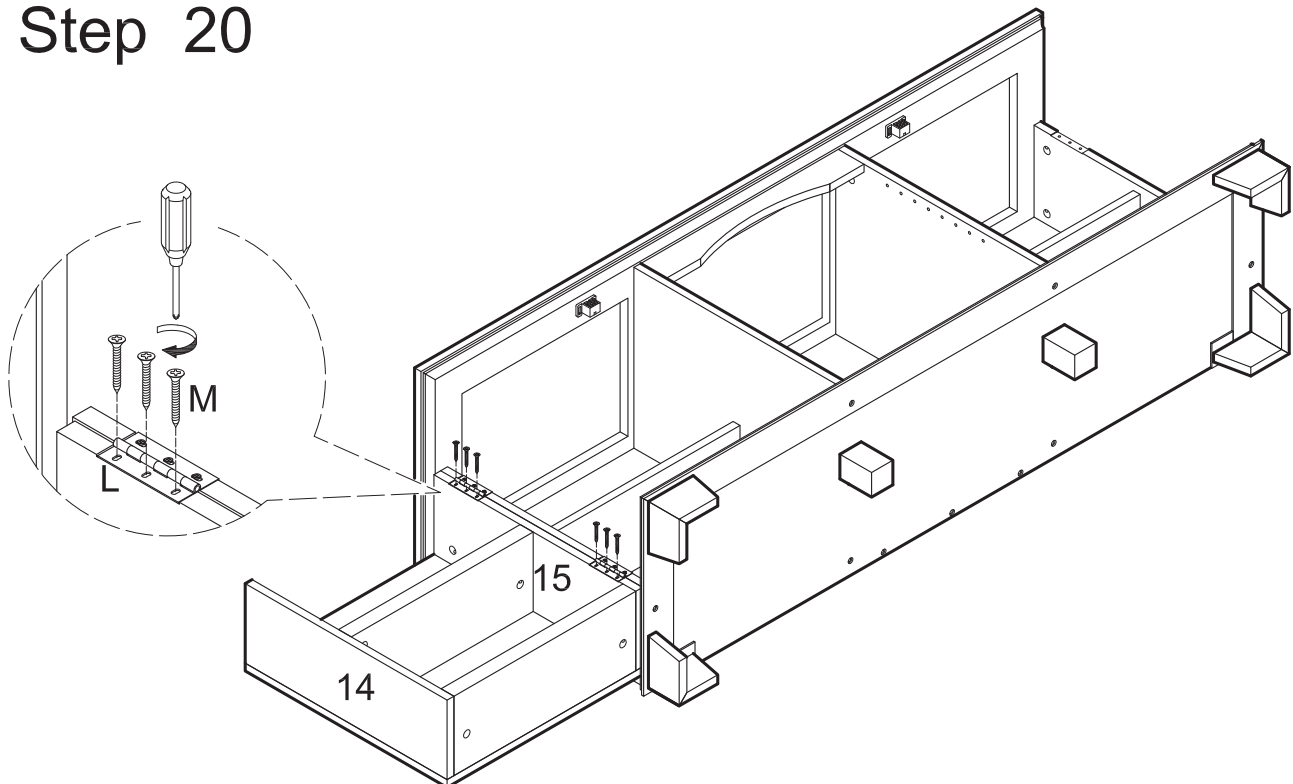 


Attach door assembly (14,15) to the stand assembly at door hinges (L) using screws (M).

## Step 21

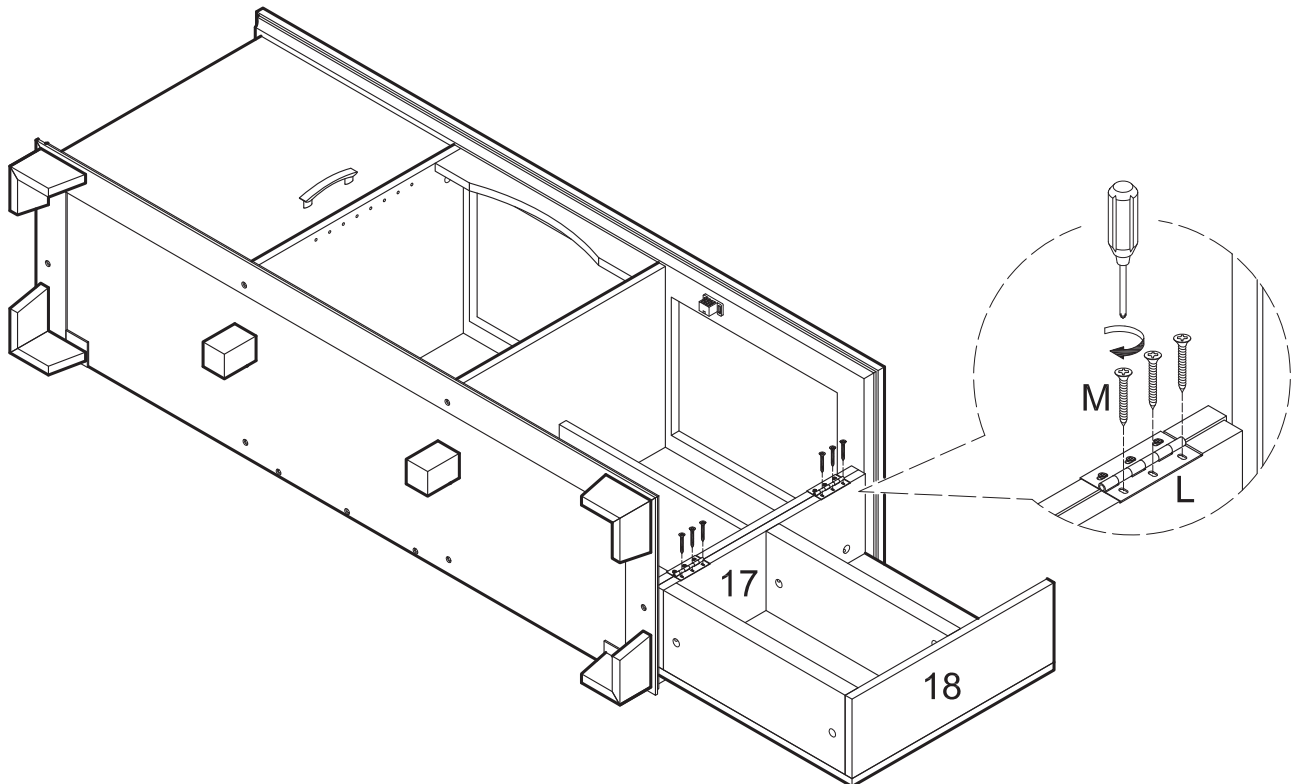 

Attach door assembly (17,18) to the opposite side of the stand assembly at door hinges (L) using screws (M).


## Step 22

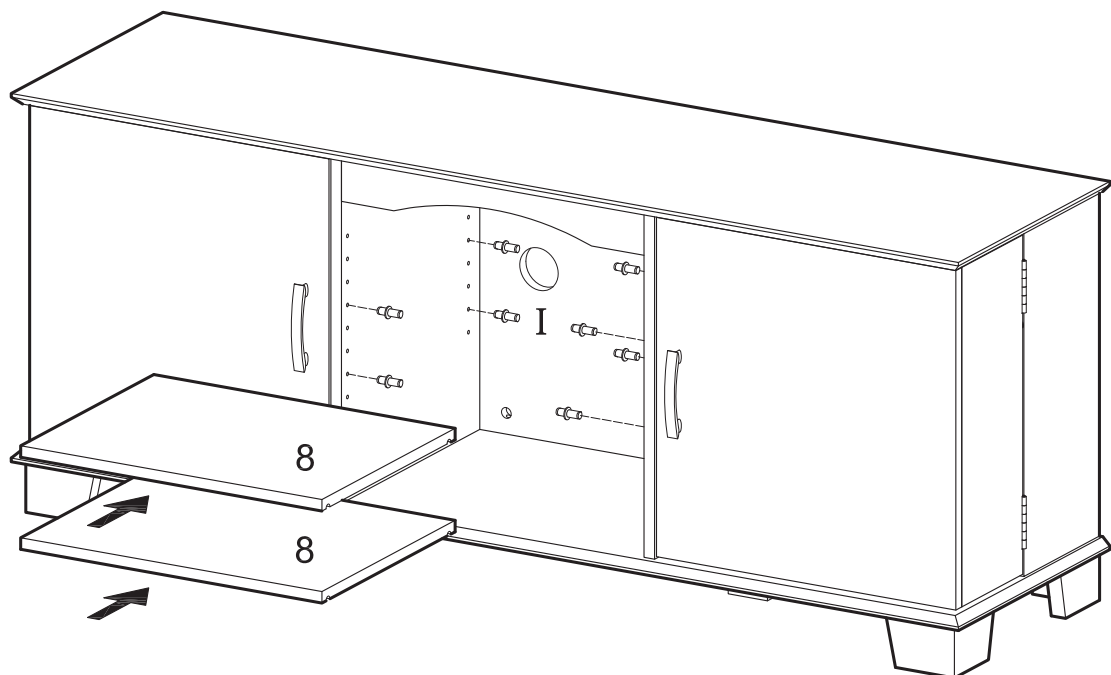 

Insert shelf support pins (I) into the stand assembly at desired shelf heights. Carefully slide shelves (8) into place resting on shelf support pins (I).




## Step 23

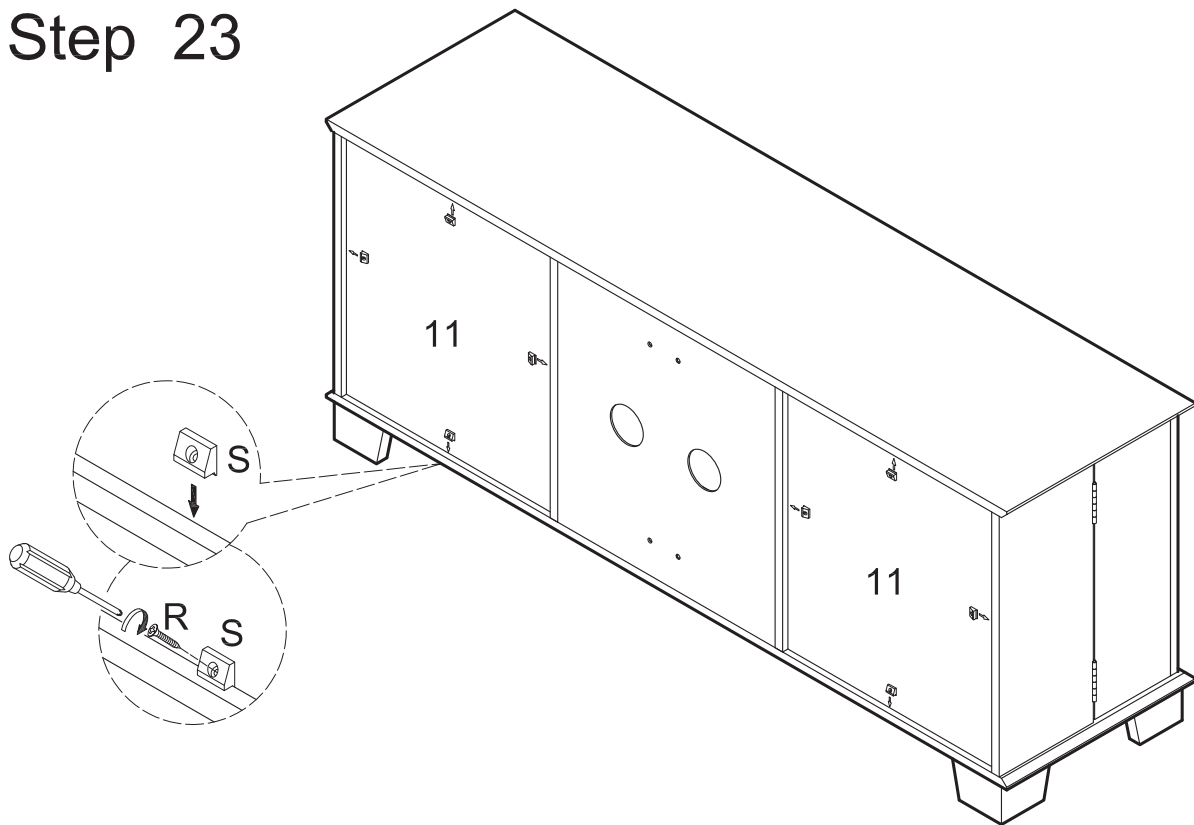 


Secure back panels (11) using plastic wedges (S) and screws (R).

## Step 24

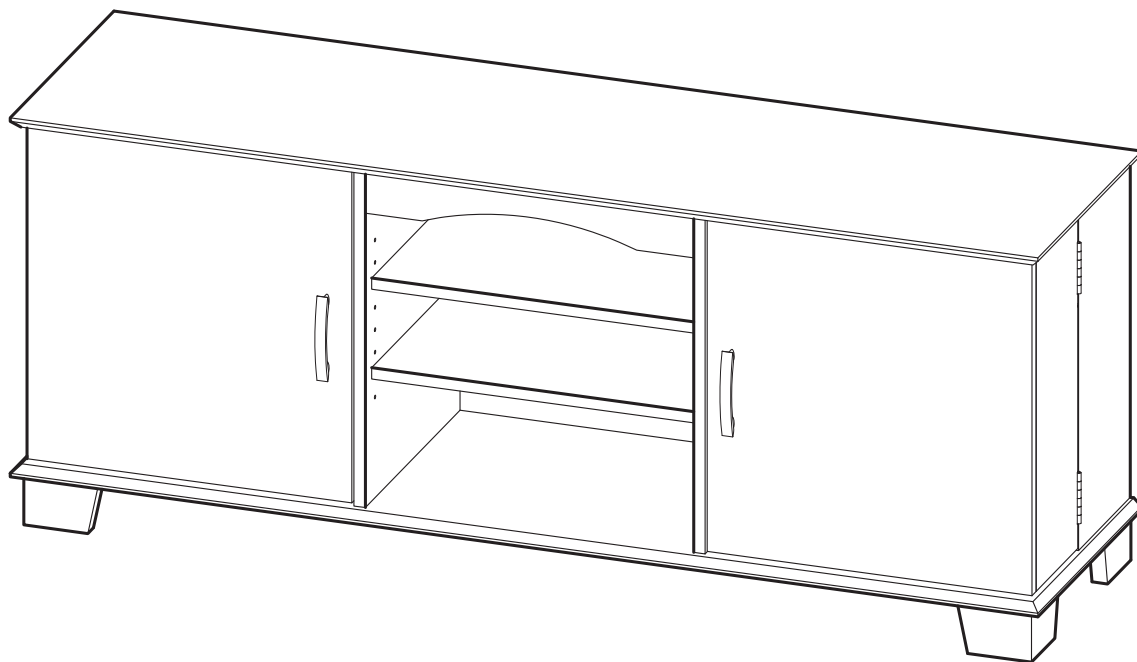 


Completed stand assembly. The following steps show the assembly and attachment of the TV mount.

## Step 25

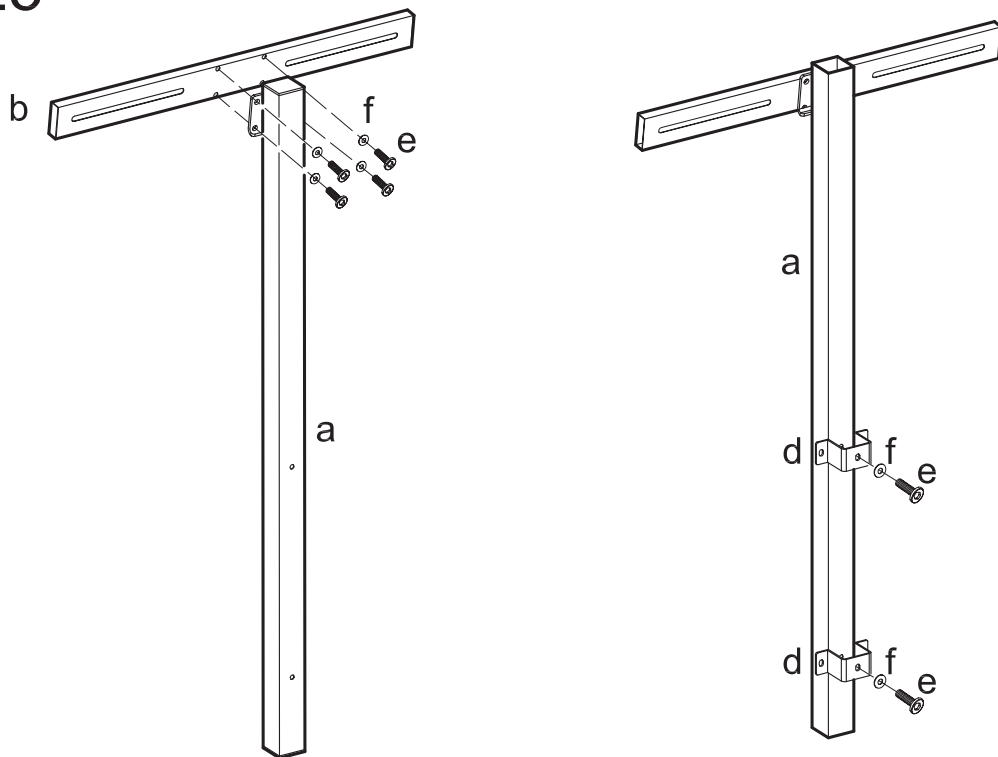 


Attach lateral support bar (b) to upright support bar (a) using bolts (e) and washers (f). Attach support brackets (d) to upright support bar (a) using bolts (e) and washers (f).

## Step 26

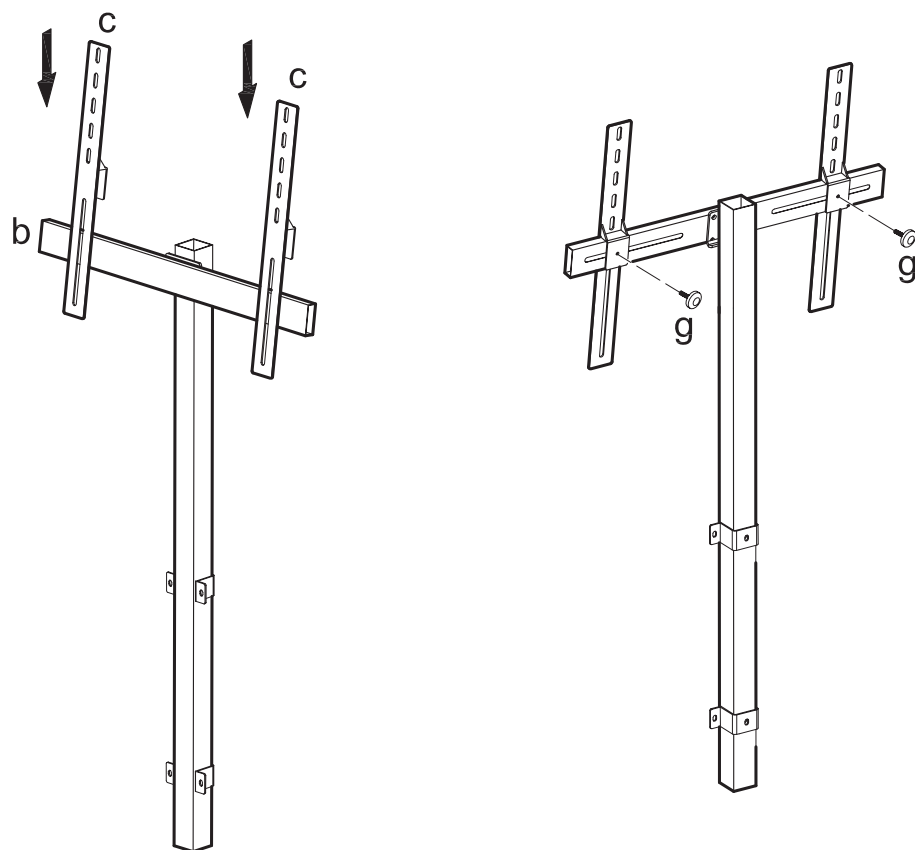 


Slide mounting bars (c) onto lateral support bar (b). Secure mounting bars (c) by screwing adjustment knobs (g) into place.

## Step 27

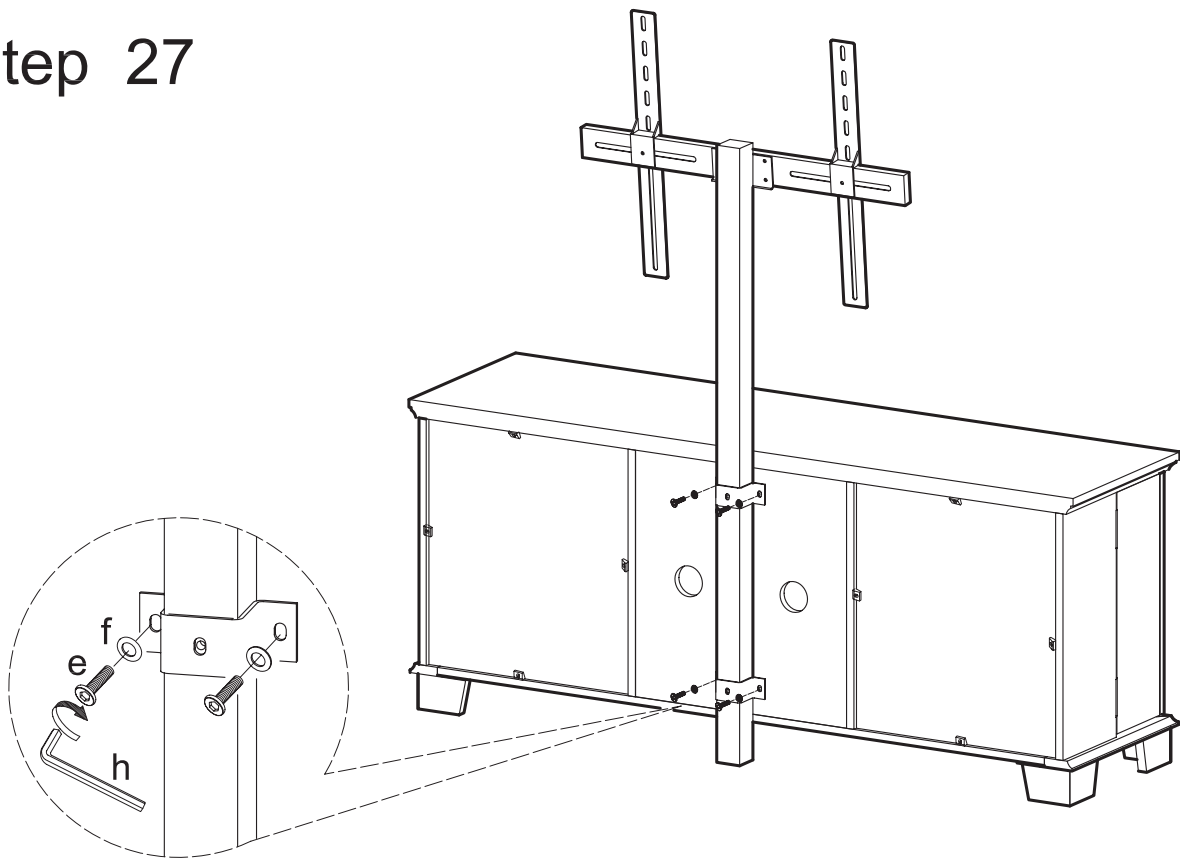 

Attach TV mount to stand assembly using bolts (e) and washers (f). Tighten bolts (e) with wrench (h).

## Step 28

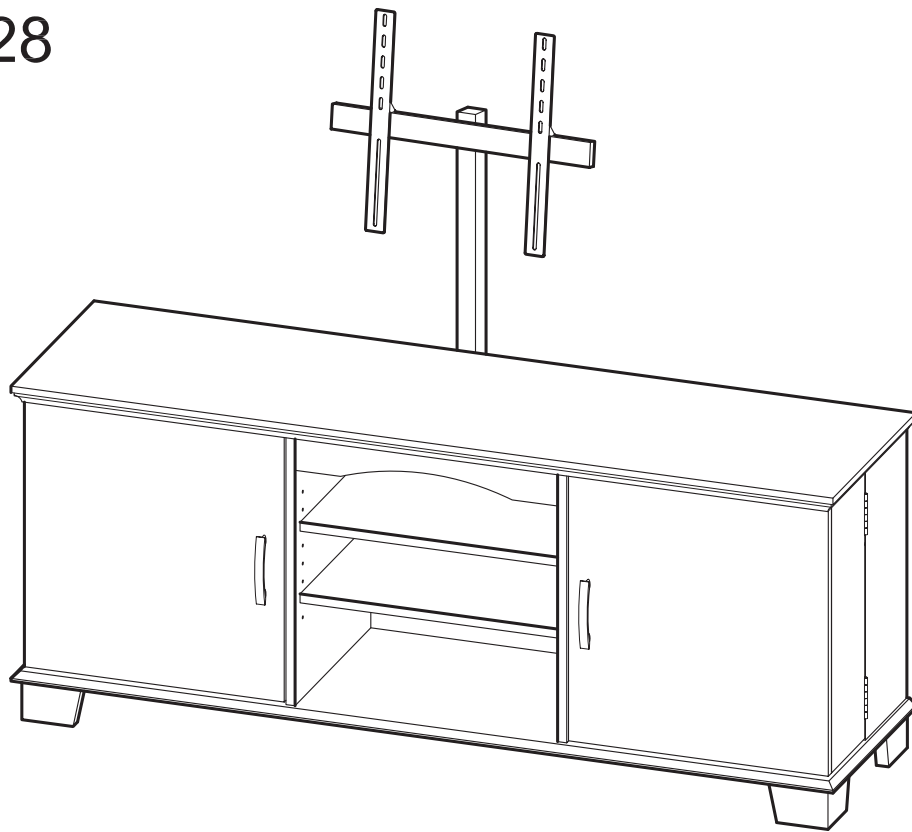 

Final Assembly