


ITEM #: W70CSP ASSEMBLY INSTRUCTION

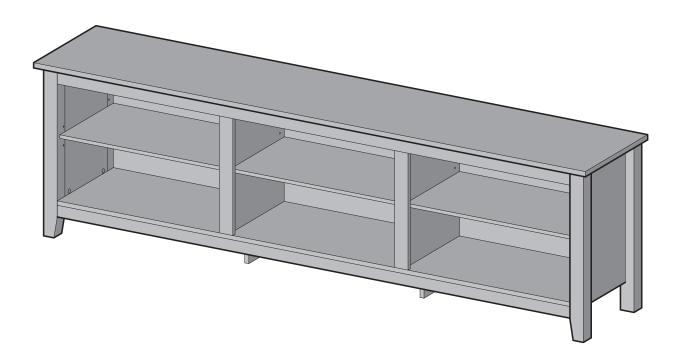


For our most up-to-date instructions, to request missing, lost, or broken parts, or for any other Customer Service issues, please visit our website at **www.walkeredison.com** or call us at 877-207-5906.

Revised 09/2015

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

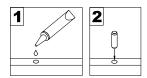


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.

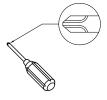

VII. Power tools should not be used to assemble this product.

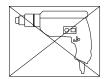

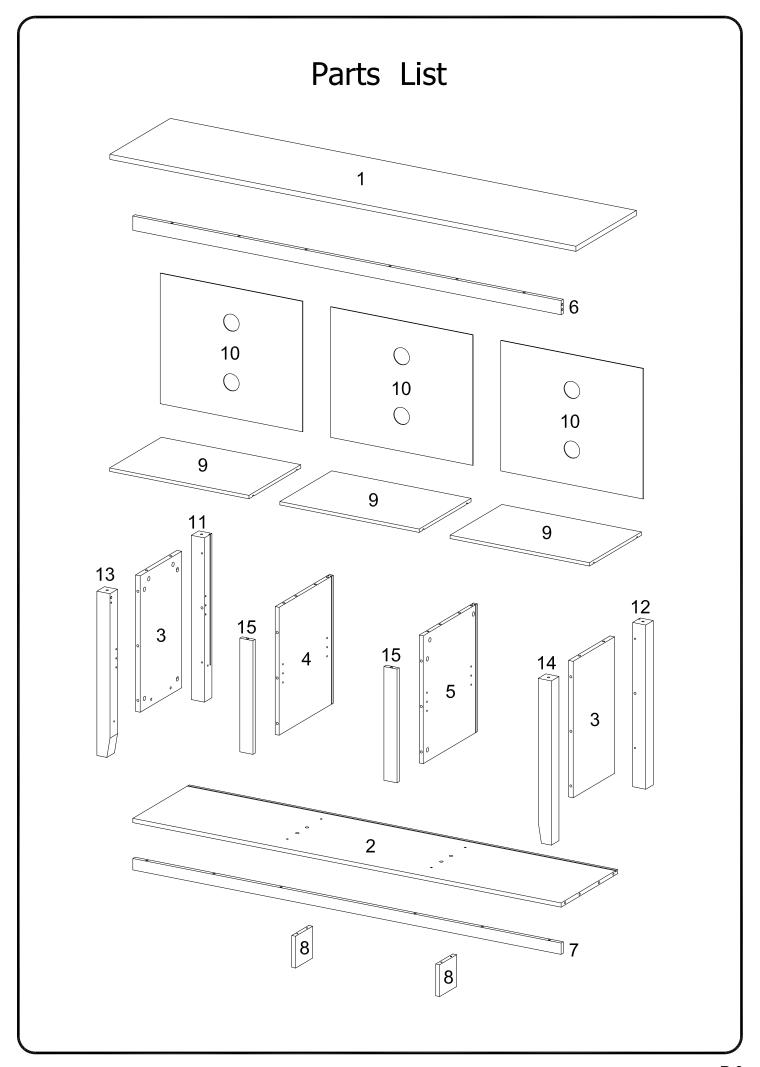

Hardware List


Α		Ø8x30	Wooden dowel	26 F	pcs
В		Ø6x35	Cam bolt	34 1	pcs
С			Cam lock	34 1	pcs
D	<i>ammmn</i>	Ø6x50	Bolt	8 1	pcs
E			Plastic wedge	12 1	pcs
F			Flat-head screw	12	pcs
G			Shelf support pin	12	pcs
Н		M4	Wrench	1 1	рс
J			Glue tube	1 1	рс
K	0		Sticker	34 F	pcs




Philips head screwdriver required for assembly (not included)


The hardware quantities listed above are required for proper assembly.

Some extra hardware may also have been included.

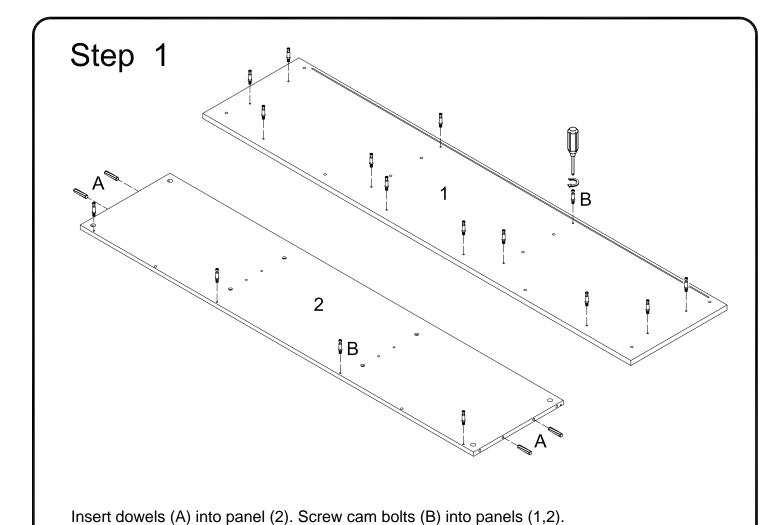

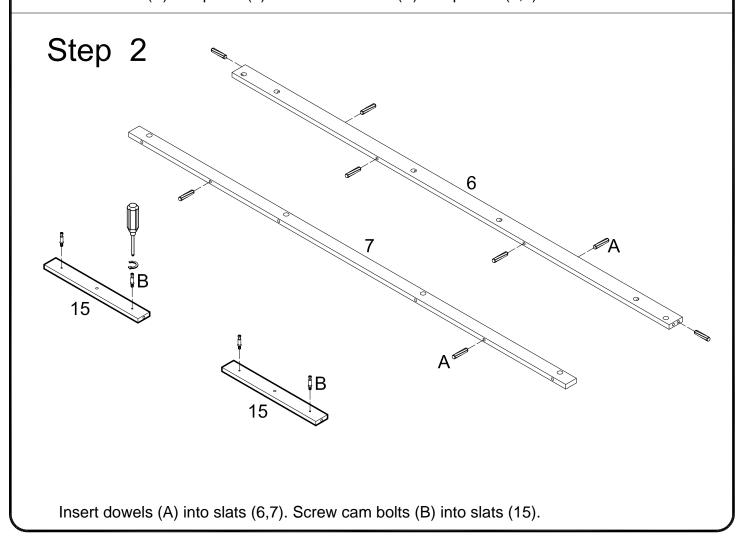




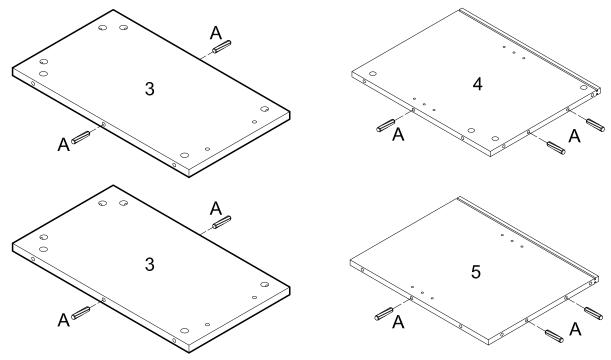


Insert dowels (A) into panels (3,4,5).


Step 4

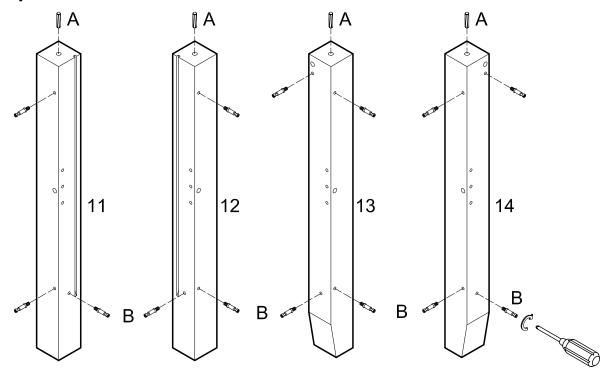


Insert dowels (A) into legs (11,12,13,14) . Screw cam bolts (B) into legs (11,12,13,14).

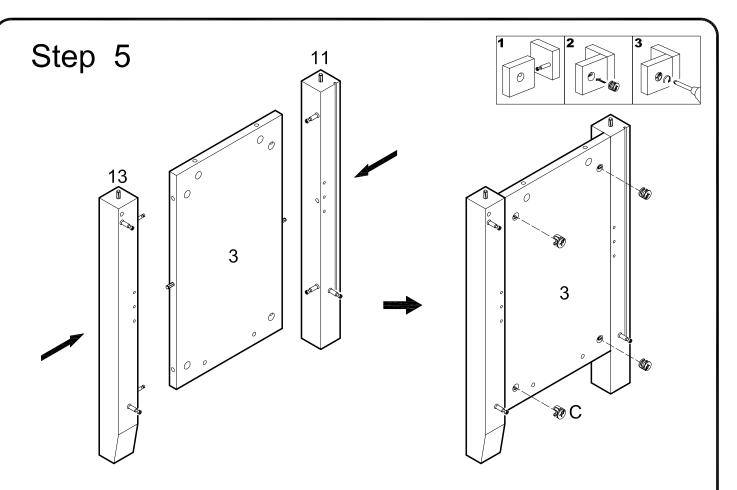

Attach legs (11,13) to panel (3) using cam bolts and dowels as guides. Insert cam locks (C) into panel (3) and tighten with a screwdriver.

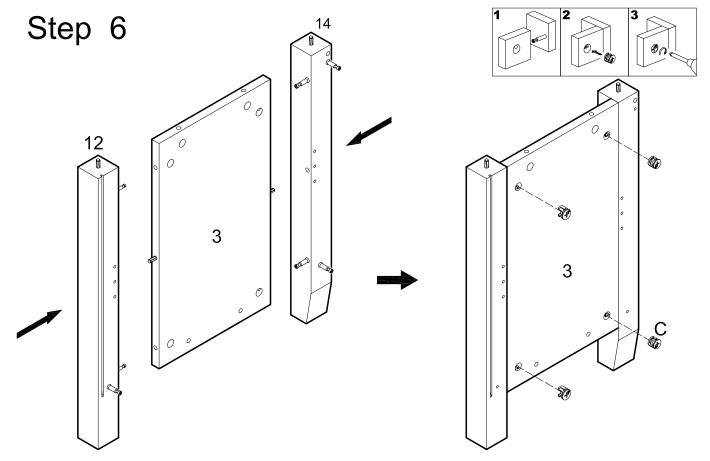


Attach legs (12,14) to second panel (3) using cam bolts and dowels as guides. Insert cam locks (C) into panel (3) and tighten with a screwdriver.

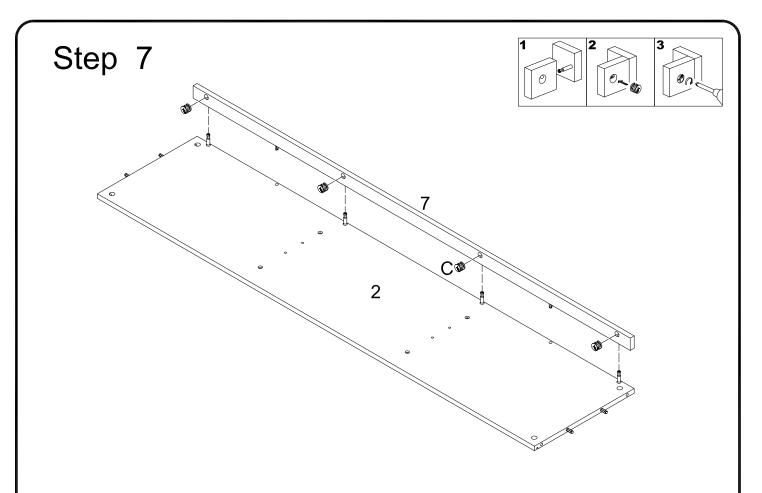


Attach slat (7) to panel (2) using cam bolt and dowels as guides. Insert cam lock (C) into slat (7) and tighten with a screwdriver.


Step 8

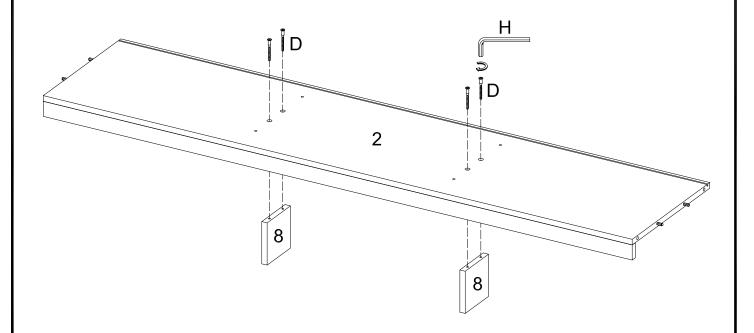


Attach support legs (8) to panel (2) using bolts (D). Tighten bolts (D) with wrench (H).

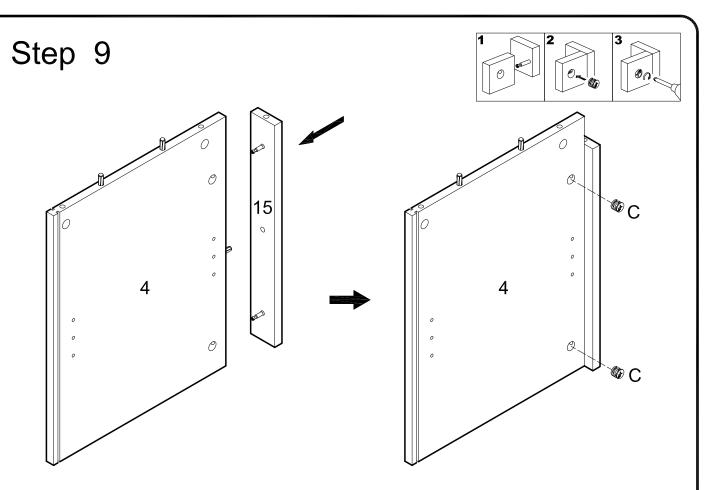


Attach slat (15) to panel (4) using cam bolts and dowel as guides. Insert cam locks (C) into panel (4) and tighten with a screwdriver.

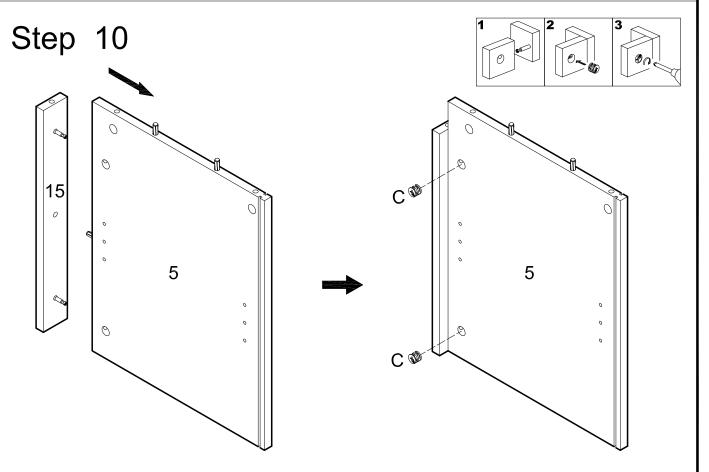


Attach slat (15) to panel (5) using cam bolts and dowel as guides. Insert cam locks (C) into panel (5) and tighten with a screwdriver.

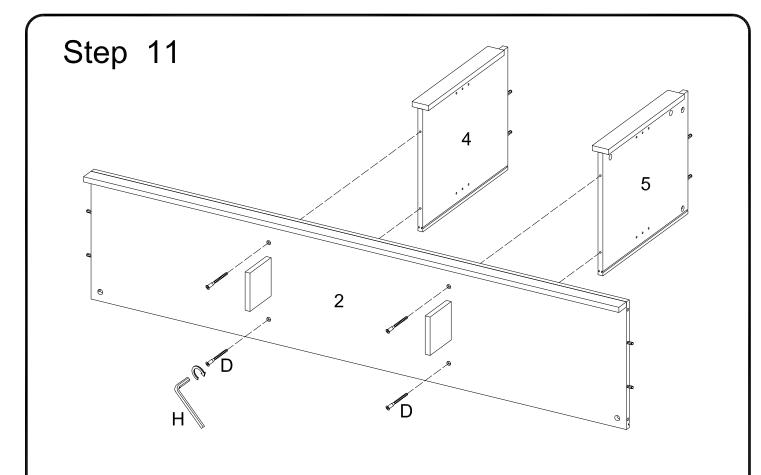


Attach panel (4,5) to panel (2) using bolts (D). Tighten bolts (D) with wrench (H).

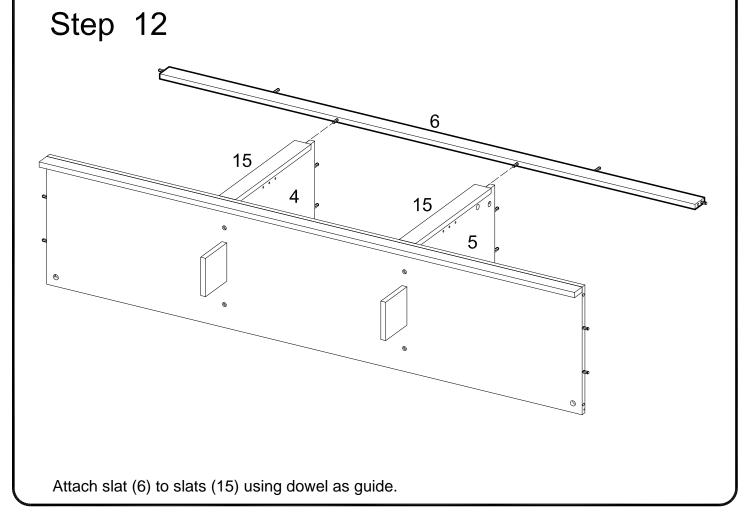


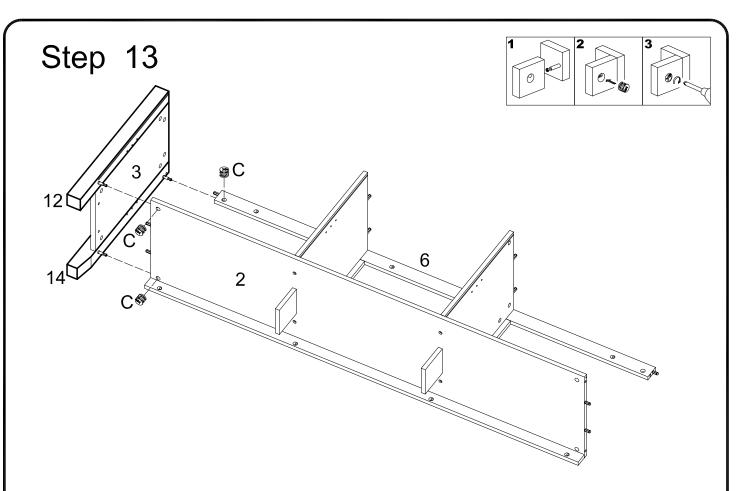


Attach panel (3) with legs (12,14) to the assembly from the previous step using cam bolts and dowels as guides. Insert cam locks (C) into panel (2) and slat (6) and tighten with a screwdriver.

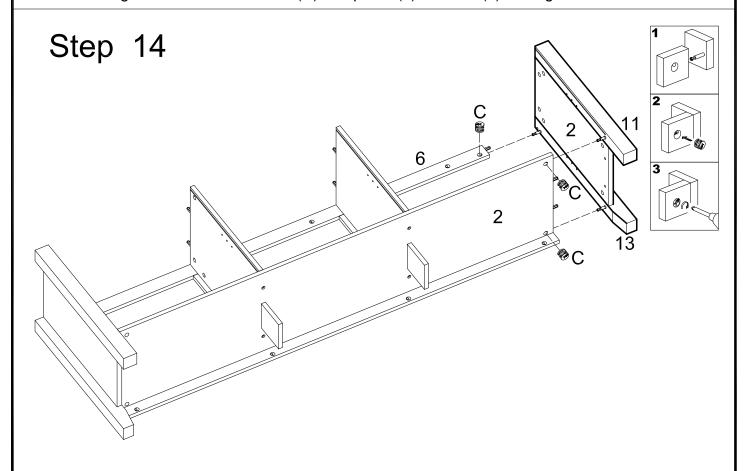


Attach second panel (2) with legs (11,13) to the assembly from the previous step using cam bolts and dowels as guides. Insert cam locks (C) into panel (2) and slat (6) and tighten with a screwdriver.

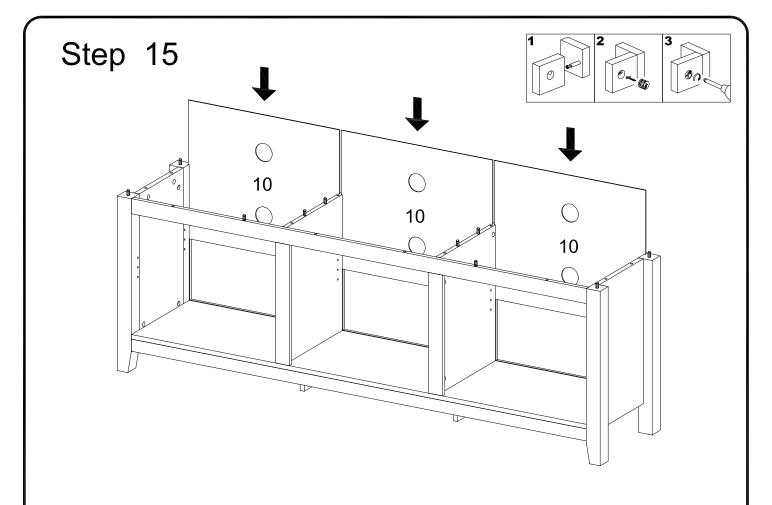


Carefully slide panels (10) into place along the back of the assembly.

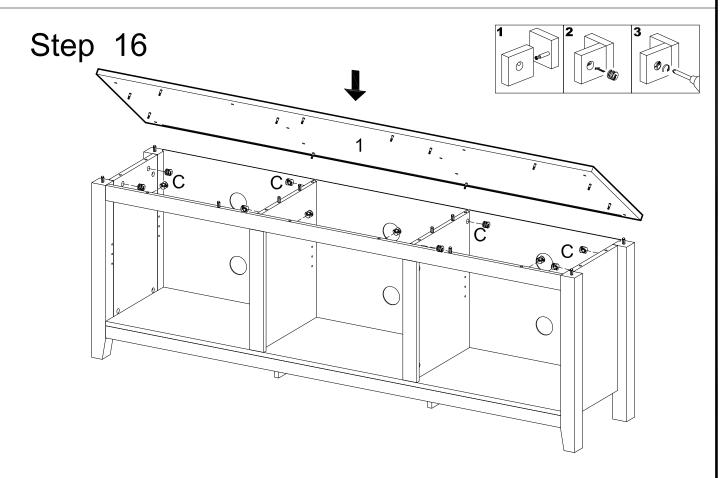


Carefully attach panel (1) to the assembly using cam bolts and dowels as guides. Insert cam locks (C) into the assembly as shown above and tighten with a screwdriver.

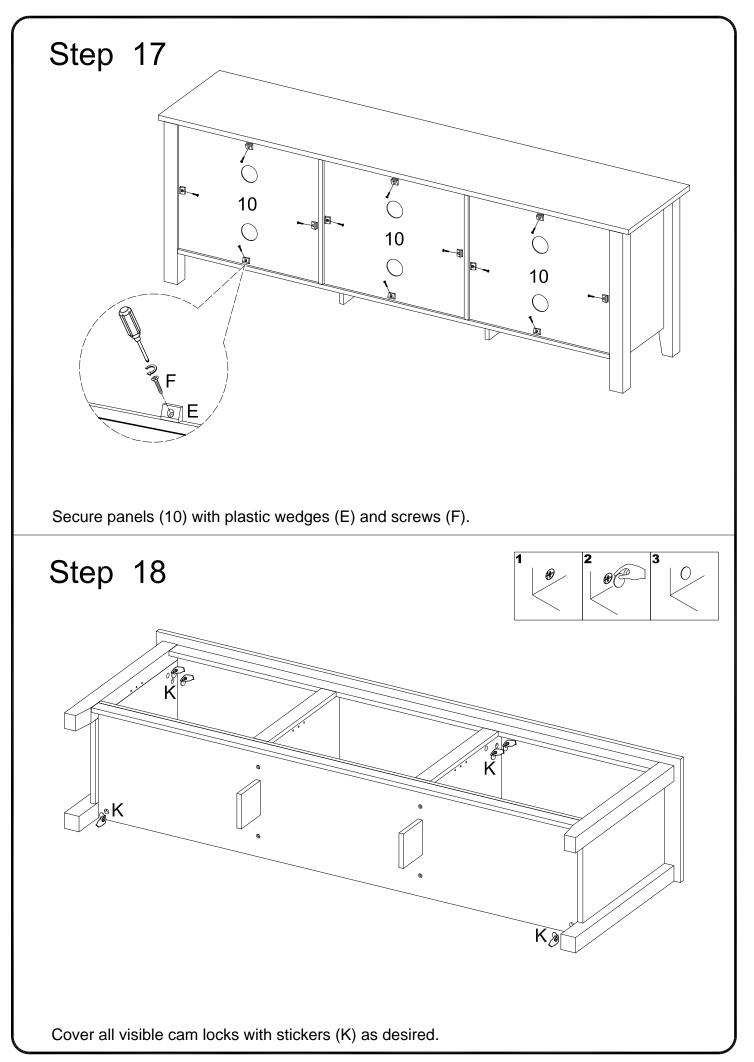

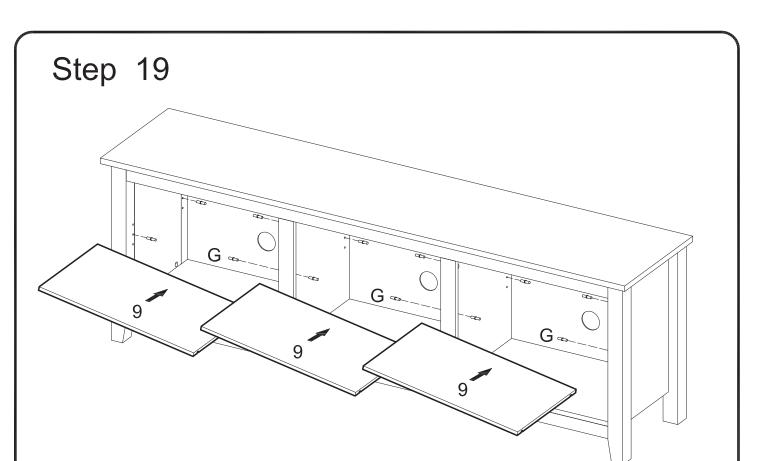

Insert shelf support pins (G) into the assembly at desired shelf heights. Carefully place shelves (9) on shelf support pins (G).



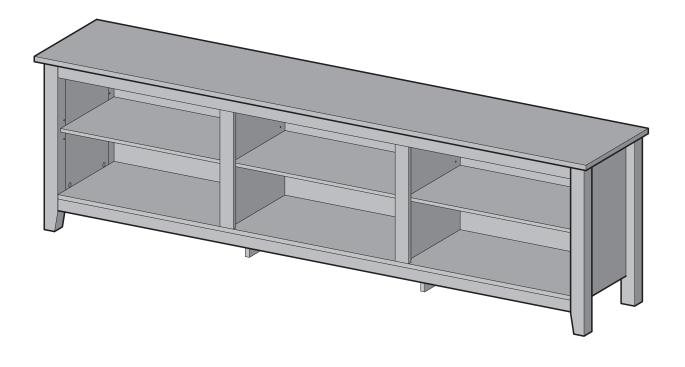

Final Assembly