 









NEWPORT ENTERTAINMENT CENTER

NEWPORT

ASSEMBLY INSTRUCTIONS

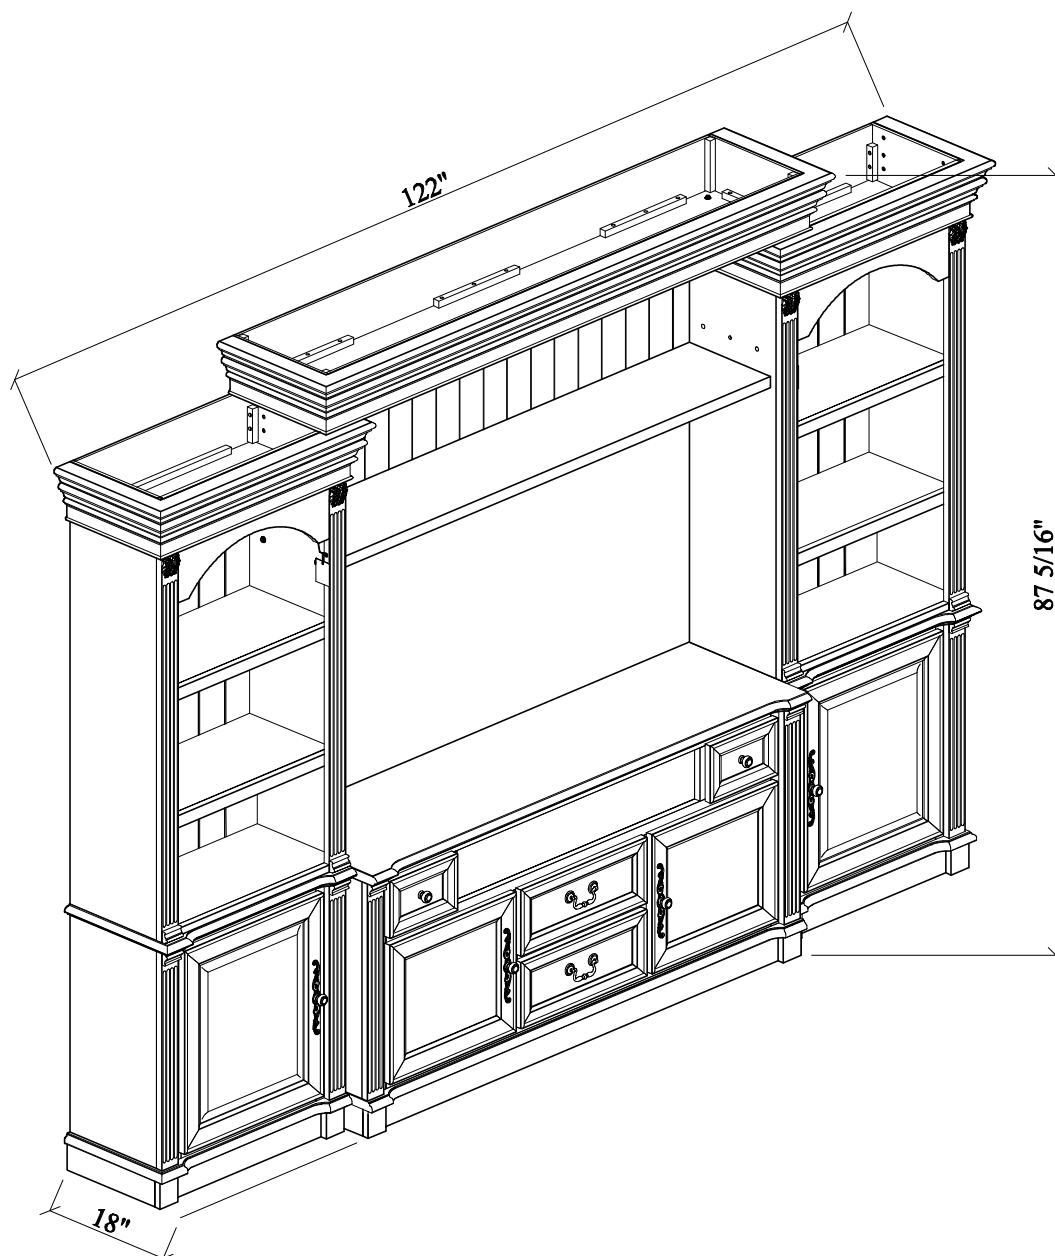

     PARTS LIST

LABEL	PICTURE	DESCRIPTION	QTY
A		TV Console	1
B	 or 	Left/ Right Buffet	2
C	 or 	Left/ Right Hutch	2
D		Top	1
E		Shelf	1
F		Back Panel	1

HARDWARE

LABEL	PICTURE	DESCRIPTION	QTY
1		Bolt M6 x 35mm	8
2		Spring Washer Ø6/12 x H1.5mm	8
3		Flat Washer Ø6/16 x H1.5mm	8
4		Allen Key 4mm	1
5		Flat head Screws M3 x 15mm	4
6		Rounded head Screws M3 x 20mm	12
7		Anti Tip Kit	2
8		Button Ø10	12



Read instructions cover to cover



Have two adults on hand for assembly



 
Do not assemble on flooring or carpet. Assemble on a clean non-marring surface (ex: packing foam)




Save all packaging until assembly is completed

ASSEMBLY STEPS


STEP 1

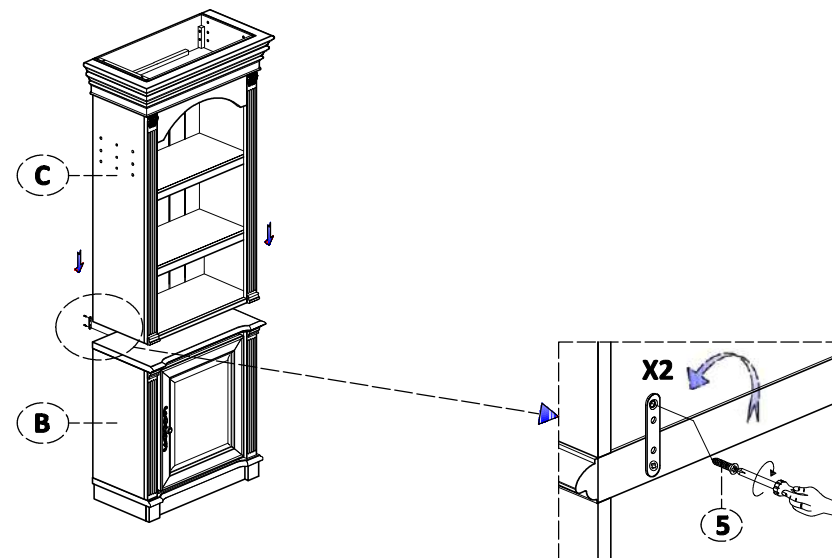

 
STEP 2

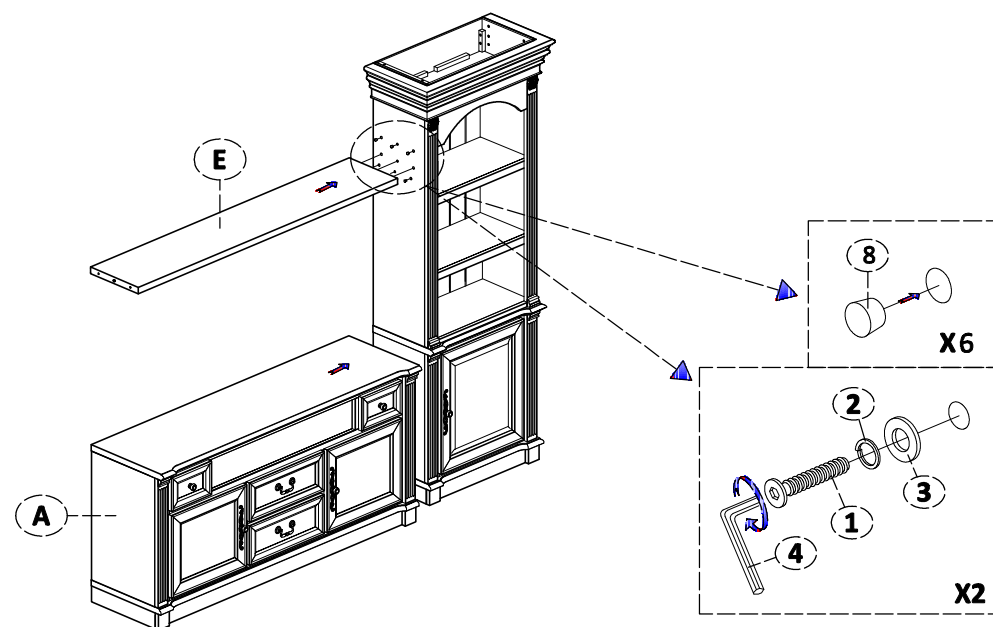

 
STEP 3

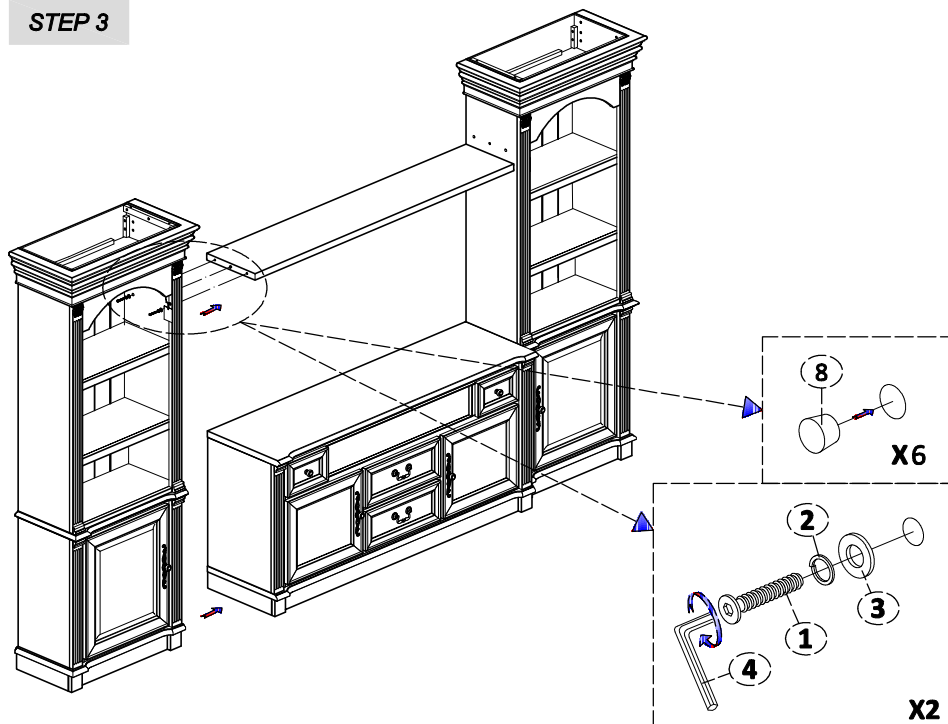




 
STEP 4

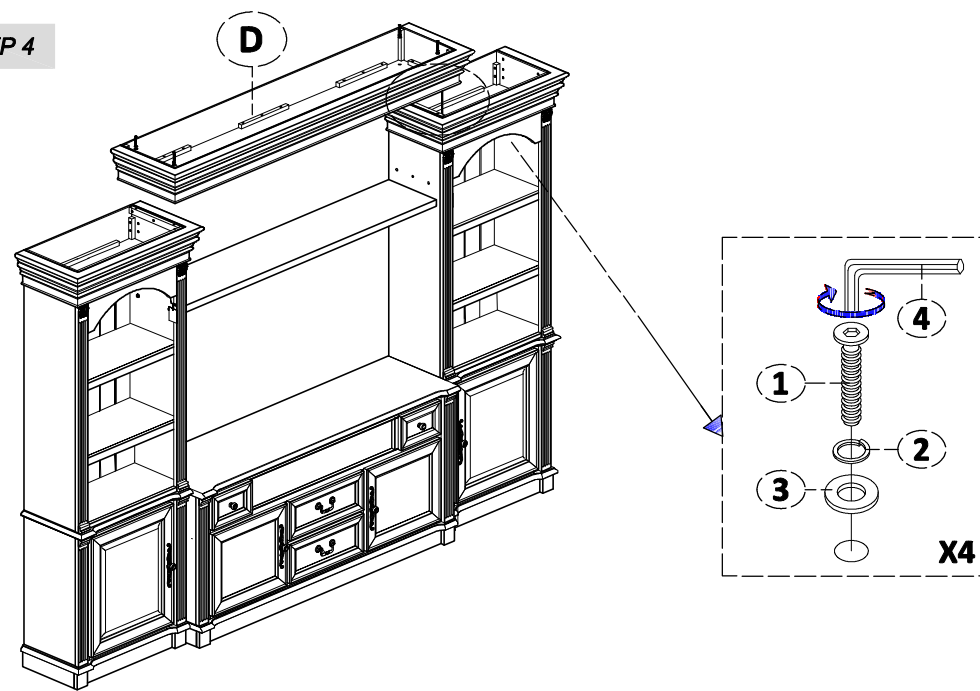

 STEP 5

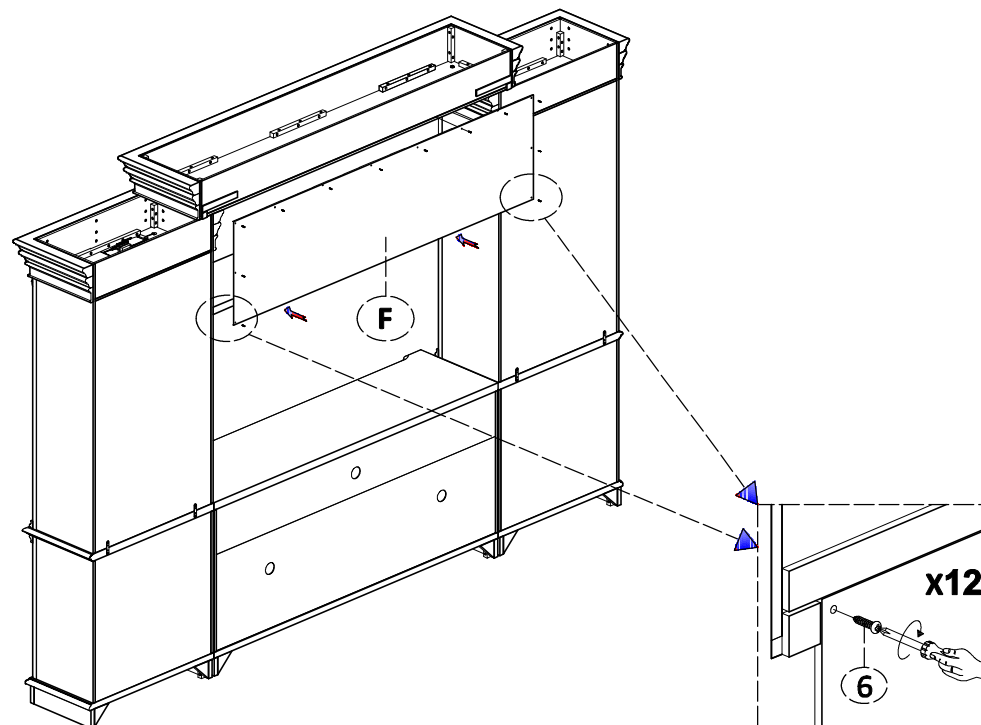


    STEP 6

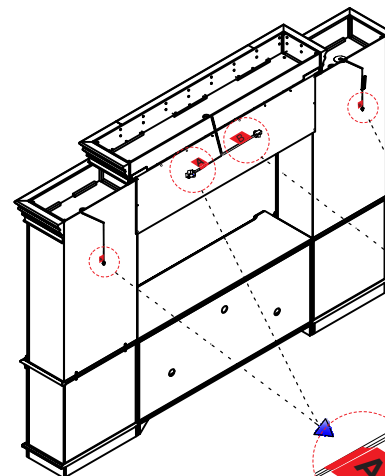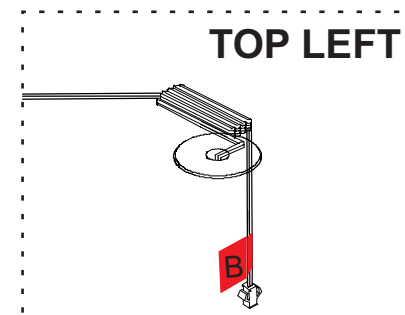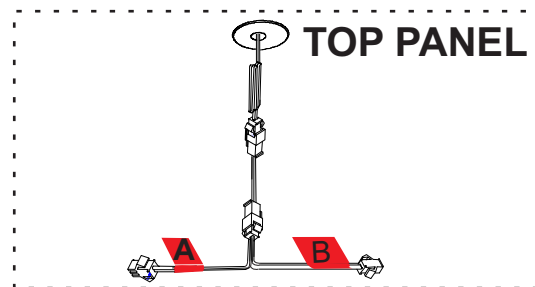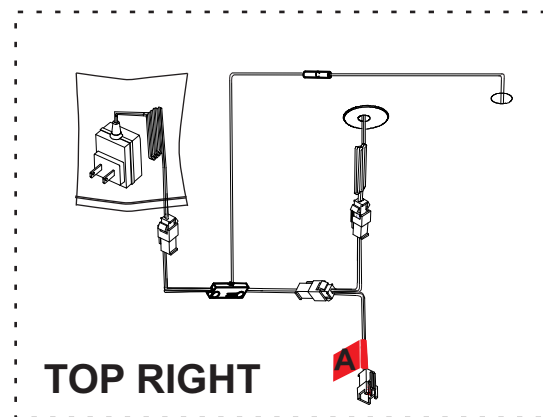


Connect the two wire heads together

 
Make sure they click shut.

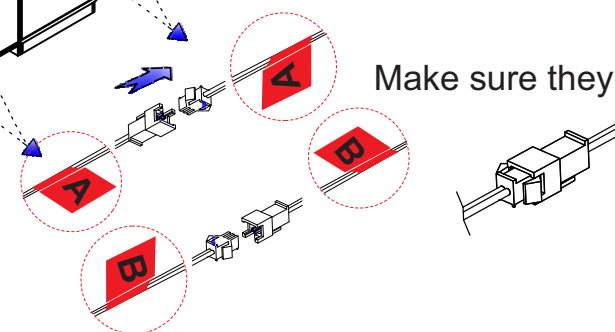

 
STEP 7

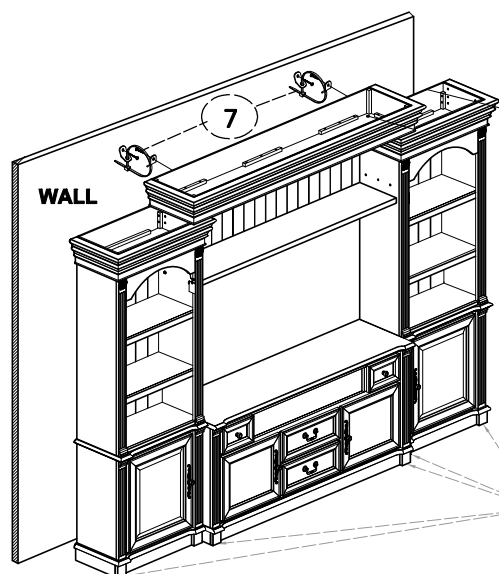

WALL

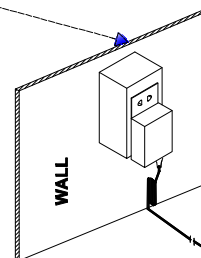 

 Finish the installation before plugging into the outlet.

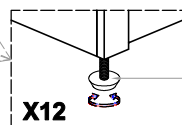

**Adjusted
Leveler**