

CabinetBed™ INC. Your Space Saving Sleep Solution™

Park Avenue And Country Style

Assembly Instructions




1) Place the drawer pedalstall onto a flat surface. Use the adjustable levelers on both sides and ensure an even level on the floor.



2) Place Cabinet on top of the drawer pedalstall. Line up predrilled holes and use allan key (provided) to screw in bolts. There are 3 per side.



3) Fully extend the bottom drawer.

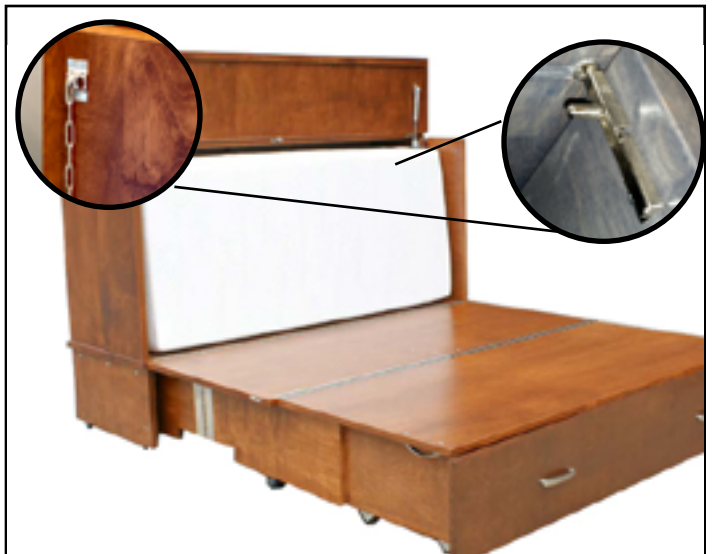

4) Unlatch the upper side latches on the inside of the cabinet, then unhinge safety latch and unfold deck onto the drawer pedalstall.



5) Pull out mattress, if desired open the side wing doors for a more open feel.



6) To fold back into cabinet, reverse steps 5 and 4. ENSURE THE SAFETY LATCH IS ON. Then fold in the bifold rails as shown above. Push in drawer pedestal until flush with cabinet, then lock side latches.