


## BIFOLD FUTON FRAME

Instructions apply to all sizes: Chair • Full / Double

Love seat @Queen

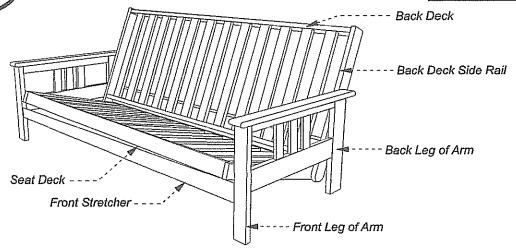


#### Parts in this box. 1A




Stretchers x 2 (Full size illustrated)




Side Rails x 2



Back Deck x 1 ( Full size illustrated)




Outside View



Inside View

Arms x 2



Seat Deck x 1 ( Full size illustrated)

#### 1B Hardware in this box



Barrel nuts x 12 pcs




Washers x 2 pcs



16mm Bolts x 4 pcs For the Stretcher Bracket.



60mm Bolts x 8 pcs For the Side Rails and Back Leg.



100mm Bolts x 4 pcs For the Front Leg.



Stretcher Brackets x 4 pcs



Clepis Pins x 2 pcs



Locking Pins x 2 pcs




Wood Buttons x10pcs



Wooden Dowels x 4 pcs



Allen Key x 1 pcs

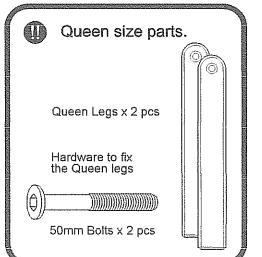


## 2A Prepare Arms for Assembly.


**NOTE:** The hardware for these steps is included with the Arms. Some Arms may not have these features, so just skip these steps.

#### Fasten Stretcher Brackets to Arm.


- A. Insert the Stretcher Bracket Cleat into the hole provided.
- B. IMPORTANT: Don't fully tighten Bracket until Stretchers are all in place for easy alignment.
- C. Each arm requires two brackets, front and back.

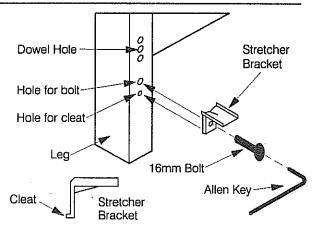

#### Fit Wooden Dowels.

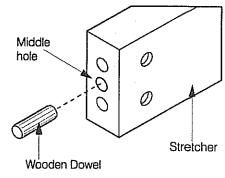


Tap dowels all the way into the middle hole, at each end of the Stretchers

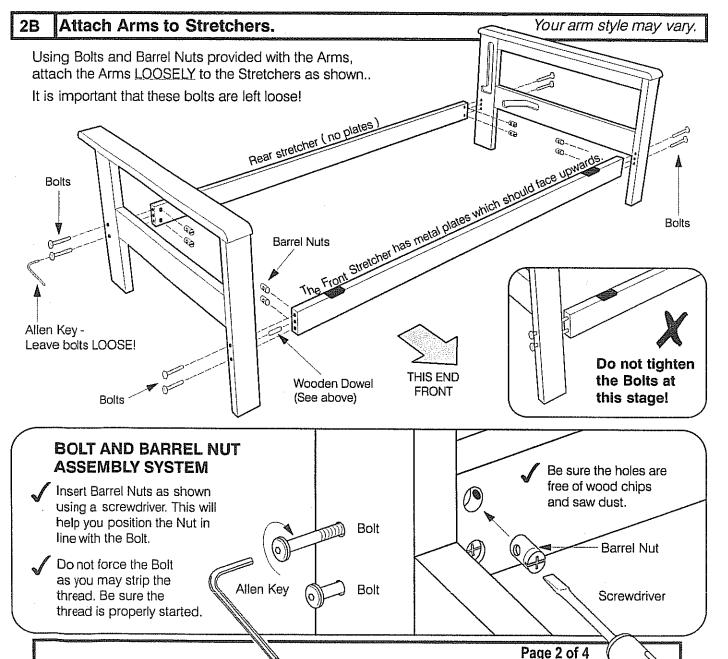

## 3A Attach the Back Side Rails to the Back Deck.


Using the Bolts and Barrel Nuts packed to attach the Side Rails to the Back Deck. Fit Wood Buttons into Bolt Holes as shown below.

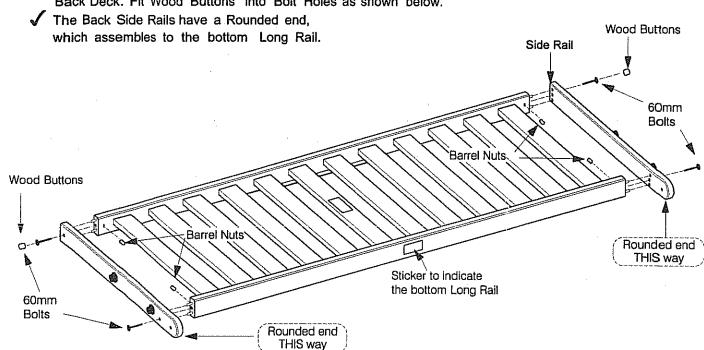

After tightening all the Bolts on Back Deck, push fit or lightly tap the Wood Buttons into the holes as shown.


The Back Side Rails have a Rounded end, which assembles to the bottom Long Rail.

## 3B | Seat Deck: No assembly required

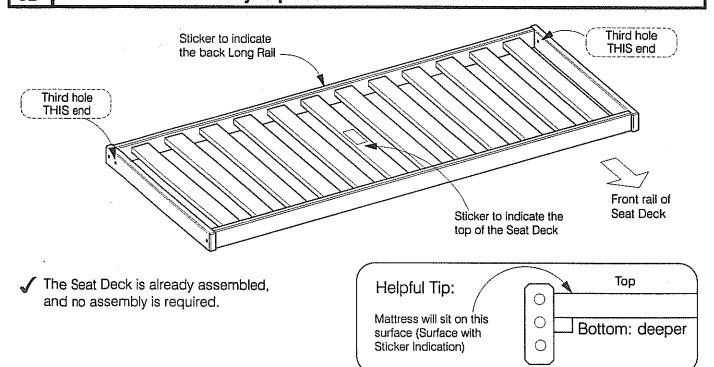


## Fit Back Deck into Position.


 A. Insert the Back Deck lying flat. Insert one end first, then gently lower the other end into position.



- This step can be tricky it is best done with two people
- Remember that the Bolts on the Arm should be LOOSE.
- ✗ Be careful not to scratch the Arms with the Plastic Runners when you lower the ends of the Back Deck.

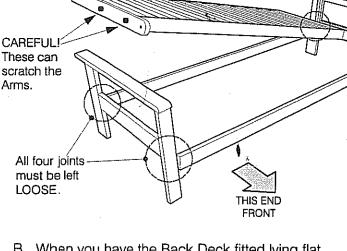


B. When you have the Back Deck fitted lying flat, tighten all the Bolts. From the back, lift the Back Deck to upright as illustrated.

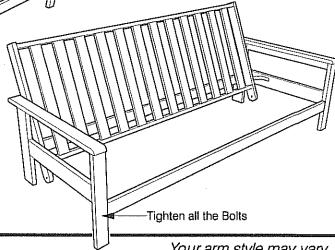


Your arm style may vary

Fit Seat Deck into Position. **4B** 

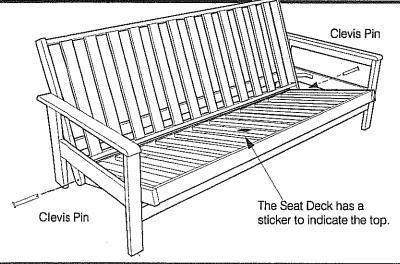


Fit the seat deck between the Arms and into the Back Deck as shown. Use the Clevis Pins to connect the two decks. Secure with a Washer and Locking Pin.

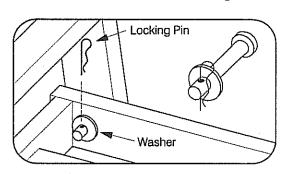


#### 4C For Queen size frame only: Attach short legs

Your arm style may vary

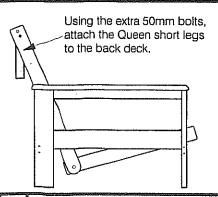

Important Note: Orientation of the Queen

Short Leg, note that the exposed part of the metal nut in the leg should be oriented away from the bolt for proper assembly.

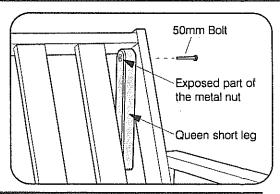

See separate page enclosed in this box for Operating Instructions.

Page 4 of 4

#### **OPERATING INSTRUCTION**

# QEAPA POTO U


## FUTION FRAME


## BIFOLD BODY

Instructions apply to all sizes:

Chair • Full / Double
Love seat •Queen


Assembled views

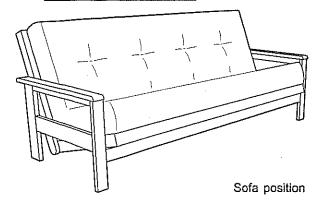

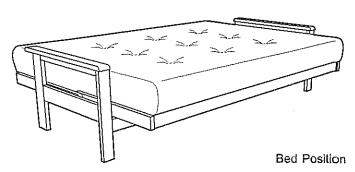


2 Sofa and Lounge to Bed Position


Your arm style may vary.

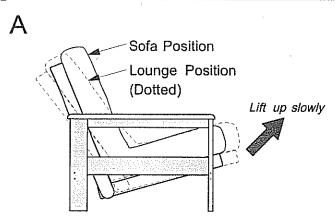

Pull up gently, and let the back drop down slowly.




Lock in bed position.




Queen size only:- Pull out the short legs.

Bed to Lounge Position




Pull out to unlock - Don't forget!

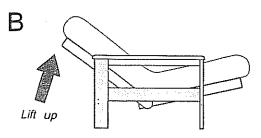

From the back: Lift up to lounge position.

4 Lounge to Sofa Position

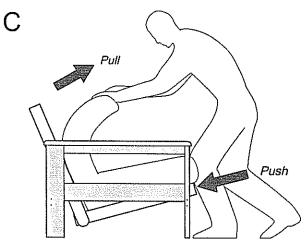

From the front: Pull back on the mattress and push into fina position with your leg.