

# CabinetBed™ INC. Your Space Saving Sleep Solution™

## Stanley Assembly Instructions




1) Place the drawer pedestal onto a flat surface. Use adjustable levelers on both sides and ensure even level.



2) Place Cabinet on top of the drawer pedestal. Line up predrilled holes and use allan key (provided) to screw in bolts. There are 3 per side.



3) Pull out the bottom drawer until its fully extended

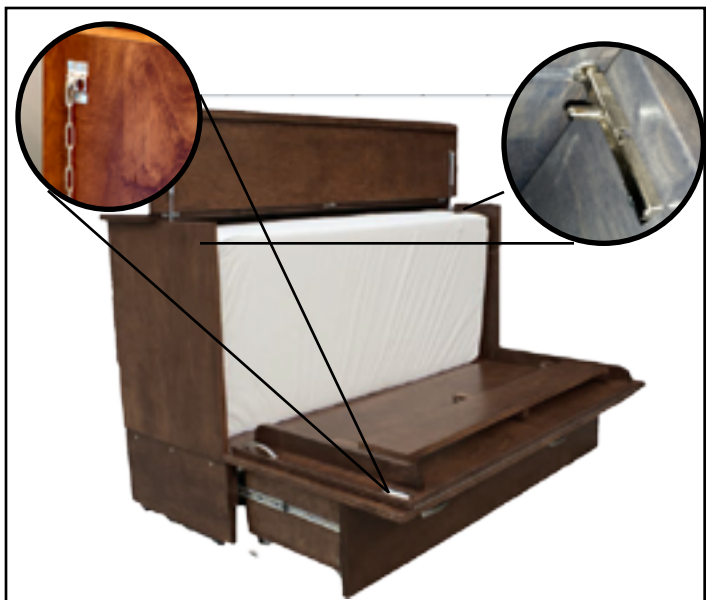

4) Unlatch the upper side latches on the inside of the cabinet, then unhinge safety latch and unfold deck onto the drawer pedestal.

