

Assembly Instructions

Ginger Full Full Bunk Bed

N&D 1107

SAFETY WARNING

1. Follow the information on the warnings appearing on the upper bunk end structure and on the carton. Do not remove warning label from bed.
2. Always use the recommended size mattress or mattress support, or both, to help prevent the likelihood of entrapment or falls.
3. Surface of mattress must be at least 5 in. (127 mm) below the upper edge of guardrails.
4. Do not allow children under 6 years of age to use the upper bunk.
5. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
6. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
7. Always use the ladder for entering and leaving the upper bunk.
8. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
9. Use of a night light may provide added safety precaution for a child using the upper bunk.
10. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
11. The use of water or sleep flotation mattresses is prohibited.
12. **STRANGULATION HAZARD**—Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hooks, belts and jump ropes.
13. Keep these instructions for future reference.

SIZE OF MATTRESS AND FOUNDATION:


Use only mattress, which is 53" - 54" width and 74"-75" long on upper bunk (full size.)
Ensure that the thickness of the mattress does not exceed 6" and that the mattress surface is at least 5" (127mm) below upper edge of guardrails.

Replacement Parts:

Replacement parts, including additional guardrails may be obtained from any [Night & Day Furniture Dealer](#).

Certified:

This bunk bed conforms to all applicable consumer product safety standards
16 CFR PARTS 1213, 1500, 1513 and ASTM F-1427

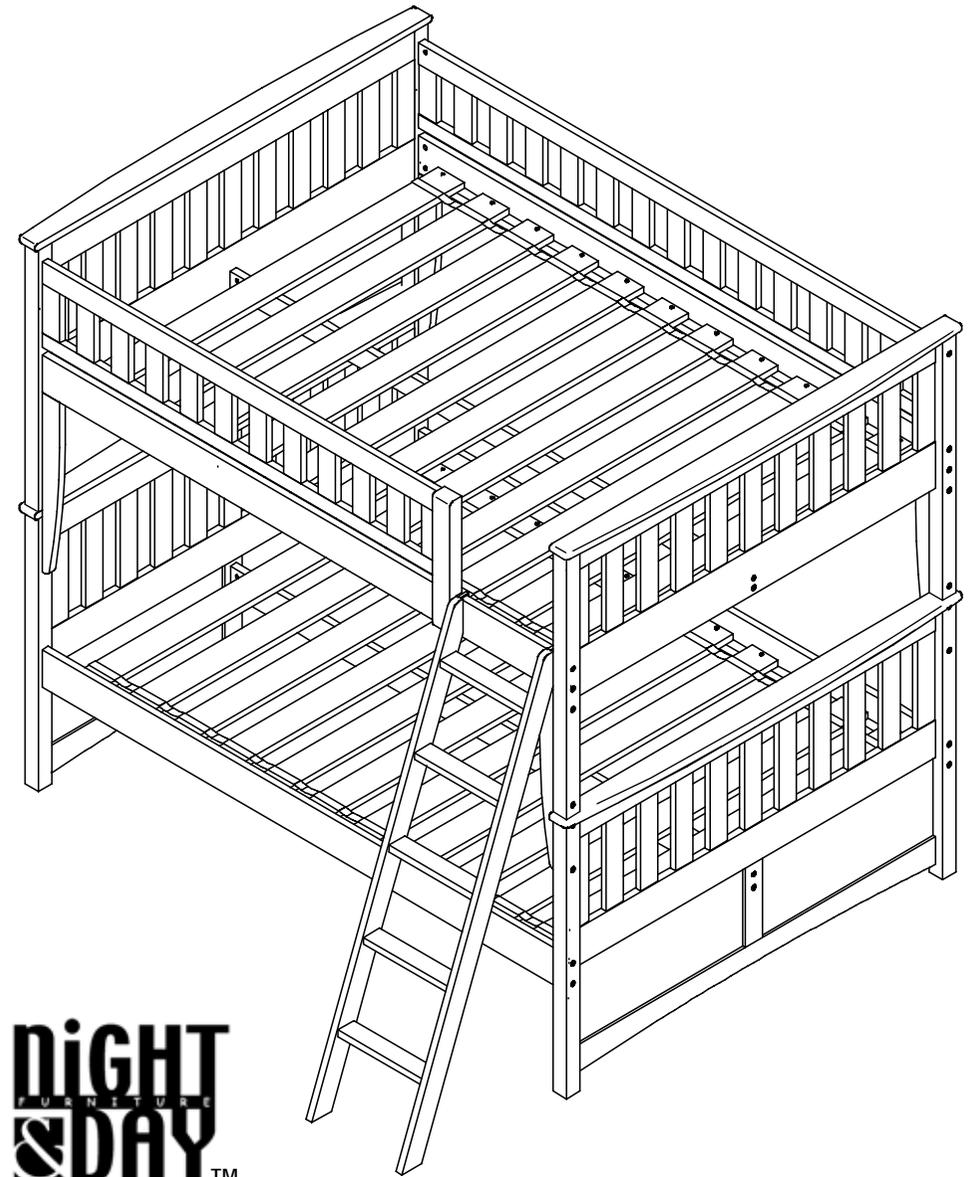


**NIGHT
& DAY**
FURNITURE
TM

Assembly Instructions


Ginger Full Full Bunk Bed

N&D 0808

1A Parts in Box 1

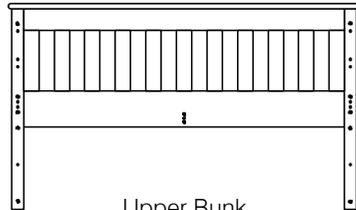



Upper Bunk
(Left Hand) x 1

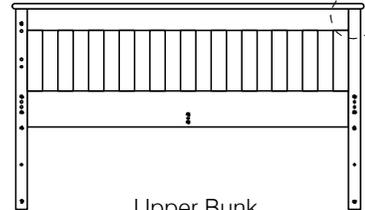

Upper Bunk
(Right Hand) x 1



Note:
No Holes!

Parts in Box 2

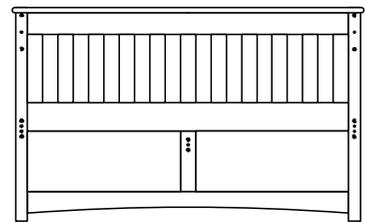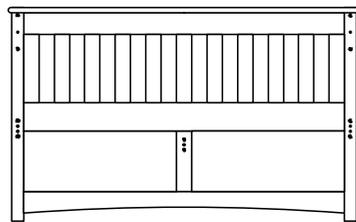

Lower Bunk
x 2

Parts in Box 4

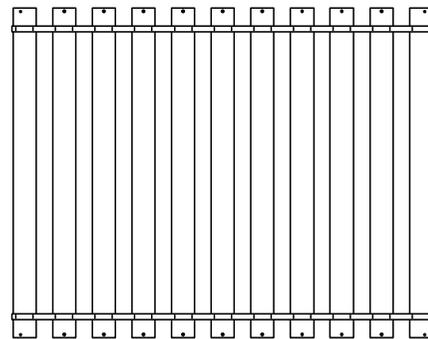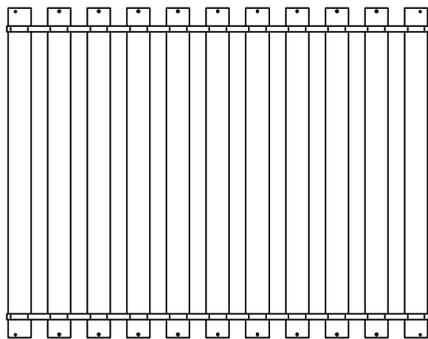

Set of Slats x 2

Parts in Box 3



Upper Stretcher (with extra holes) x 1




Stretcher x 3




Upper Middle Rail x 1




Lower Middle Rail x 1




Ladder x 1



Rear Guard Rail x 1



Front Guard Rail x 1



Brackets
x 4

1B Hardware in this Box.




90mm Bolts
x 19



60mm Bolts
x 24



30mm Bolts
x 2



40mm Threaded
Wood Bolts x 8



16mm Wood
Screws x 2




30mm Wood
Screws x 36



Wood Dowels
x 29



Barrel Nuts
x 27



Metal Tubes
x 4

Note:

Tools required for assembly:

- Allen Key (provided)
- Philips Screwdriver (not provided)




Long Allen Key
x 1


Assembly Instructions Ginger Full Full Bunk Bed

N&D 0808


2A Fit Wood Dowels to the Stretcher.

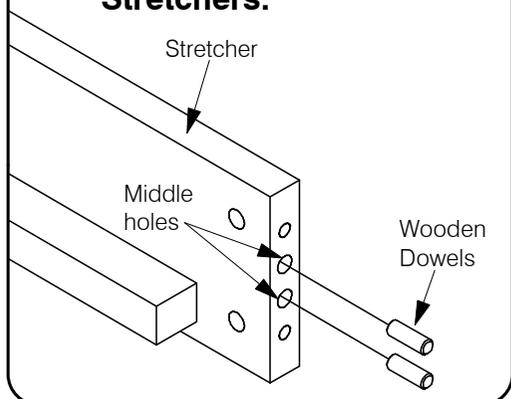

2B Fit Wood Dowel to the Middle Rail.

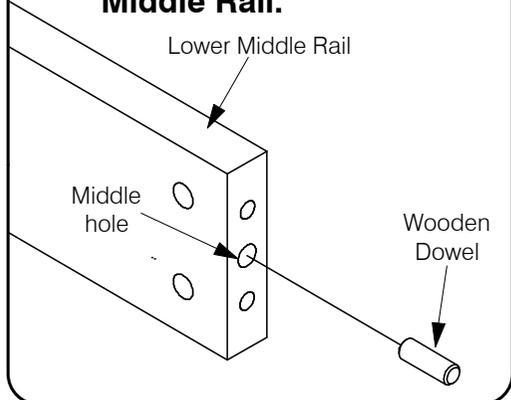

2C Attach Stretchers and the Lower Middle Rail to the Lower Bunks.

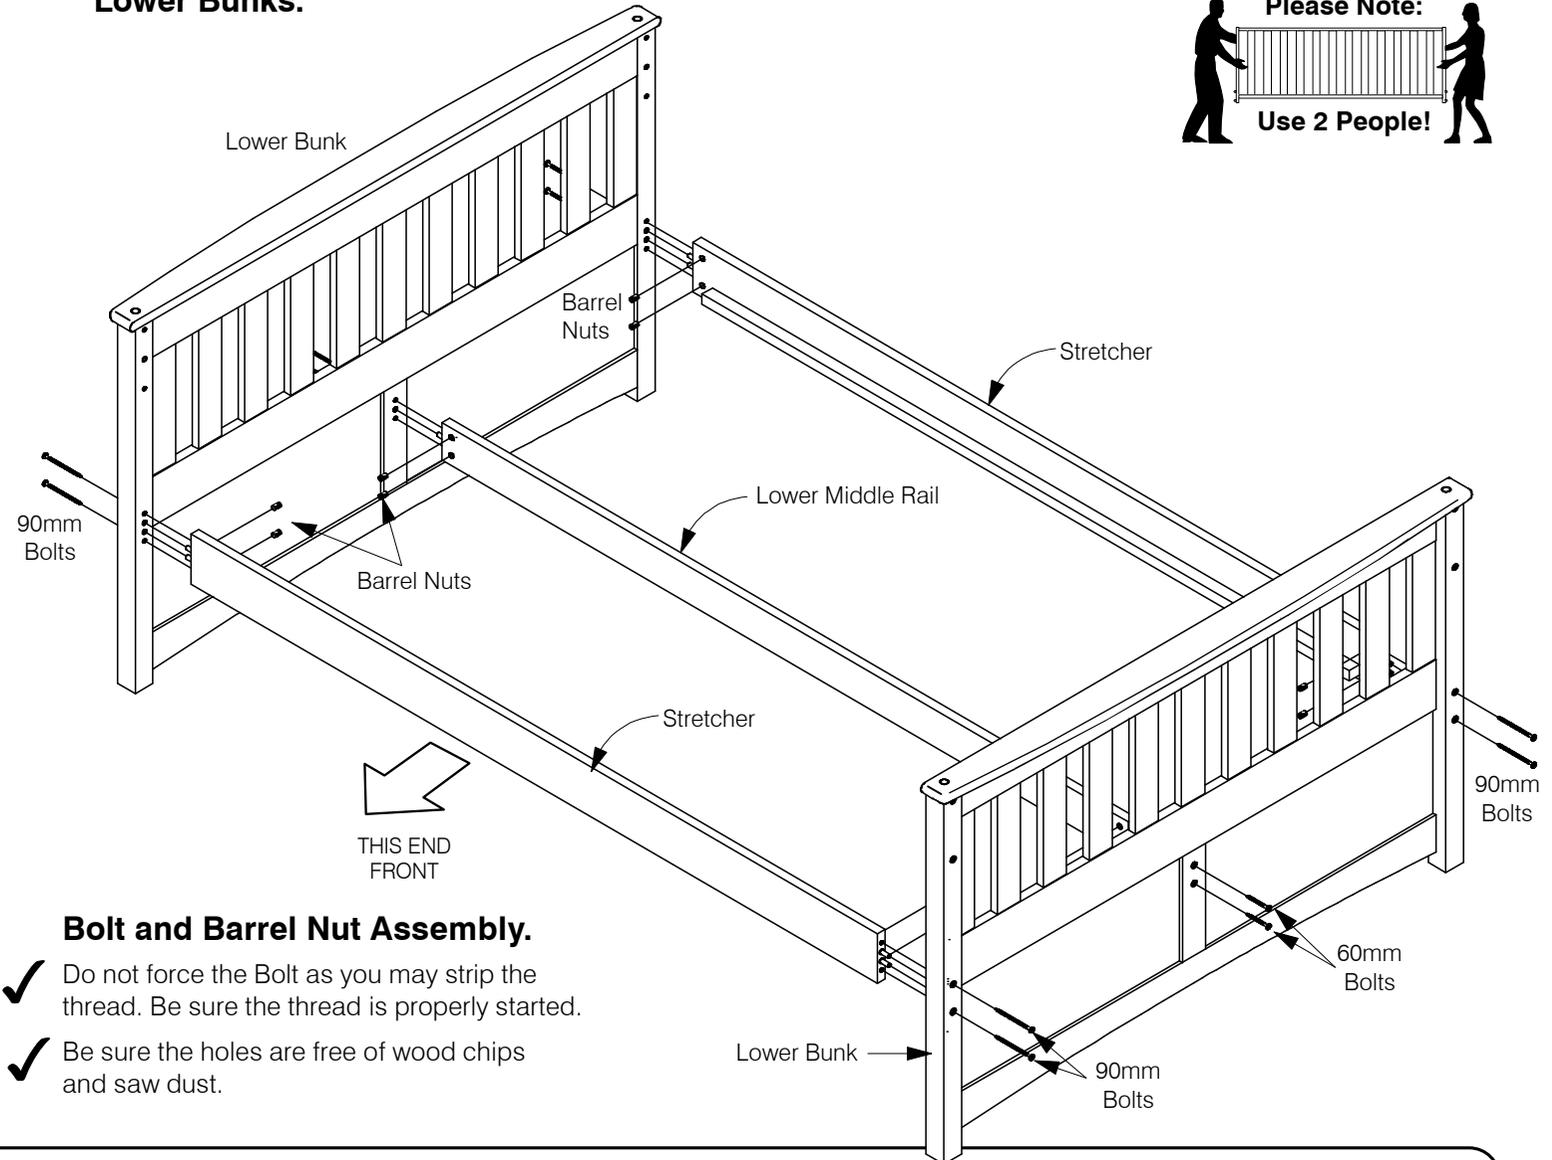

Bolt and Barrel Nut Assembly.

- ✓ Do not force the Bolt as you may strip the thread. Be sure the thread is properly started.
- ✓ Be sure the holes are free of wood chips and saw dust.


Assembly Instructions

Ginger Full Full Bunk Bed

N&D 1107


3A Fit the Slats between the Stretchers.

Lay the Slats inside the Stretchers as shown below, and Bolts in place with 40mm threaded Wood Bolts (total 4 Bolts)

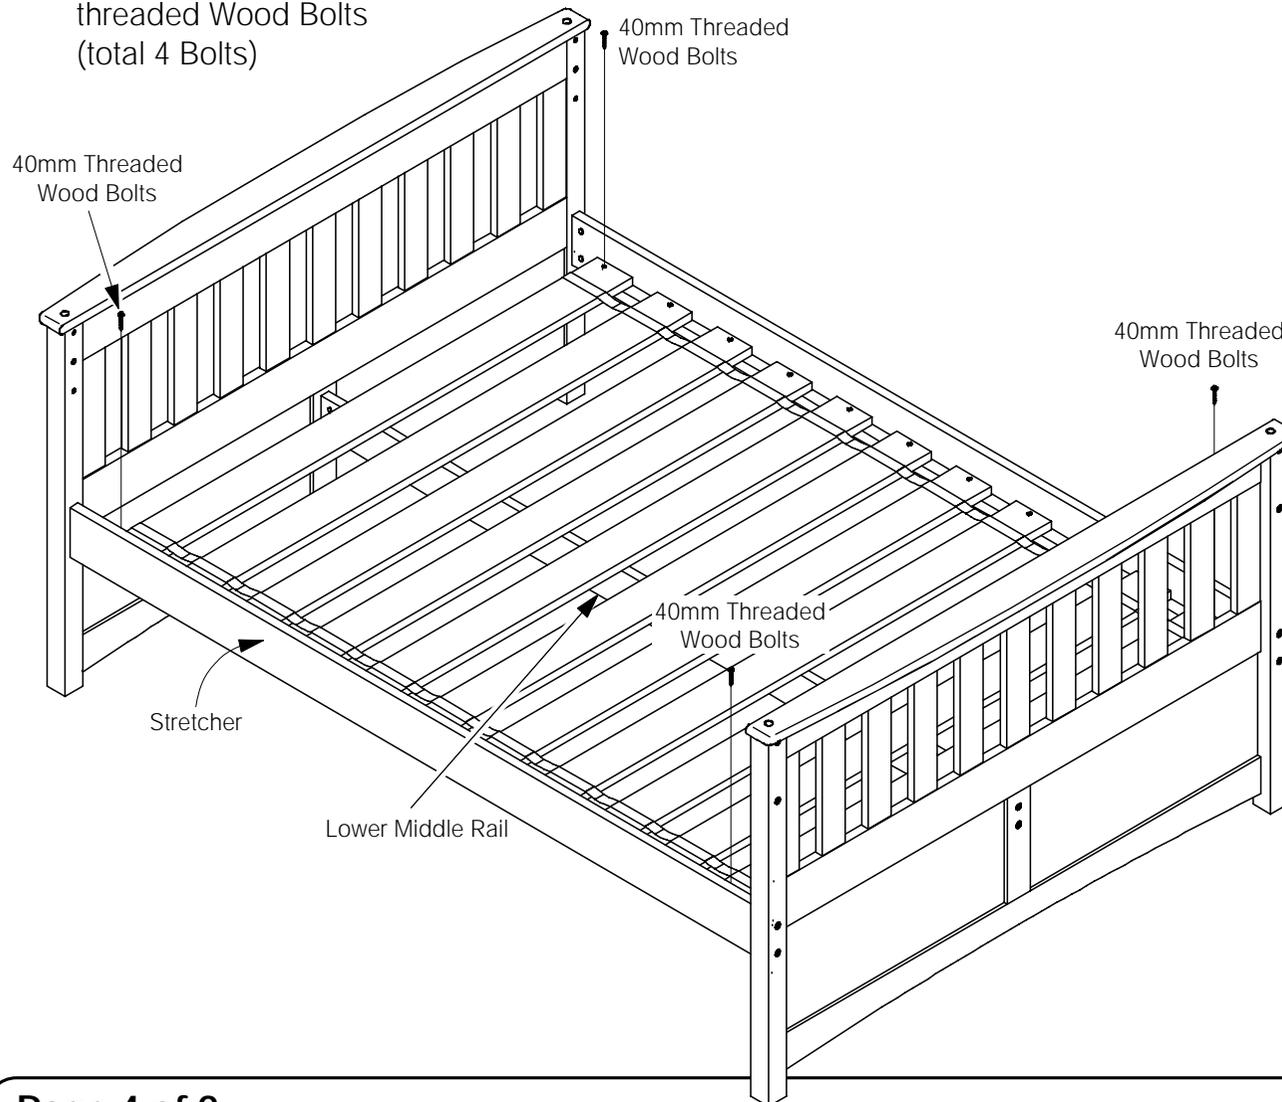

3B Fix the Remaining Slats with screws.

Use the wood screws to fix the remaining slats to the Stretchers (total 18 screws). An electric screwdriver will make this much easier.

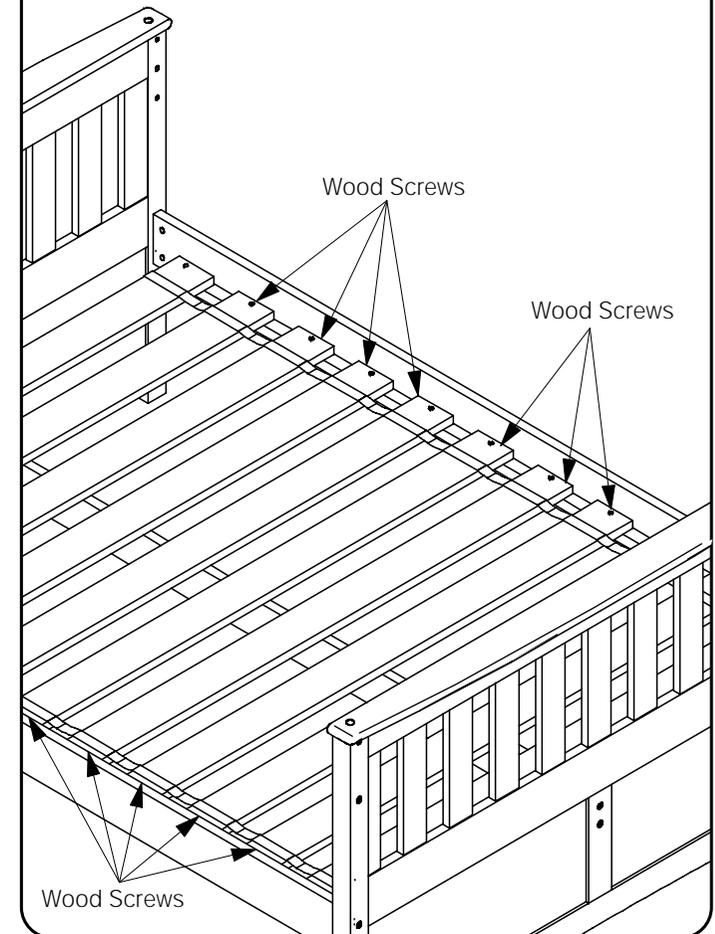


Assembly Instructions



Ginger Full Full Bunk Bed

N&D 0808

4A Fit Wood Dowels to the Upper Middle Rail.

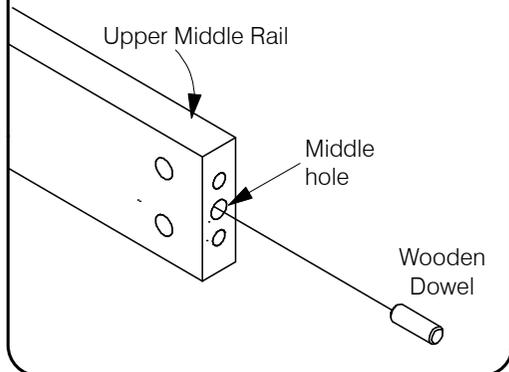

4B Attach Stretchers, Upper Middle Rail and Rear Guard Rail to the Upper Bunk.

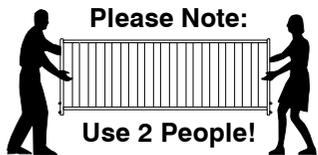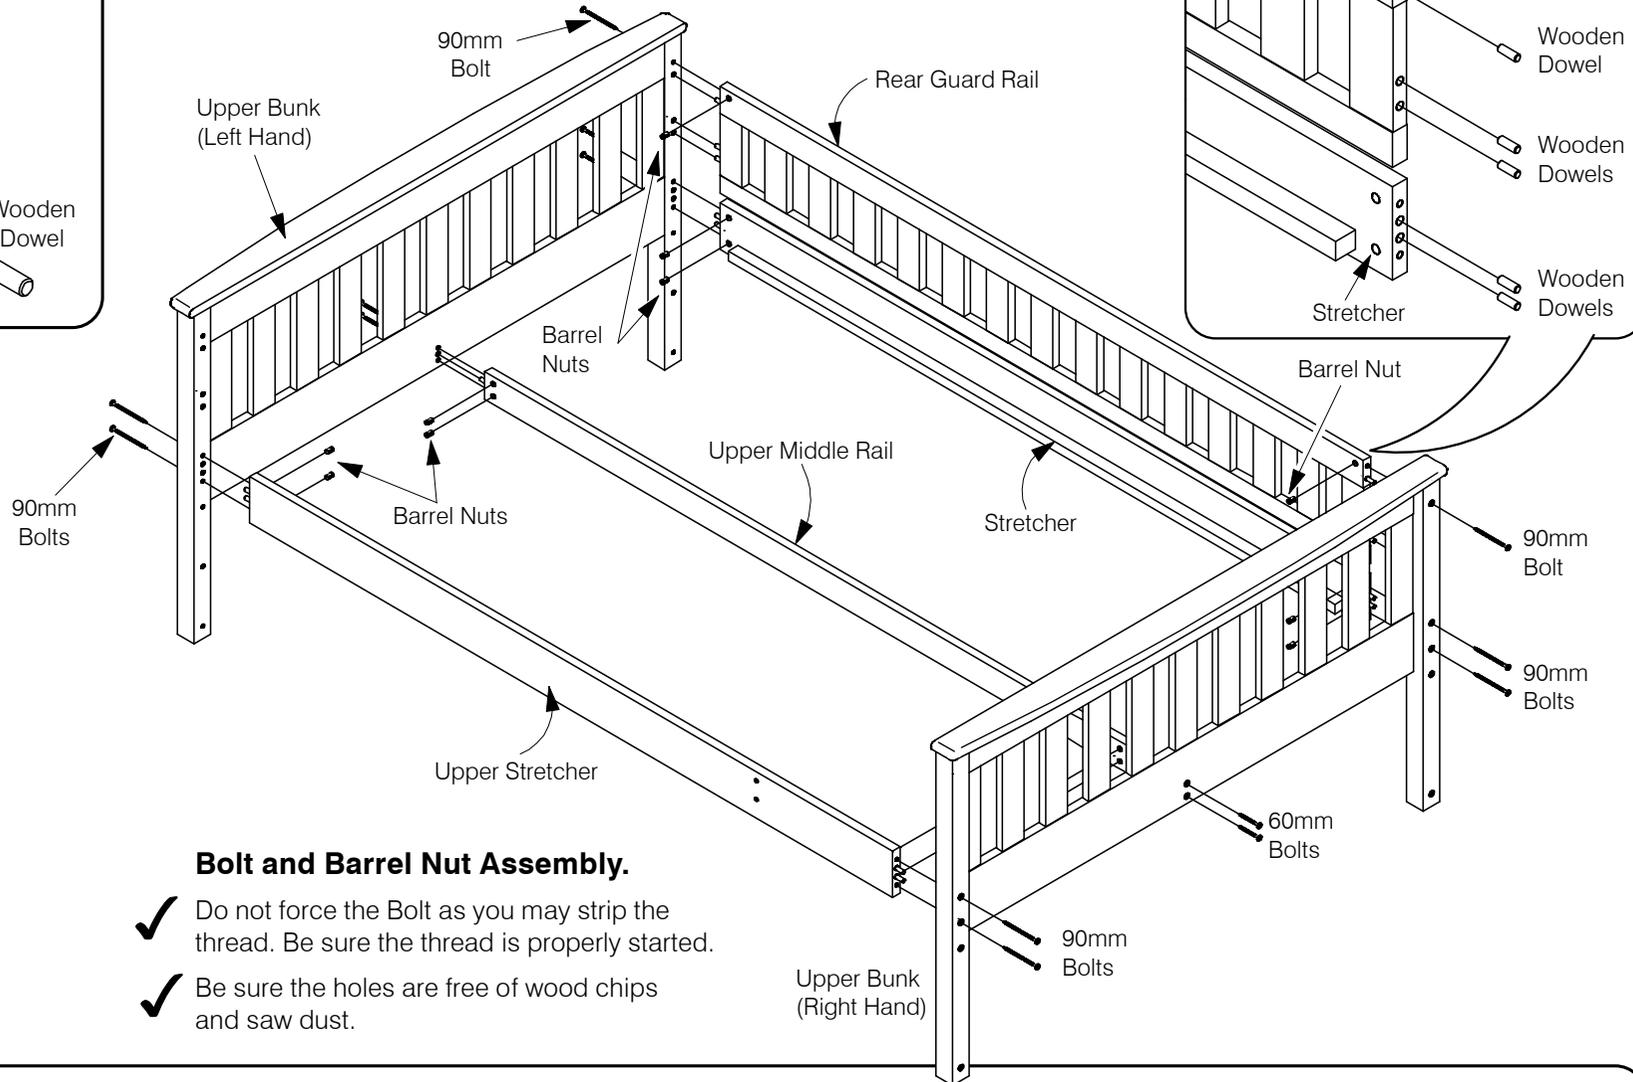

Bolt and Barrel Nut Assembly.

- ✓ Do not force the Bolt as you may strip the thread. Be sure the thread is properly started.
- ✓ Be sure the holes are free of wood chips and saw dust.


Assembly Instructions

Ginger Full Full Bunk Bed

N&D 0808

5A Attach the Front Guard Rail to the Upper Bunk.

Tap Wooden Dowels into the ends of the Front Guard Rail. Use the 90mm Bolt and Barrel Nut fix it in place. The Front Guard Rail attaches to the Upper Stretcher using the 30mm Bolts.

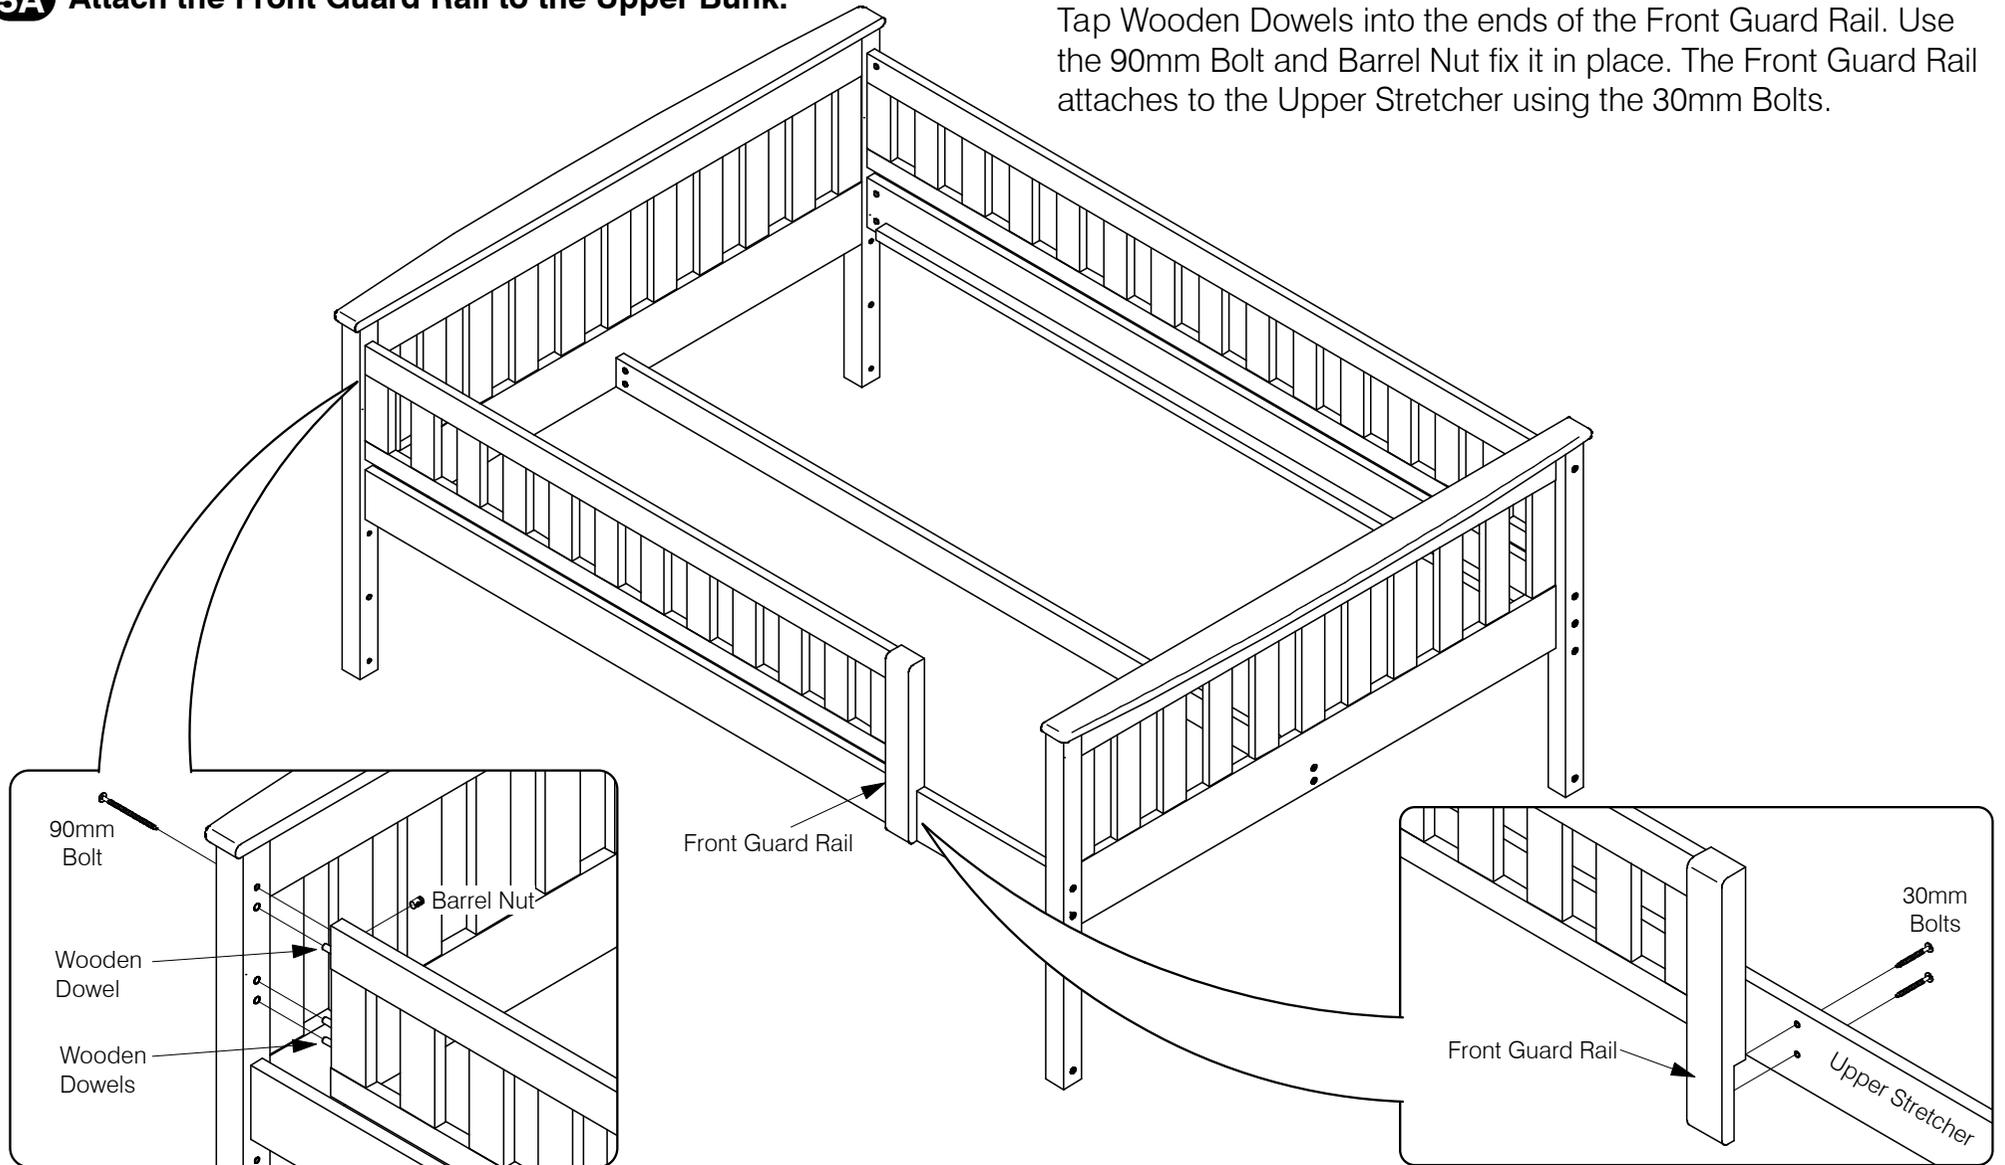


Assembly Instructions

Ginger Full Full Bunk Bed

N&D 1107


6A Bolt the Slats to the Stretchers.

Lay the Slats inside the Stretchers as shown below, and Bolt in place with the 40mm Threaded Wood Bolts (total 4 Bolts.)

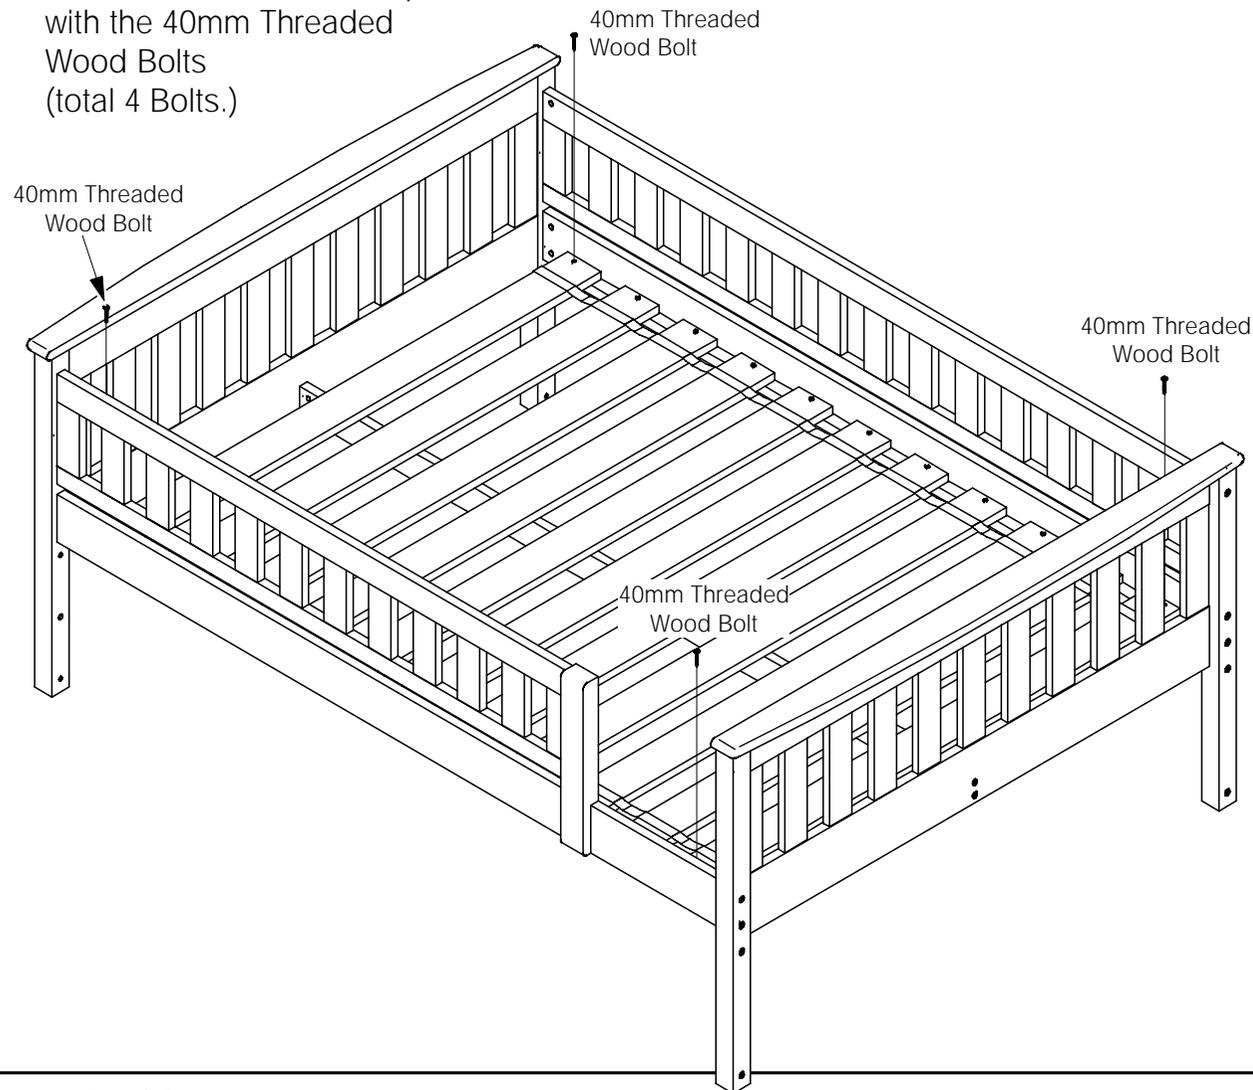

6B Fix the Remaining Slats with screws.

Use the wood screws to fix the remaining slats to the Stretchers (total 18 screws.)
An electric screwdriver will make this much easier.

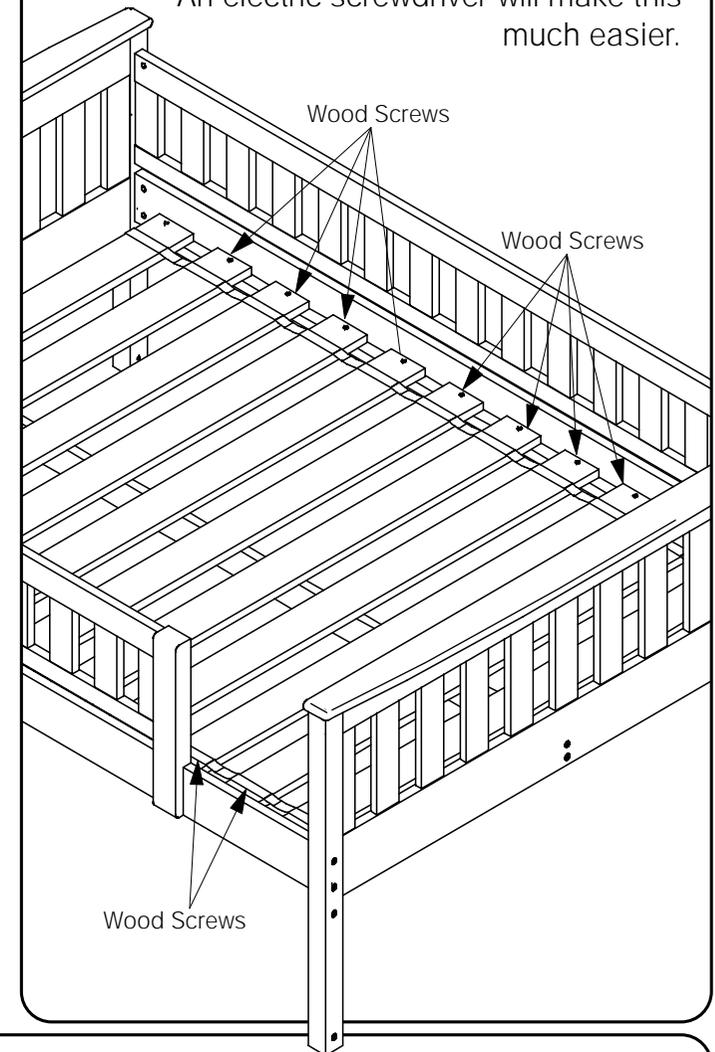


Assembly Instructions

Ginger Full Full Bunk Bed


N&D 1107

7A Fit the Upper Bunk onto the Lower Bunk.

Fit the Metal Tubes into the holes on the top of the Upper Bunk. Carefully Lift the Top Bunk onto the Lower Bunk.

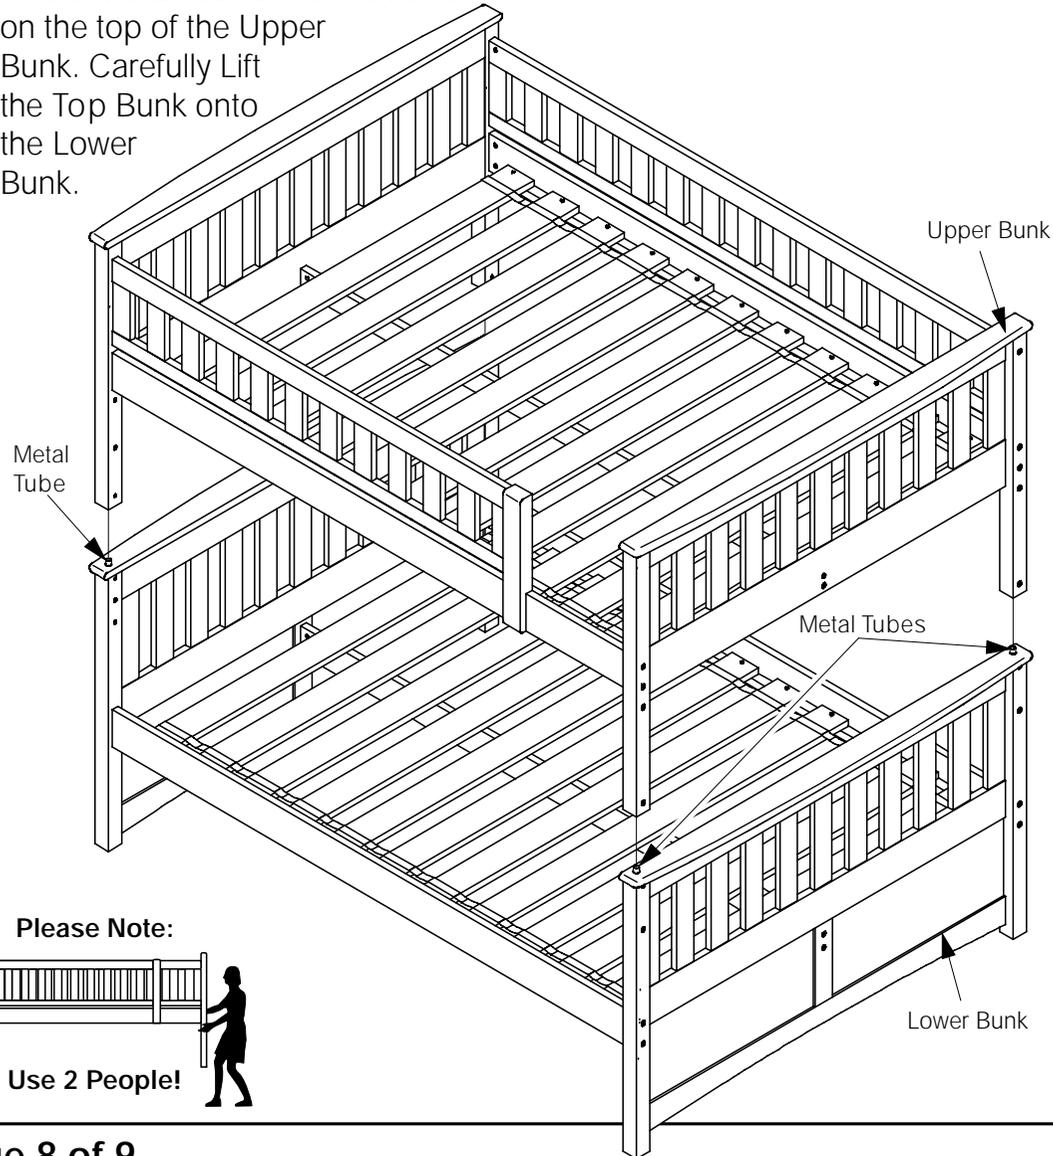


Please Note:

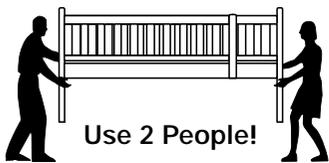

7B Fit the Brackets to the Legs.

Use the 60mm Bolts to fix the Brackets to the Lower Bunk.

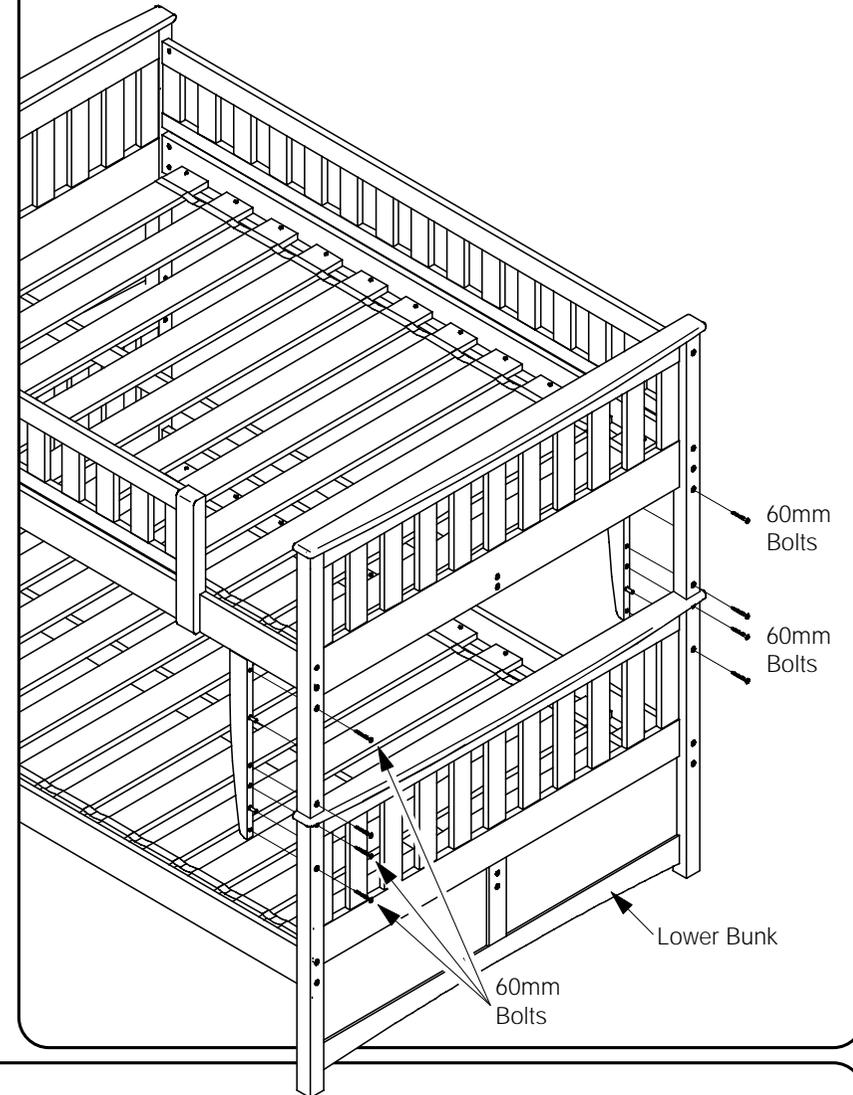

Assembly Instructions

Ginger Full Full Bunk Bed

N&D 1107

8A Attach the Ladder to the Upper Stretcher.

Finally, hook on the Ladder onto the Upper Stretcher. Use the 16mm Wood Screws to fix the Ladder in place.

- Please take note of the warnings shown on page one of these instructions, printed on the carton box and on stickers on the Bunk bed.

