



Strata Furniture: Carriage Body

CAR 0705


1A Parts in the Body Box:

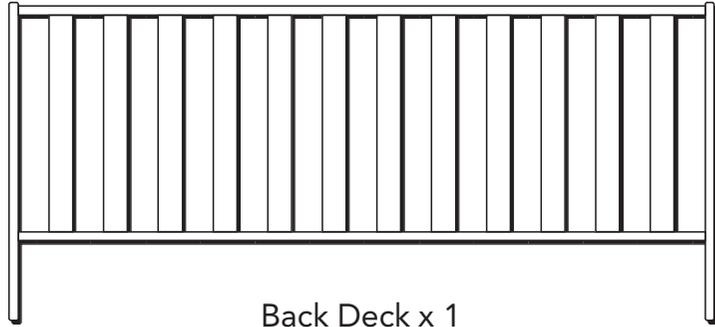

Back Deck x 1

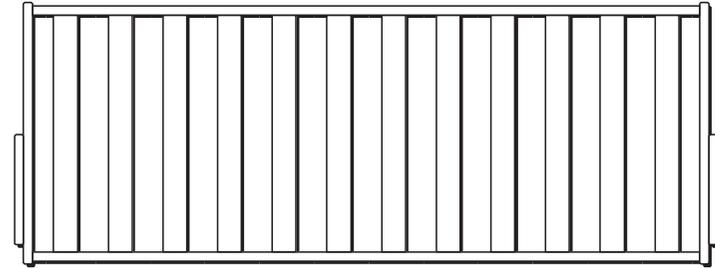

Seat Deck x 1
with the Feet attached

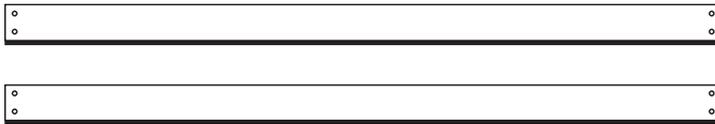

Stretcher x 2



Foot Connector Bar x 1




Advance Arms x 2


1B Hardware in this Box:



Bolts (60mm) x 6
For the Advance Arms
and the Foot Connector Bar



Long Clevis Pins
x 2




Short Clevis Pins
x 2



Washers
x 6



Locking Pins
x 4




Sleeve
x 2




Plastic Runner
x 2



Bungies
x 2



Screw
x 4



Strap
x 1




Long Allen Key
x 1

Strata Furniture: **Carriage Body**

CAR 0705

2A Fit the Wooden Dowels into the Stretchers.

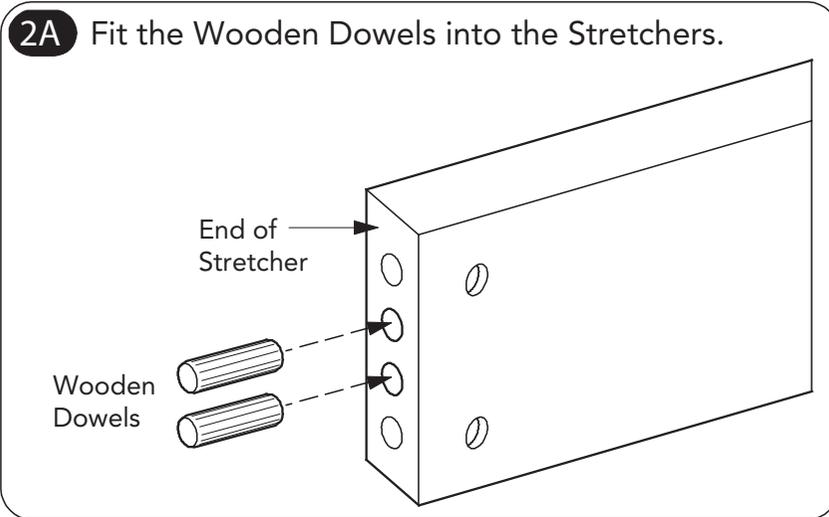


2B Attach the Arms to the Stretchers.

Be patient, it can be tricky to start the bolts in the nuts -
A screwdriver will help you line up the Barrel Nut with the Bolt.

Drive the Bolts in until they just catch the Nuts.

It is important that these bolts are left loose !


Your arm style may vary.

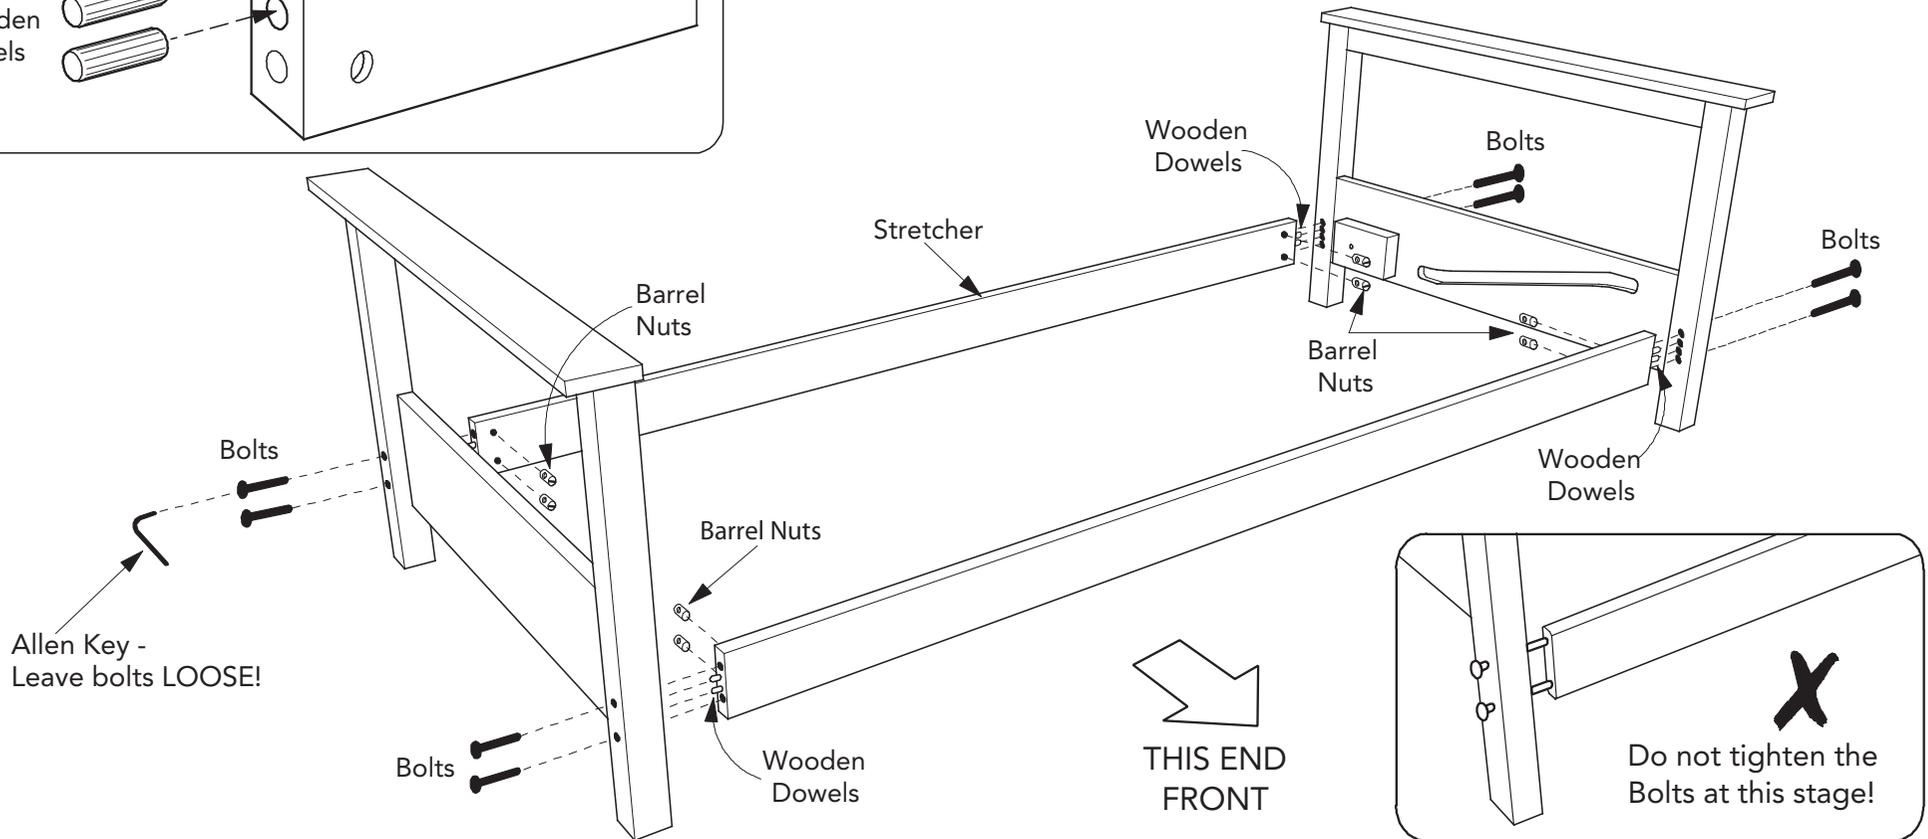

Strata Furniture: Carriage Body

CAR 0705

3A Join the Seat and Back Deck together.

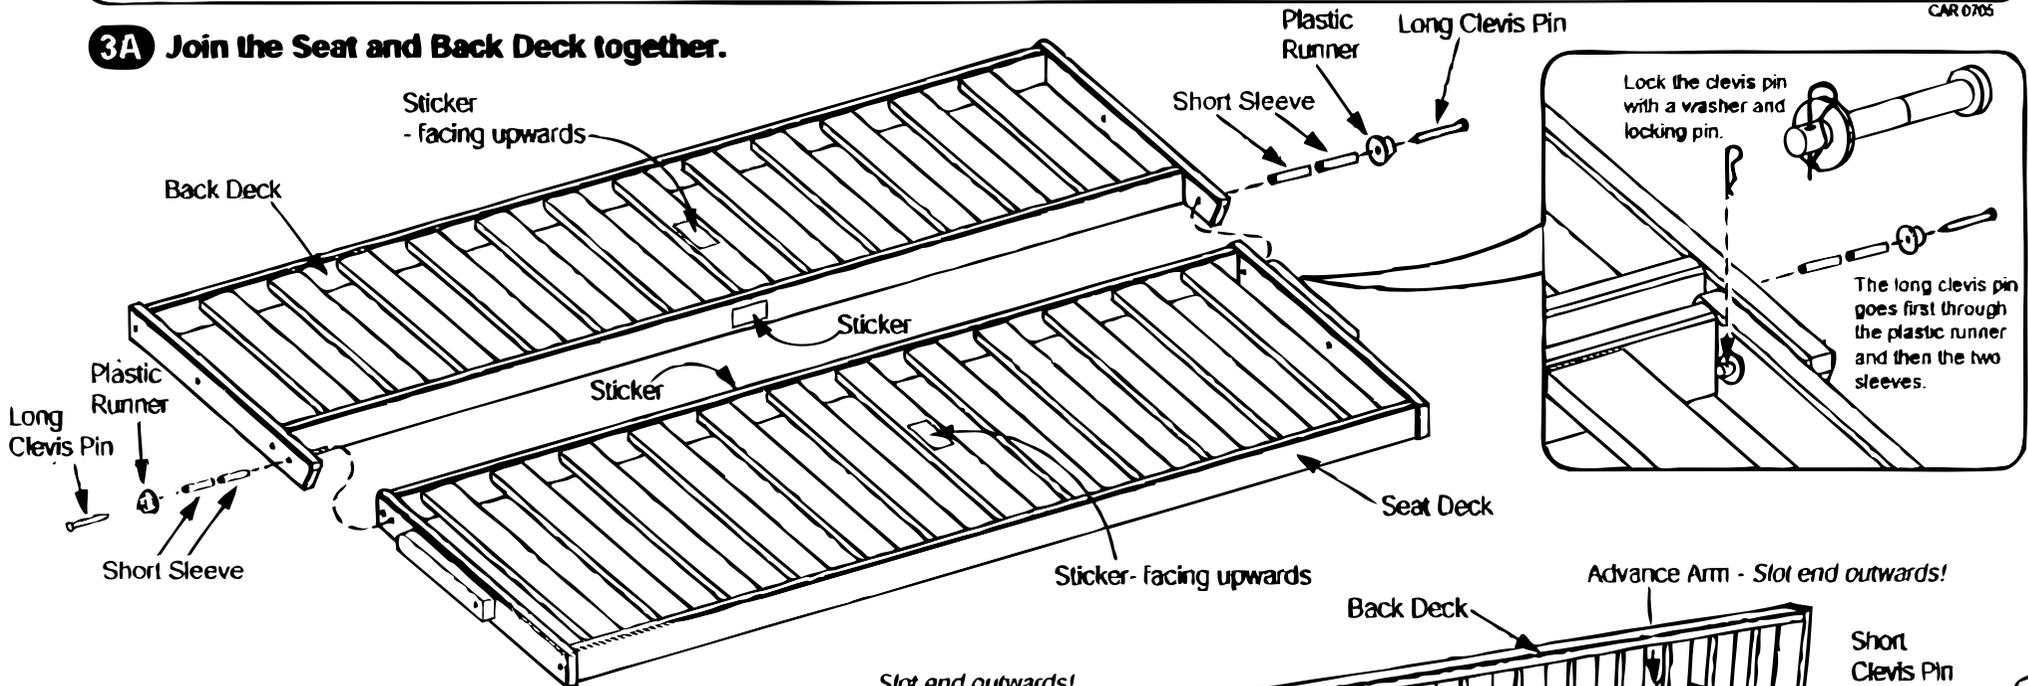


Lay both Decks out flat on the floor with the stickers facing upwards.

The Seat Deck fits inside the Back Deck as shown. Slip the Long Clevis Pin through the small end of the Plastic Runner, then the two small sleeves, through the hole in the Back Deck and the corresponding hole in the Seat Deck. Secure with a Washer and Locking Pin.

3B Fit the Advance Arms to the Back Deck.


Rotate the Back Deck upright. Slide the short clevis pin through the back deck, then through a washer and then through hole in advance arm. Secure with locking pin.

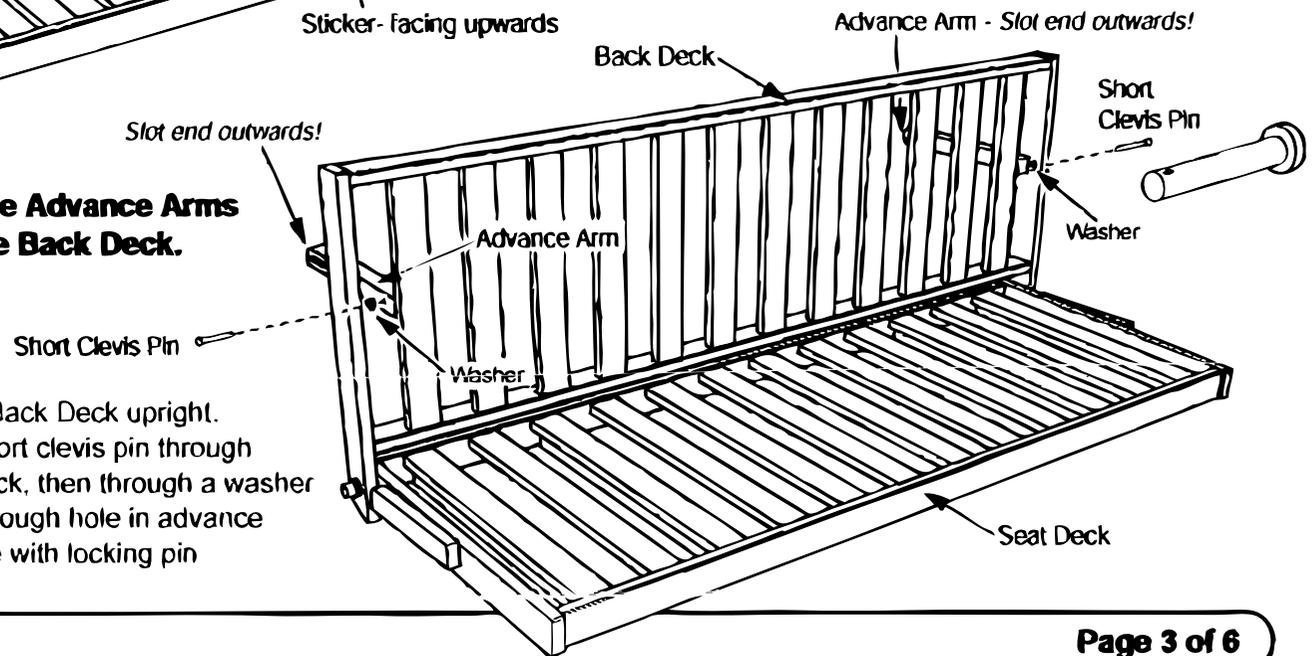

Strata Furniture: Carriage Body

FL 0602

4A Attach the Connector Bar to the Legs.

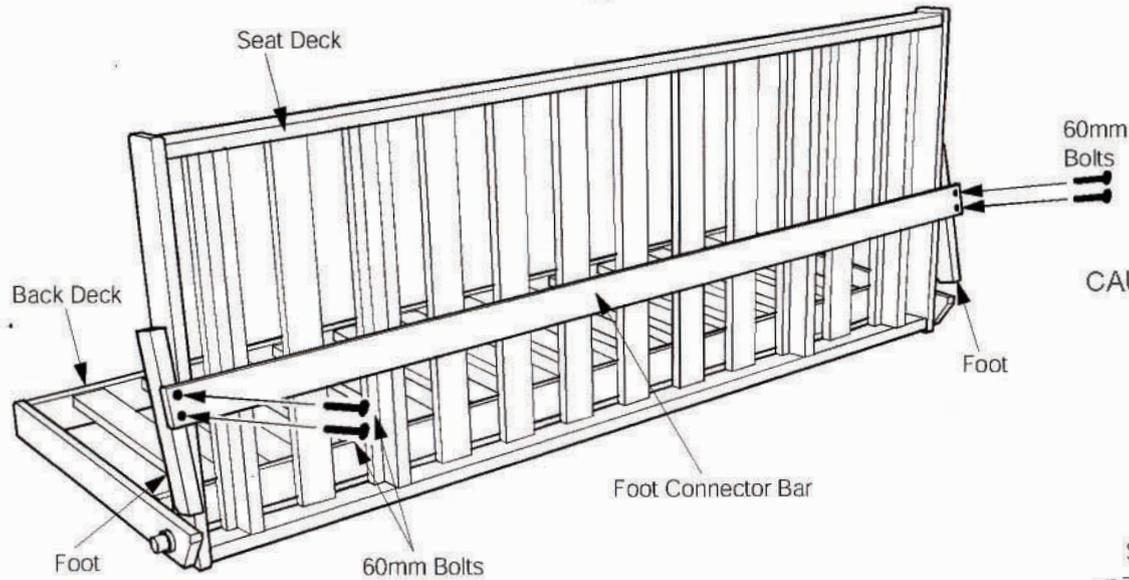

Lift the Seat Deck so it resting on the Back Deck. The feet should be pointing **DOWNWARDS**.


Line up the holes between the Connector Bar and the Feet. Make sure the recess for the head of the Bolt is facing outwards.

CAUTION: The insert on the Foot must be facing Back Deck. The bolt goes into Foot catching the insert on the back side of Foot.

Use four Bolts (60mm) and bolt it in place.

4B Assemble the Bungies under the Seat Deck.


Screw the Bungies to the side of the two inner rails. Fix the lower end of the Bungie chord first, then stretch the Bungie over the Connector Bar. Fix the top end.

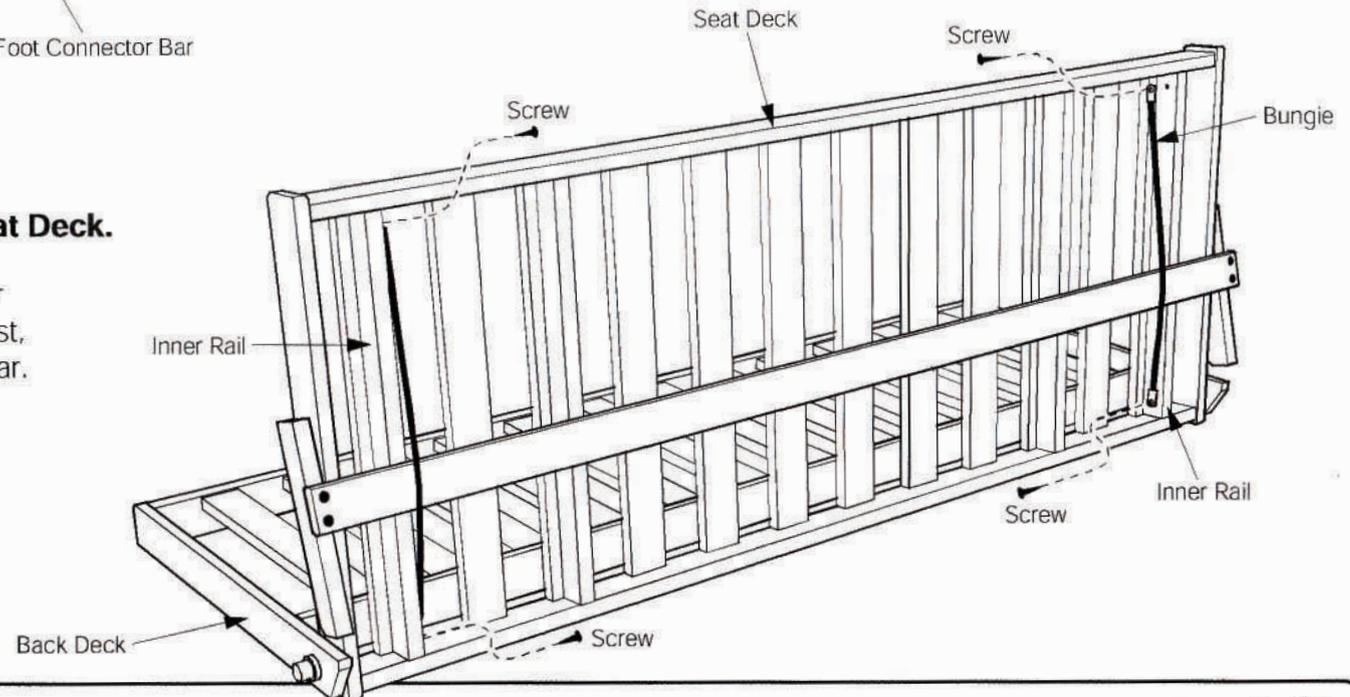


Strata Furniture: Carriage Body

CAR 0705

5A Fit the Seat and Back Decks to the Frame.

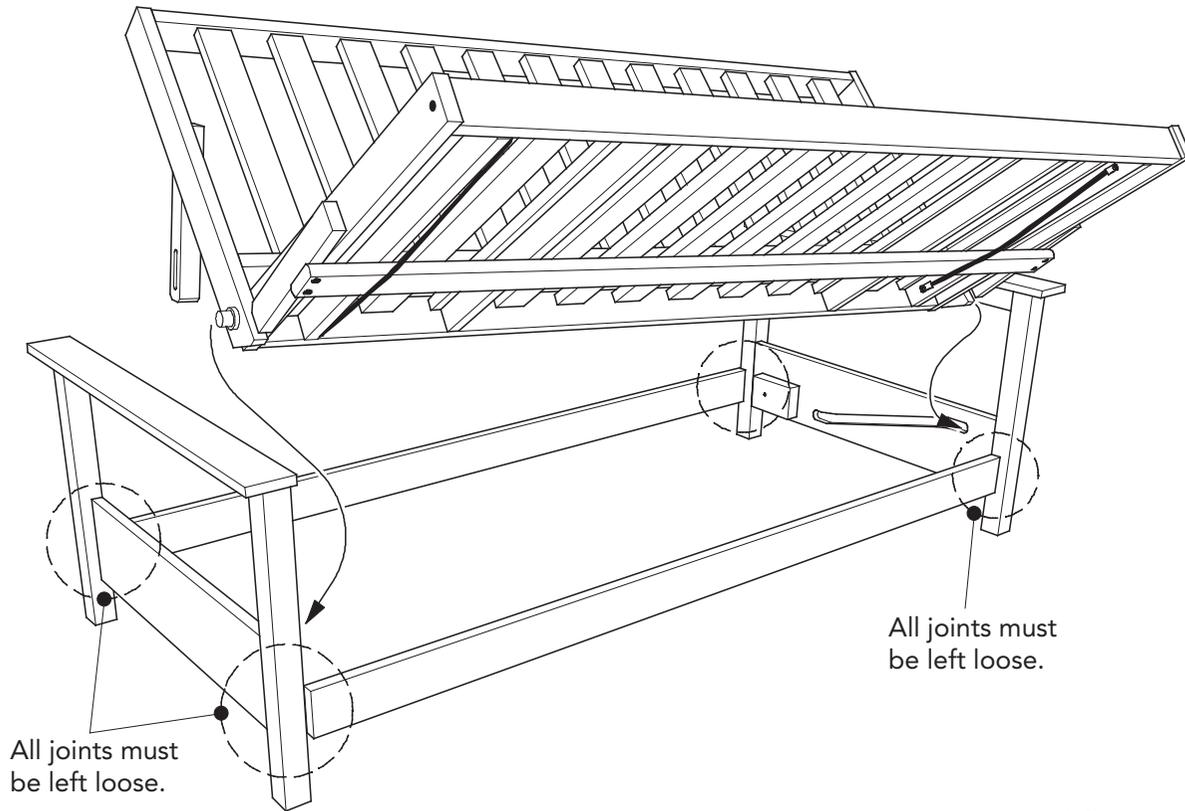


Insert the decks into the partially completed frame. This is where a helper may be useful.

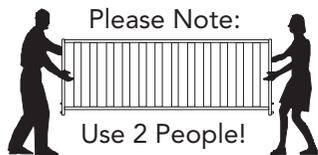


When the Plastic Runners are in the grooves in the Arms, slide the assembly towards the back of the frame.

5B Tighten all the Bolts.

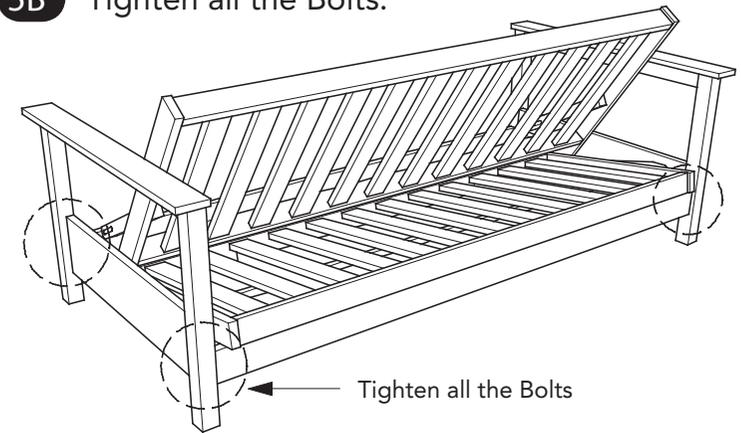


5C Connect the Advance Arms to the Arms.

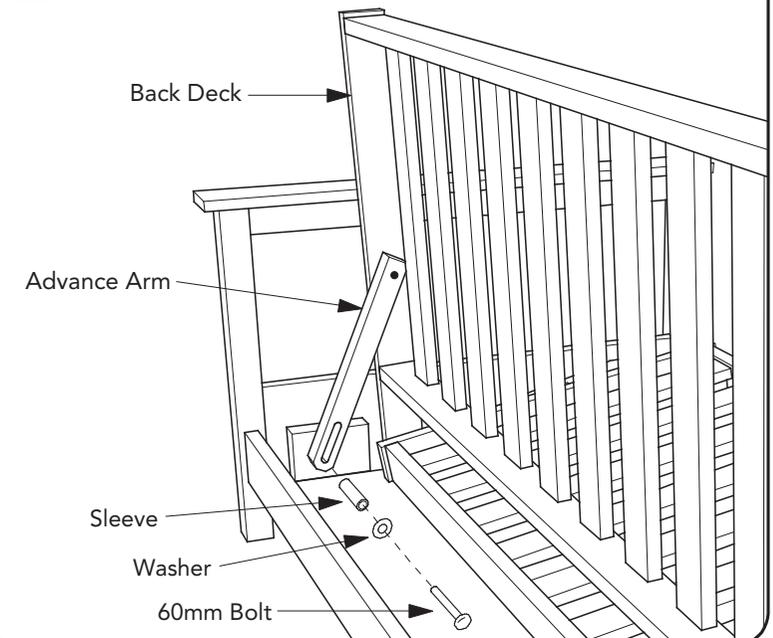

Strata Furniture: Carriage Body

CAR 0705


6A Fit the Strap to the Back Deck.

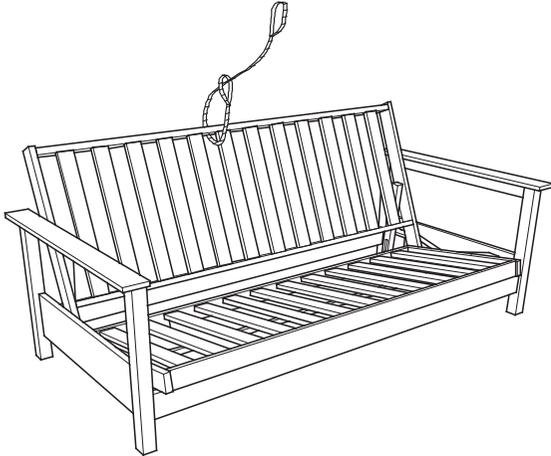

6B Fit the Wood Buttons to the Arms.

Finally, when the frame is fully assembled, make sure all the bolts are secure.

Pust fit or lightly tap the Wood Buttons into the bolt holes on the Arms.

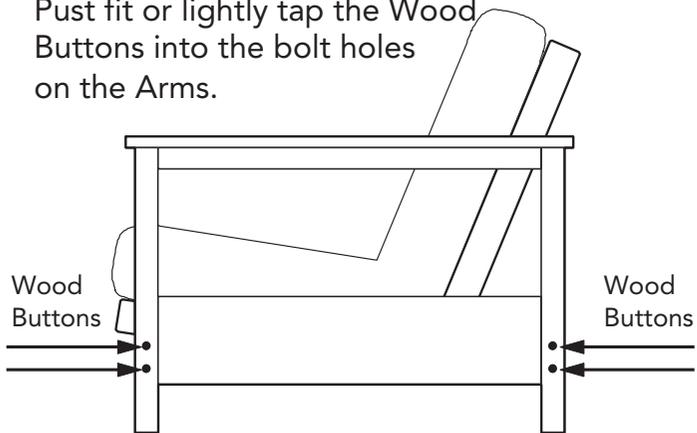

Operating Instructions: To convert into couch position:

- Remove any pillows and other obstructions. Reach to the back and lay the strap on top of the mattress.
- Lift up the seat deck into a vertical position.
- Resting seat deck on your hip, push the foot connector down all the way so that the foot connector touches the side rail - It is Very Important that the feet are in proper position - see diagram.



- With one hand lightly push the seat deck down and with other hand pull the back using the Strap, making sure that the mattress clears back rail. Push the seat deck in all the way.
- DO NOT FORCE - the frame should operate easily.

Operating Instructions: To convert into bed position:

- Lift up the seat deck into a vertical position.
- Resting seat deck on your hip, rotate the foot connector towards you until the feet are fully extended.
- Set the frame down gently.

Note: Never lift the frame by the arm caps - Always lift from the bottom of the arms.