



atlanticfurniture.com

# MADISON MURPHY BED

ATLANTIC

## QUEEN

### ASSEMBLY INSTRUCTIONS

Before assembling your Murphy bed, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact Atlantic Furniture at customerservice@atlanticfurniture.com or 1-800-955-3726





Phillips screwdriver



Customer supplied




Adult assembly

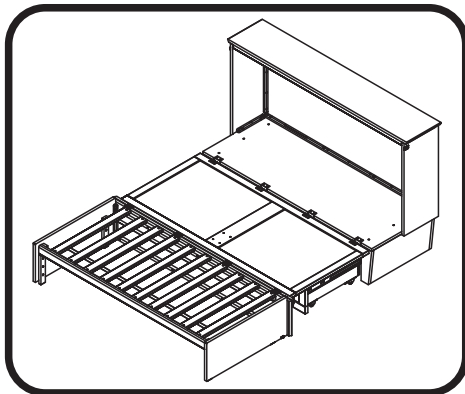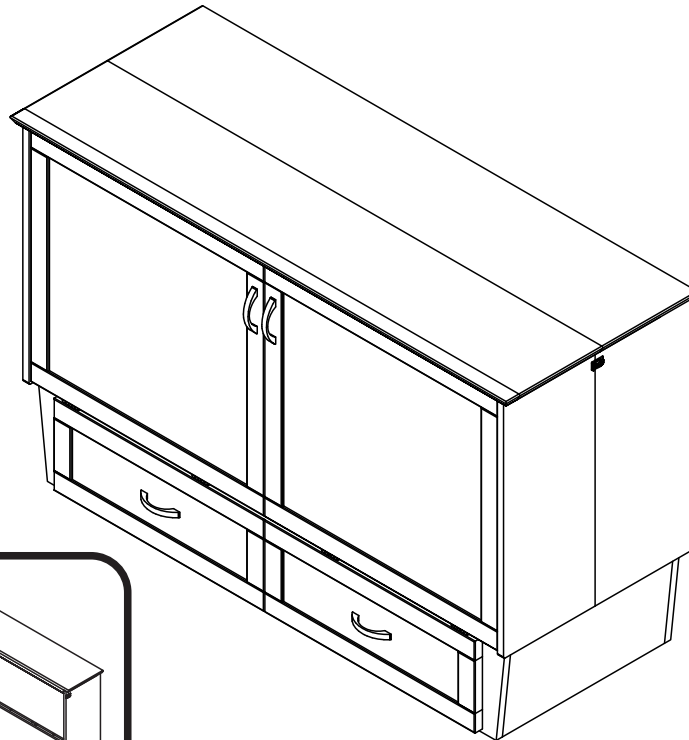


**PO :**

#### HARDWARE


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.




- A** Wood dowel - 8 pcs  
Spare - 1 pc



- B** JCB M6 X 25mm - 8 pcs  
Spare - 1 pc



- C** JCB M6 X 15mm - 8 pcs  
Spare - 1 pc




- D** Wood screw 1" - 24 pcs  
Spare - 2 pcs



- E** Metal pull - 4 pcs



- F** Metal pull screw 25mm - 4 pcs  
Spare - 1 pc



- G** Metal pull screw 40mm - 4 pcs  
Spare - 1 pc



- H** Washer - 16 pcs  
Spare - 1 pc  
Adjust quantity as needed.



- I** Allen wrench - 1 pc  
Spare - 1 pc




atlanticfurniture.com

# MADISON MURPHY BED


ATLANTIC

## PARTS LIST

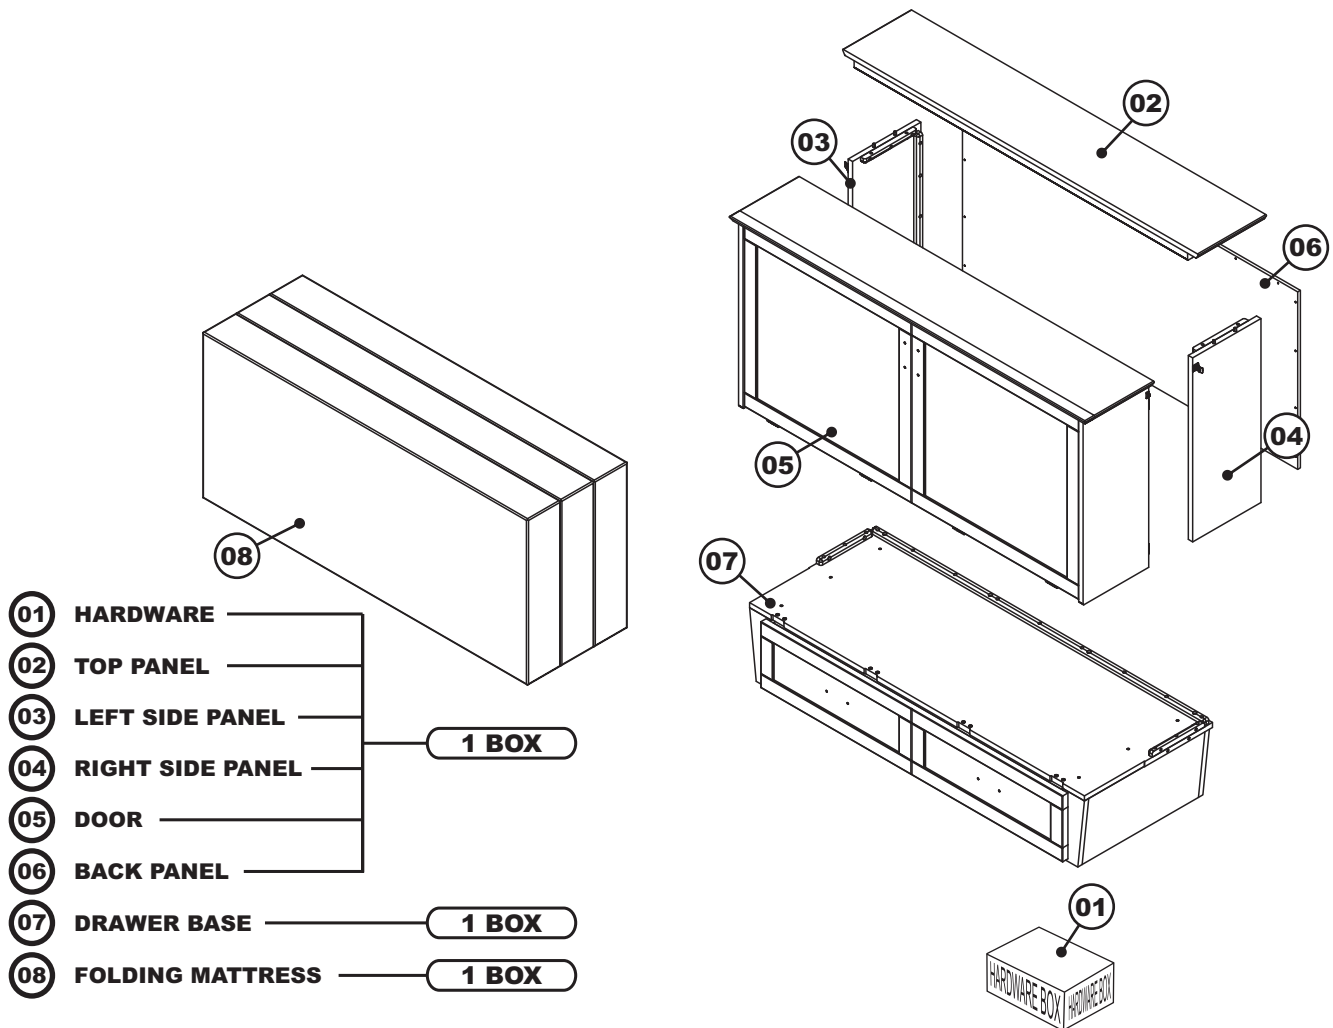


### STEP 1

Insert all wood dowels (A) into the locator holes on (03)(04) and (07) as shown below.

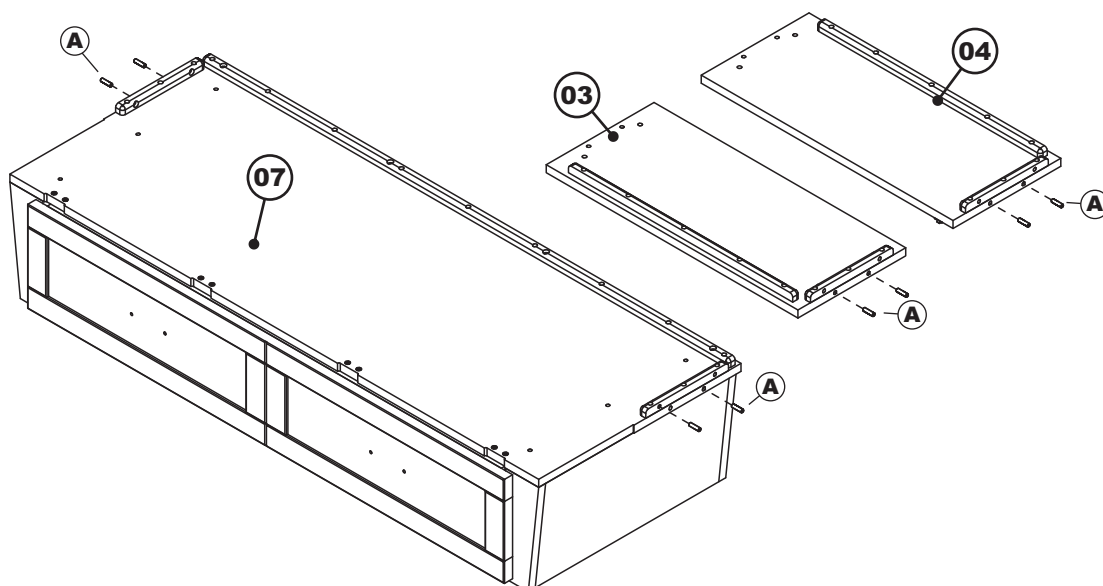

Adult assembly

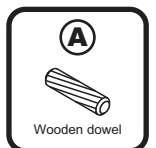

Wooden dowel




atlanticfurniture.com

## MADISON MURPHY BED

ATLANTIC



### STEP 2

Attach left and right side panels (03) and (04) to the drawer base (07) as shown below. Using JCB (B) tighten with Allen wrench (I)

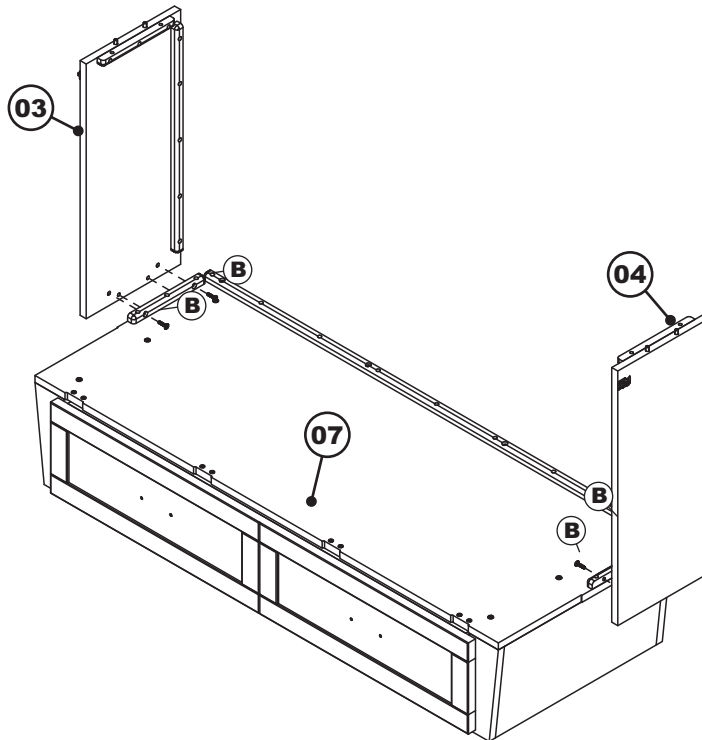

### STEP 3

Attach top panel (02) to the side panels as shown below. Using JCB (B), tighten with Allen wrench (I).

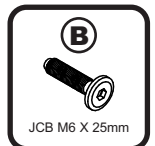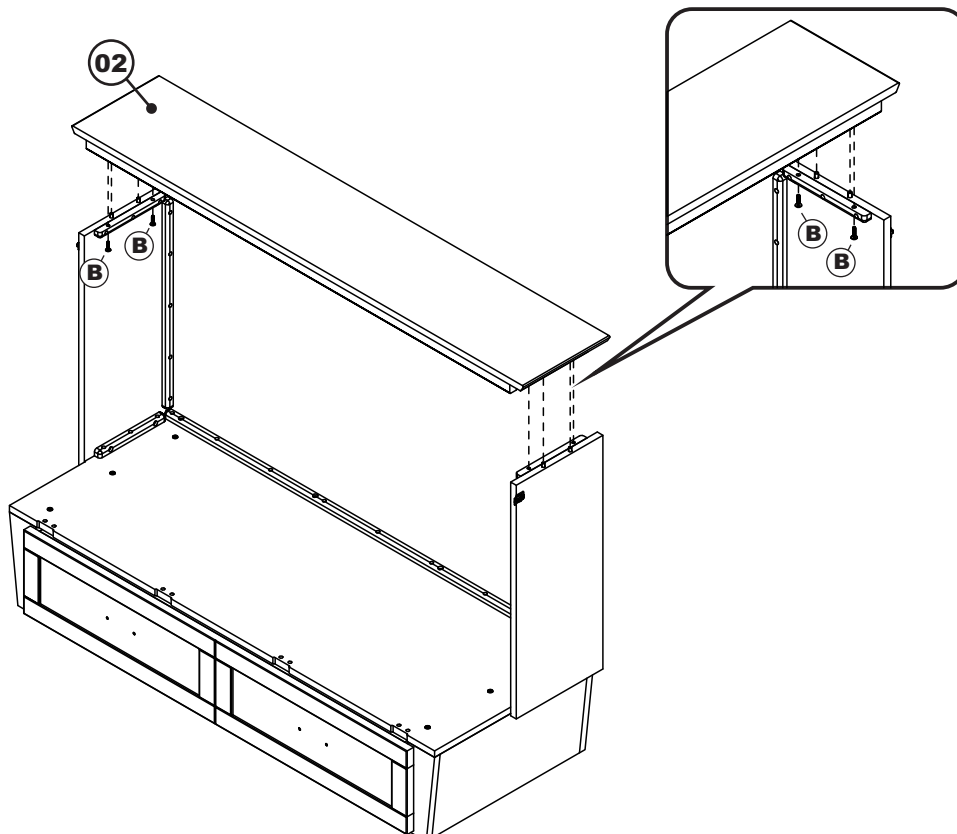





atlanticfurniture.com

# MADISON MURPHY BED

ATLANTIC



## STEP 4

Install metal pull (E) to the locator holes on (05) as shown below. Using metal pull screw (F) and washers (H) tighten with Phillips screwdriver (customer supplied).

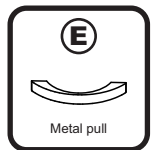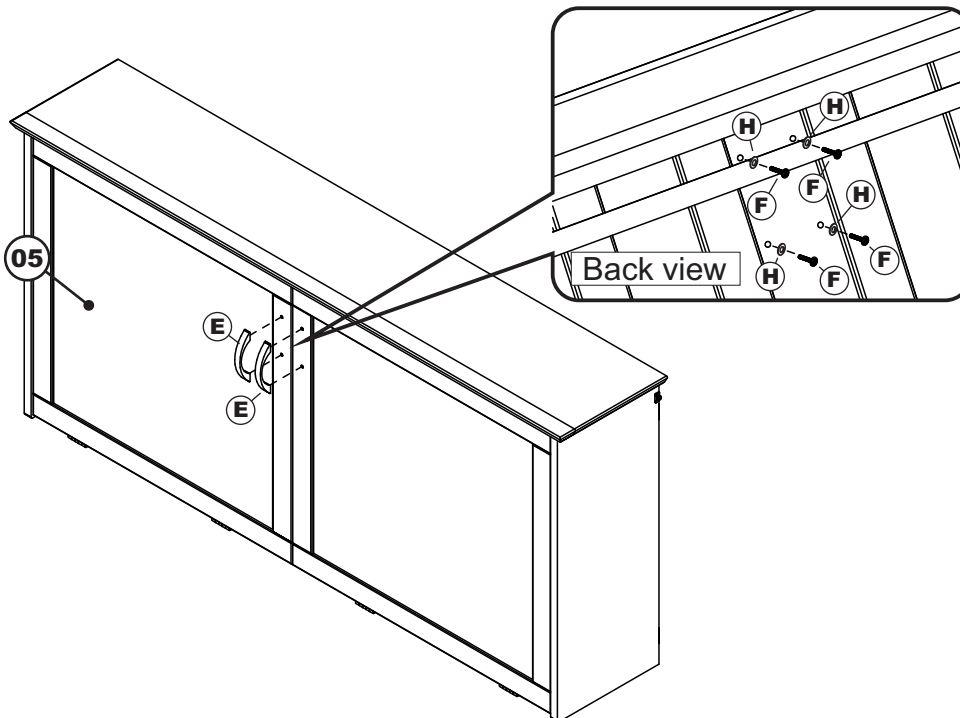

## STEP 5

Pull out drawer base as shown below. Install metal pull (E) Using metal pull screw (G), and washers (H). Tighten with Phillips screwdriver (customer supplied).

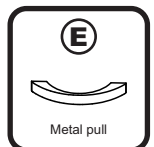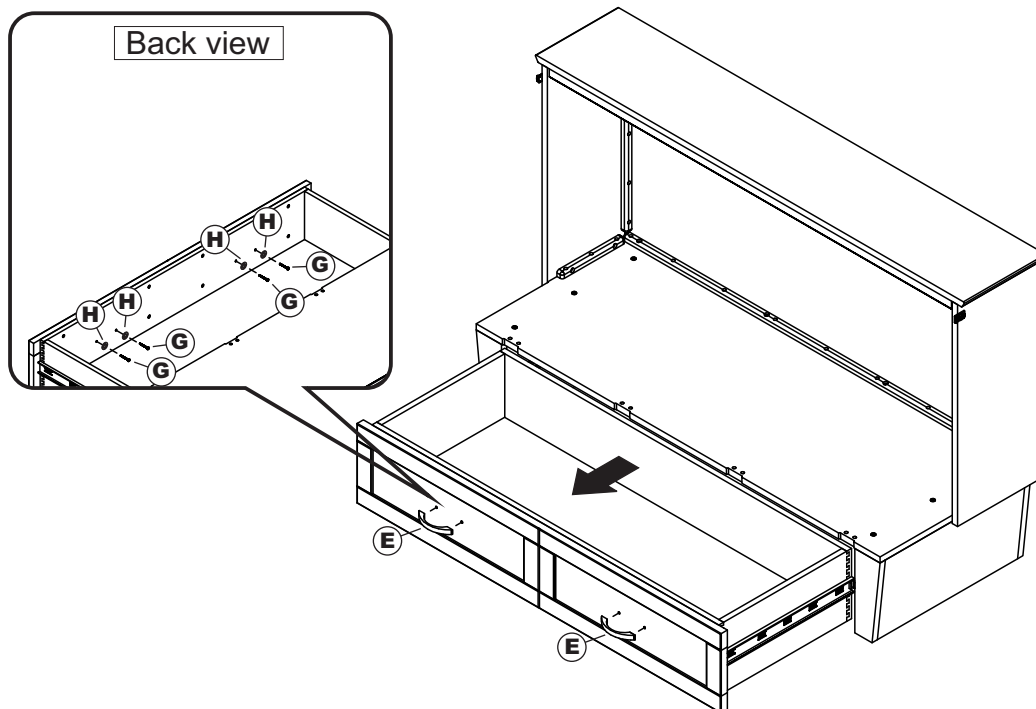





# ATLANTIC

Lay the door as shown below. Using JCB (C) tighten with Allen wrench (I).  
Note: Be sure to align door with side panels in this step.

lift up and lay the door as shown below.

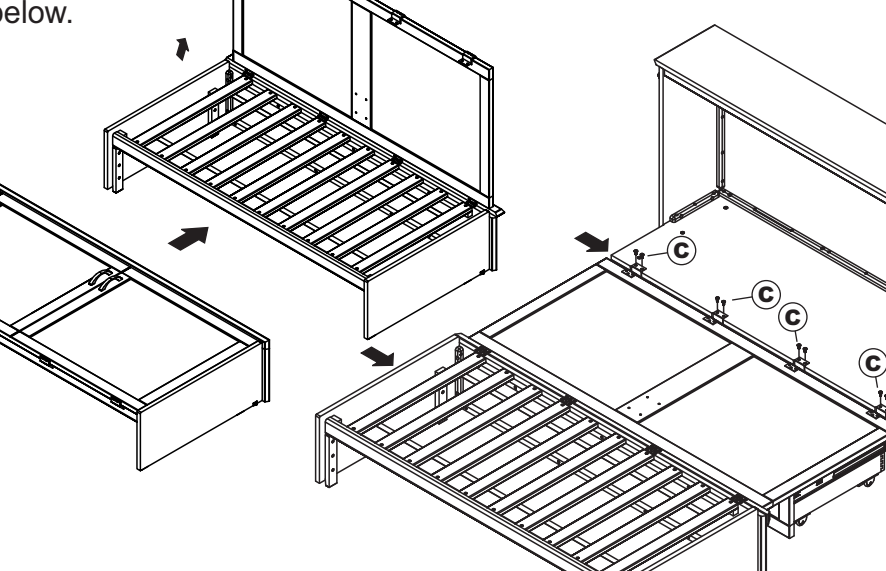


The diagram illustrates the assembly of the bed frame. It shows the headboard and footboard being attached to the slatted base. Arrows indicate the direction of movement for the headboard and footboard. The footboard is shown being lowered into place, with four screws (labeled 'C') being used to secure it to the base frame.

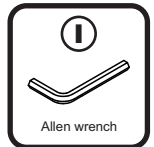


① Lift the door and fold as shown below.


2 Lift the door and latch to side panel as shown below.

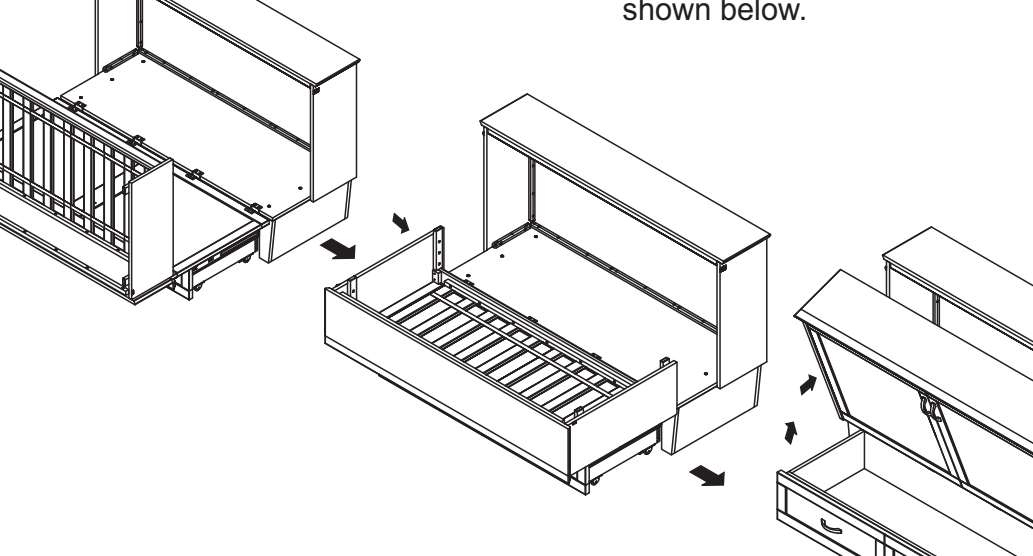

**STEP 8** Push the door closed and latch both sides as shown below.

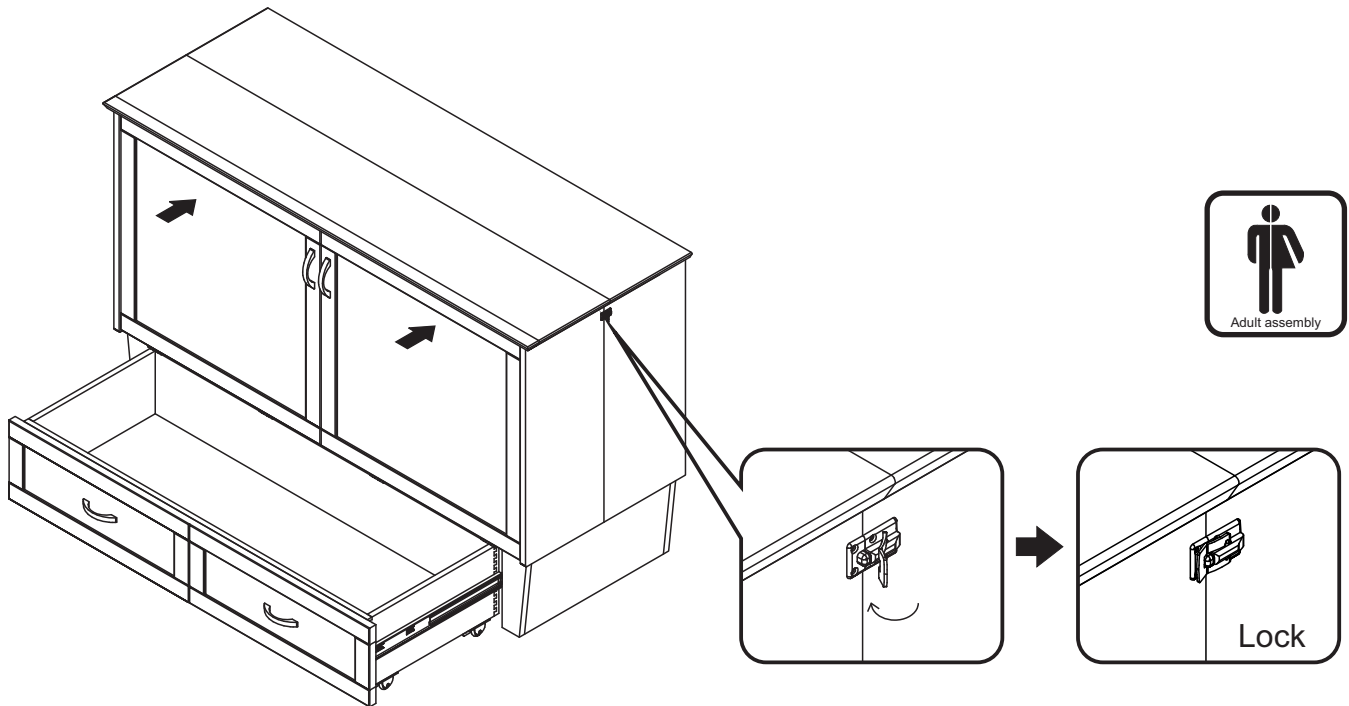

**STEP 9** Attach back panel (06) to cabinet assembly as shown below. Using wood screws (D), tighten with Phillips screwdriver (customer supplied ).

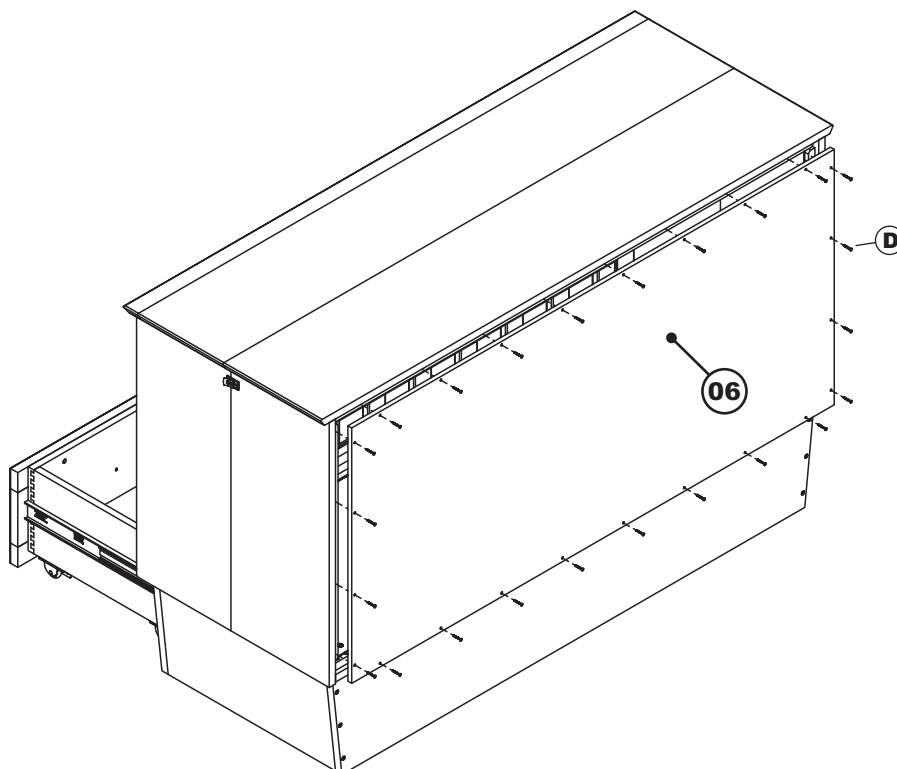




atlanticfurniture.com


## MADISON MURPHY BED

ATLANTIC

**STEP 10** Pull the drawer out fully. Unlatch the door and open, folding down as shown.

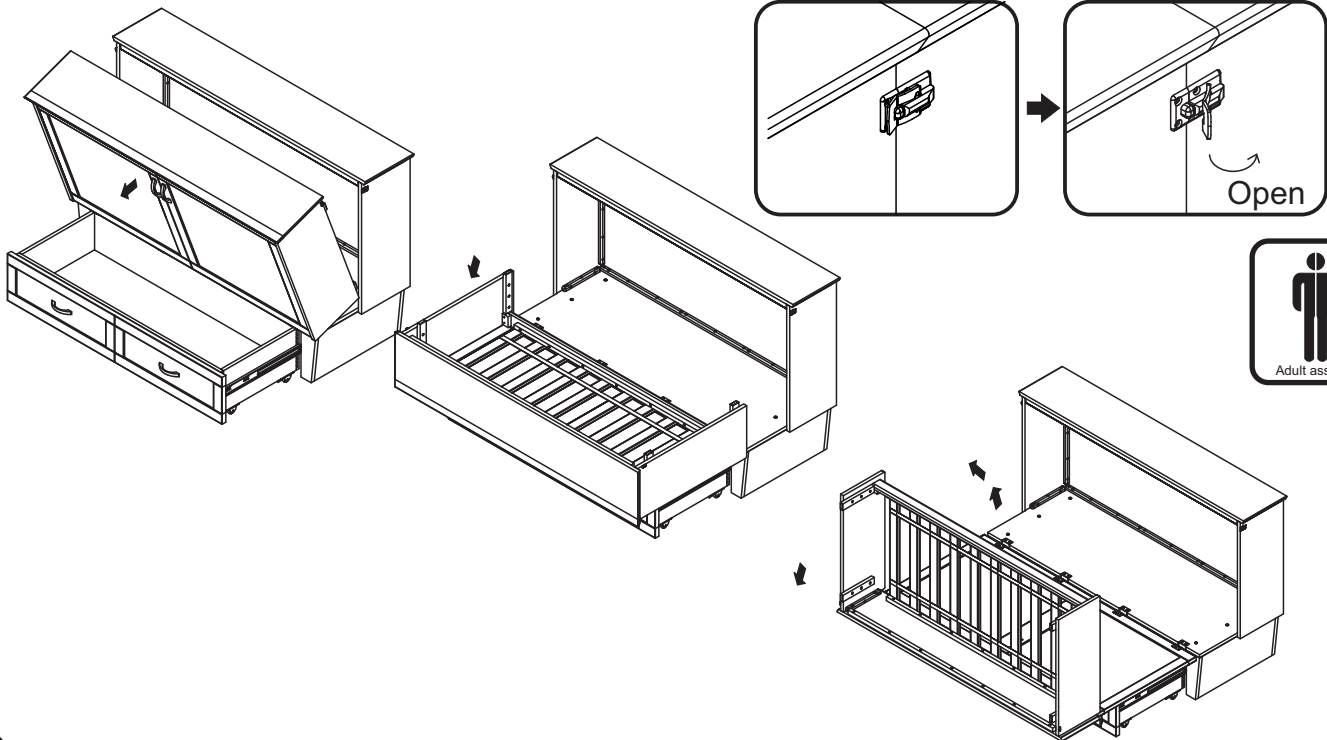

**STEP 11** Install folding mattress (08) to the bed as shown below.

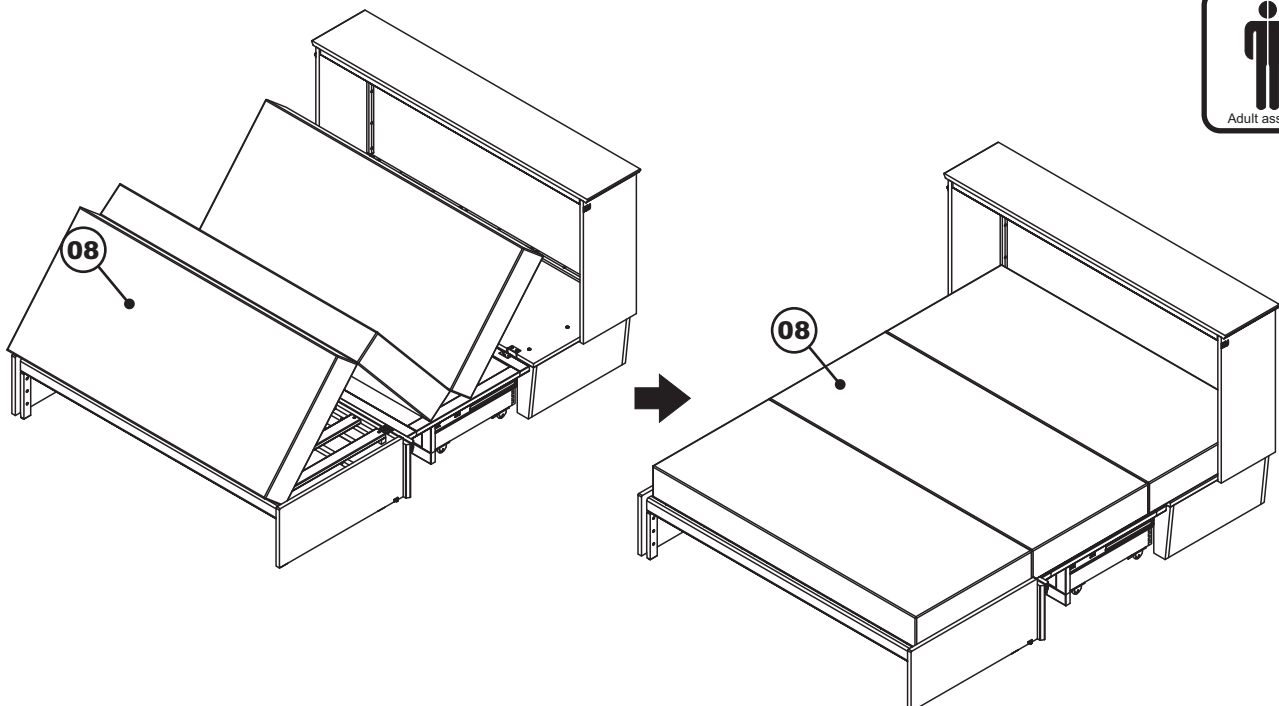

### Congratulations!

Your Murphy bed is now ready for use.

We recommend that you recheck that all screws are tight, and that all parts are secure before use to ensure lasting Safety.