



1

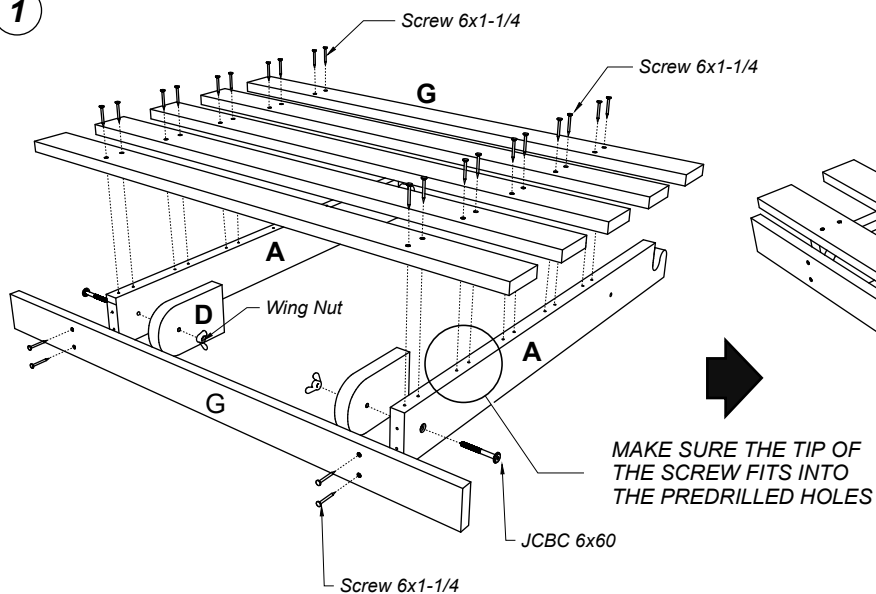


2


NOTE :
The slats will need to be aligned on top of component A/B/C on either side, with the predrilled holes directly on each respective rails, then screw on individually

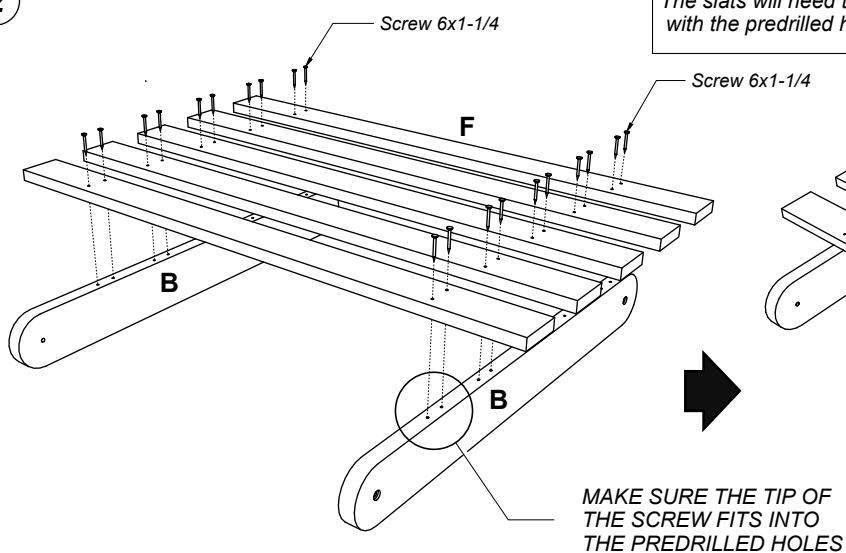


3

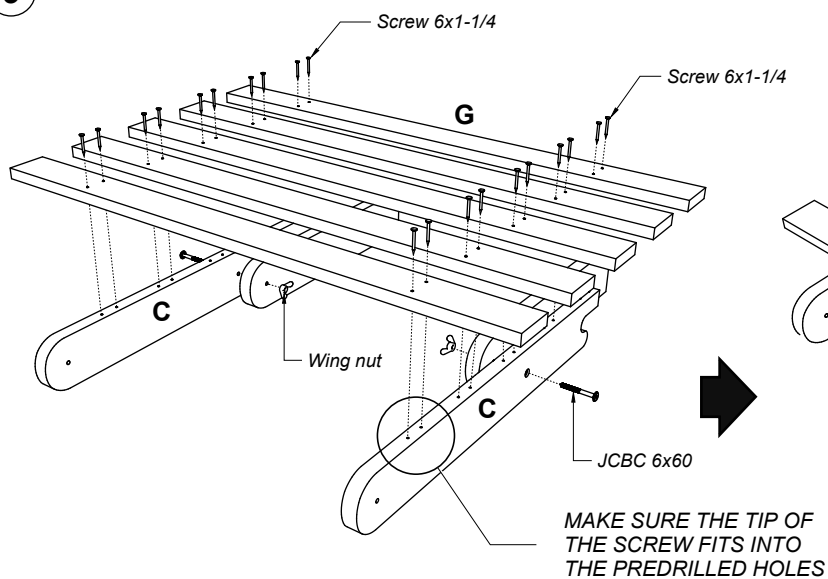



- 4 Turn the frame upside down. Align and connect the Seat Deck, Middle Deck and Back Deck, then install Part H.

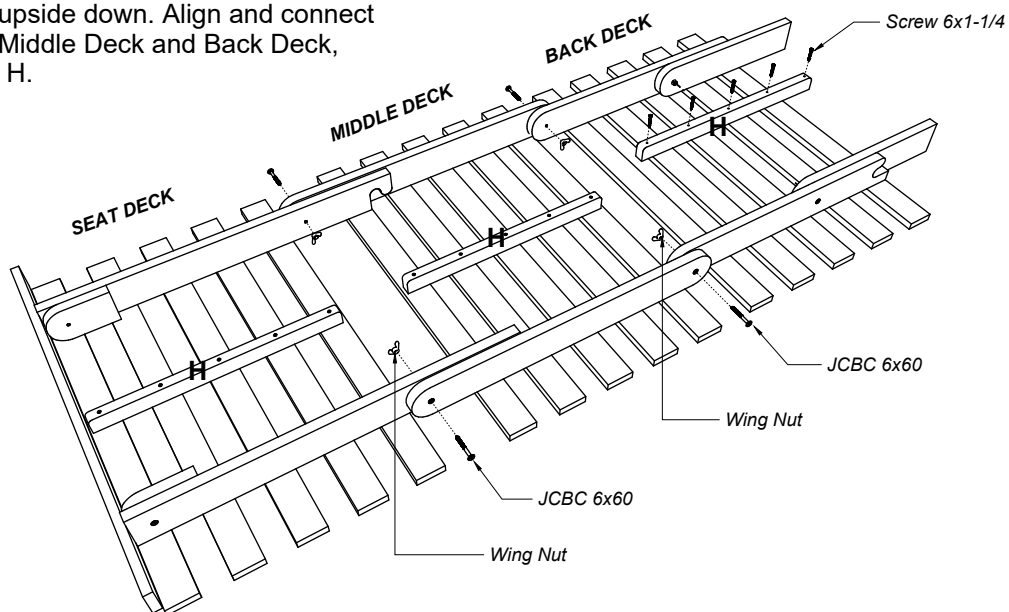


- 5 Assembly is complete.

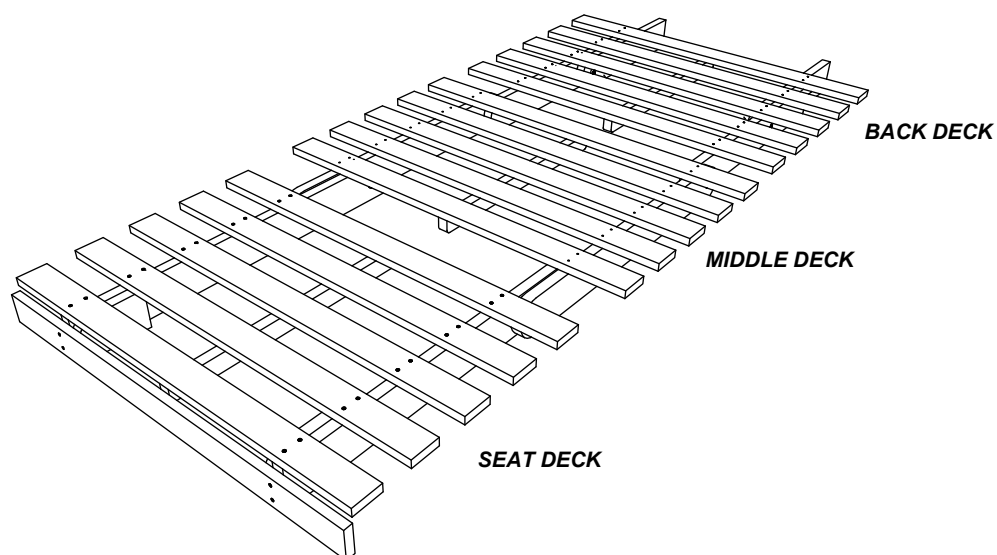







POSITION

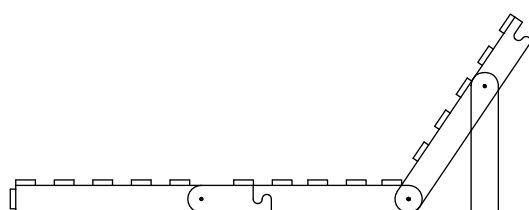

LOUNGER POSITION

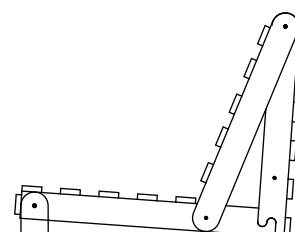

CHAIR POSITION

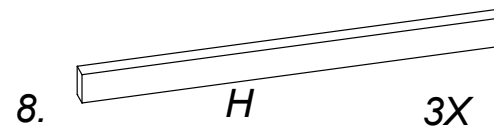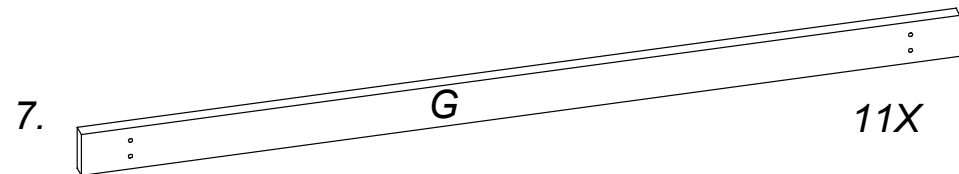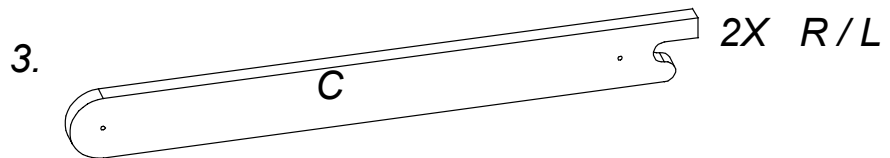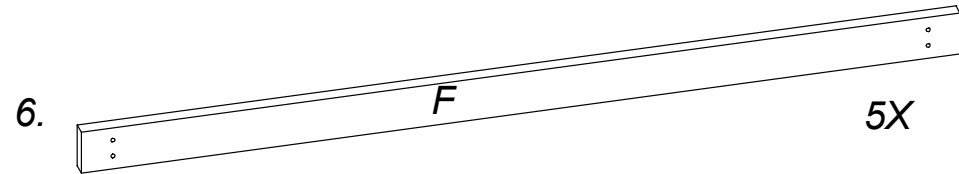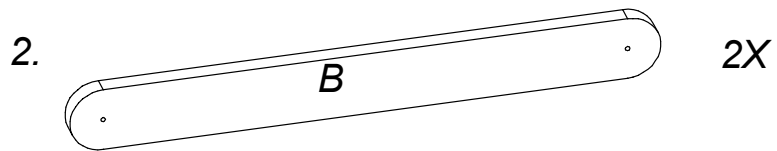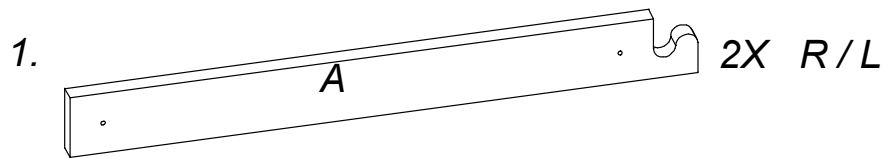

1. JCBC 6 x 60 = 8



2. WING NUTS M6 = 8




3. SCREW 6 x 1 1/4 = 80



4. L Key 6x70 = 1

From Bed Position to Lounger Position

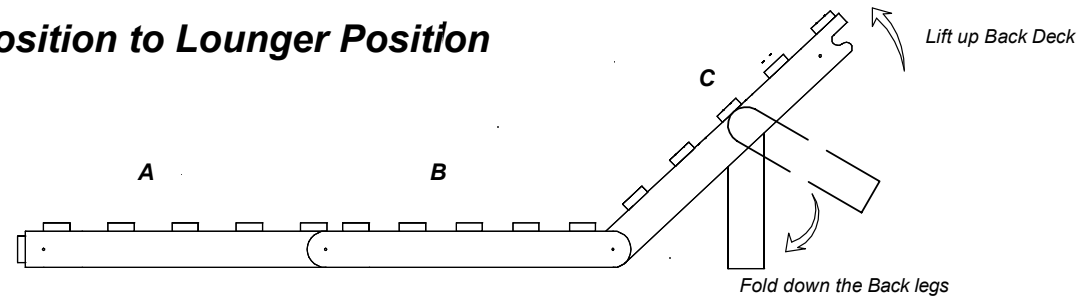

From Lounger Position to Chair Position

